


CSF 210 Fan Installation

CSF 210 should only be installed as an exhaust fan, so that undesirable atmosphere in the crawl space cannot be accidentally forced into the building.

Locate the fan in a central location between passive vents, if possible. If you do not have multiple passive vents, please call SPSF to discuss options.

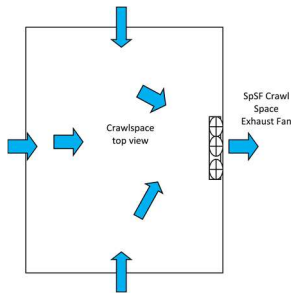

DON'T TOUCH THE FAN BLADES WHEN THE FAN IS PLUGGED IN!

Never draw make up air for CSF from inside the house above the crawl space, especially if you have fired appliances (heaters, hot water heaters, etc) or fireplaces. Always use adequate foundation vents.

For best results, in addition to ventilation with CSF –

- Stop all water leaks and drips;
- Insulate cold pipes and drains to prevent condensation;
- Properly seal and insulate any HVAC ducting, and
- Lay a vapor barrier on the ground.

