

# *Koger* **SUNSHADES™**




## Installing the SMALL TAPE-ATTACH Koger SunShade™

The following items should be included in your Koger SunShade™ Kit:

- (1) Center Channel
- (6) Aluminum Bows
- (2) Shade Fabrics
- (1) Tube of glue

Top View Of Canopy Looking Down

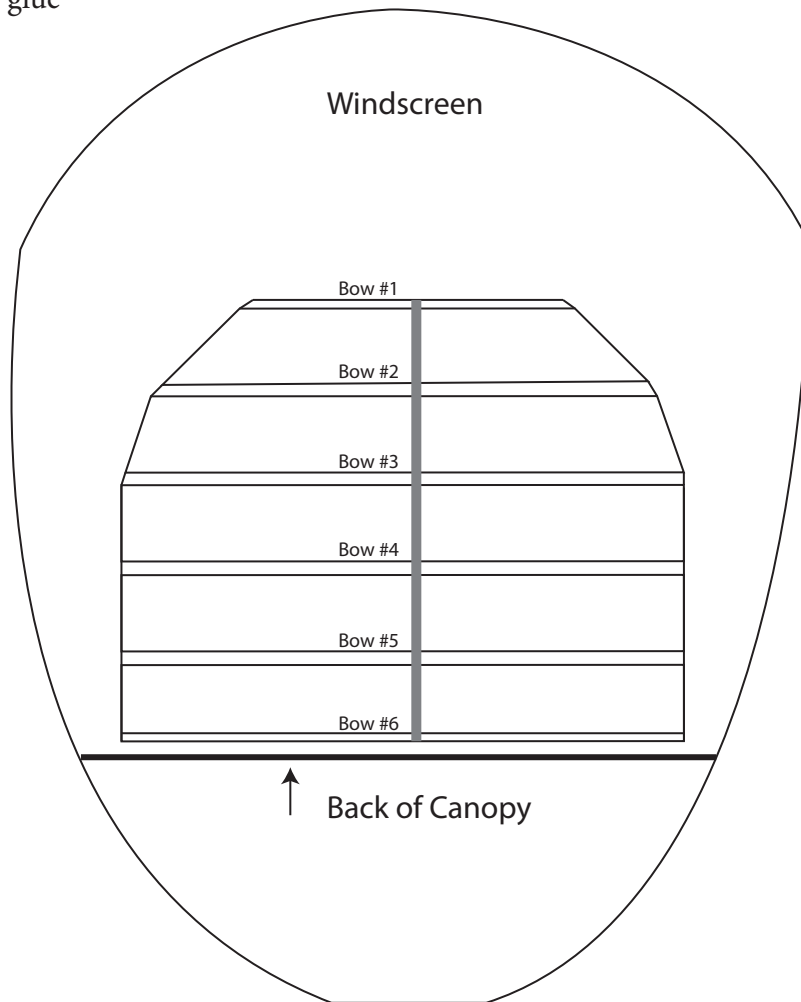


**Thank you for buying the Koger SunShade™ .**

**Contact us: [kogersunshades.com](http://kogersunshades.com)  
Email: [kogersunshades@hotmail.com](mailto:kogersunshades@hotmail.com) Office/  
Cell Phone: 515-230-2700**

## Koger SunShade™ Installation Instructions:

*This style of sunshade will fit most side-by-side seating planes with large bubble type canopies. It is necessary to fit the shade precisely to the canopy of each individual aircraft.*

1. Place a strip of electrical tape on the outside of the canopy, down the centerline, by sighting from the prop to the tail.
  2. Fit the aluminum channel precisely to the canopy. Place the channel on top of the electrical tape (on the outside of the canopy). The channel can be bent by hand to follow the canopy contour exactly. The channel must fit the shape of the canopy exactly so that there will not be any pressure to cause the channel to pull the tape away from the canopy.
  3. Inside the canopy, clean the area under the tape using a cloth dampened lightly with denatured alcohol or 3M General Purpose Adhesive Cleaner Part No. 051135-08984.
  4. Climb into the cockpit and close the canopy. While holding the channel in position mount the rear rib in the channel and check that it is straight across. This determines the fore-aft position of the channel.
- Leave at least ½" of clearance between the back of the channel and the rear of the canopy. Remove the protective covers from the double-stick tape on the channel. Using the electrical tape on the outside as a guide, press the channel into place. **Press hard on each tape segment.** Remove the electrical tape and **check the channel from above for air bubbles between the tape and canopy; press again to remove any bubbles.**
5. Mount and fit the ribs by sliding them onto the channel (they're numbered from front to back). Form the ribs so they exert a very slight pressure on the ends against the canopy. Leaving them in place will help you determine the general location of each numbered rib.
  6. Once fitted remove the ribs. On a flat surface thread the ribs into the fabric sleeves in the same order that they were fit to the canopy. The fabric rib sleeves go on top.
  7. **Place a drop of glue** on each rib & fabric at the center of the rib ( next to the plastic glider). This will glue the fabric to the rib and prevent the fabric from sliding off the ribs.
  8. Install and glue the other side fabric.
  9. Place the completed unit in the channel.
  10. Tighten the black thumb screw at the rear of the channel. The front larger (white) thumb screw is then used to extend or retract the sunshade.

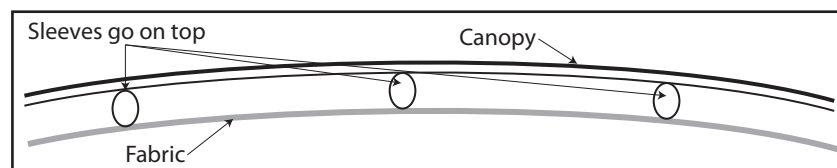

The Buyer/Installer of the Koger SunShade™ accepts full responsibility for its use.  
The manufacturer has no control over how the product will be used, and assumes no liability for its use.