


Preparing Candles & Followers

1. Seat properly sized candle **FIRMLY** and **VERTICALLY STRAIGHT** in the candlestick. Tilted candles may cause irregular burning and dripping.
2. Approximately $\frac{3}{4}$ " of **EXPOSED WICK** is recommended for efficient burning. Trim if necessary.

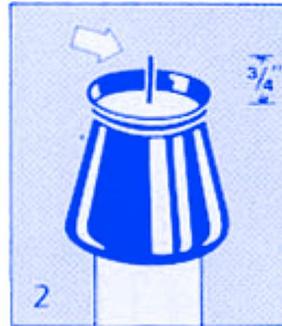

3. A candle follower must be used for the satisfactory and economical performance of your candle. Use only a follower that is the **CORRECT SIZE** for the candle diameter. A correct size follower is determined by the diameter of the candle to be used.

Before seating a follower on any candle it should be cleaned of all wax both inside and out. To seat the follower place it on the shoulder of the candle giving it a snug $\frac{1}{4}$ " turn. Visually inspect follower to insure it is straight on the candle and that a perfect seal has been achieved. A perfect seal is when all edges of the top rim, or shoulder of the candle are touching the inside of the follower.



4. Before placing candles on the altar. **STRAIGHTEN THE WICK** and pre-condition the candle by burning for at least **TWO MINUTES**.