

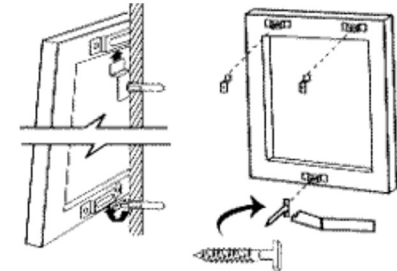



SECURE-T INSTALLATION FOR STANDARD WOOD FRAMES

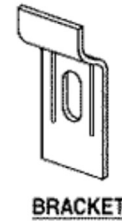

2 plates are attached to top of frame. Third plate is attached to center of the frame bottom. The brackets are screwed into wall and slide into space between top plate and frame. Brackets support frame. T screw fits through bottom plate. T shape of screw fits between lower plate and frame, locking frame. The T part of screw fits into plate only one way. You then turn T screw 1/4 turn so T shape goes across width of the plate, locking the frame. Only the T wrench can turn screw this way.
(Very wide frames might need more top plates / brackets for support)

Insert AMS Secure-T Screw into Bracket
and turn with Special Wrench to Secure Frame onto Wall

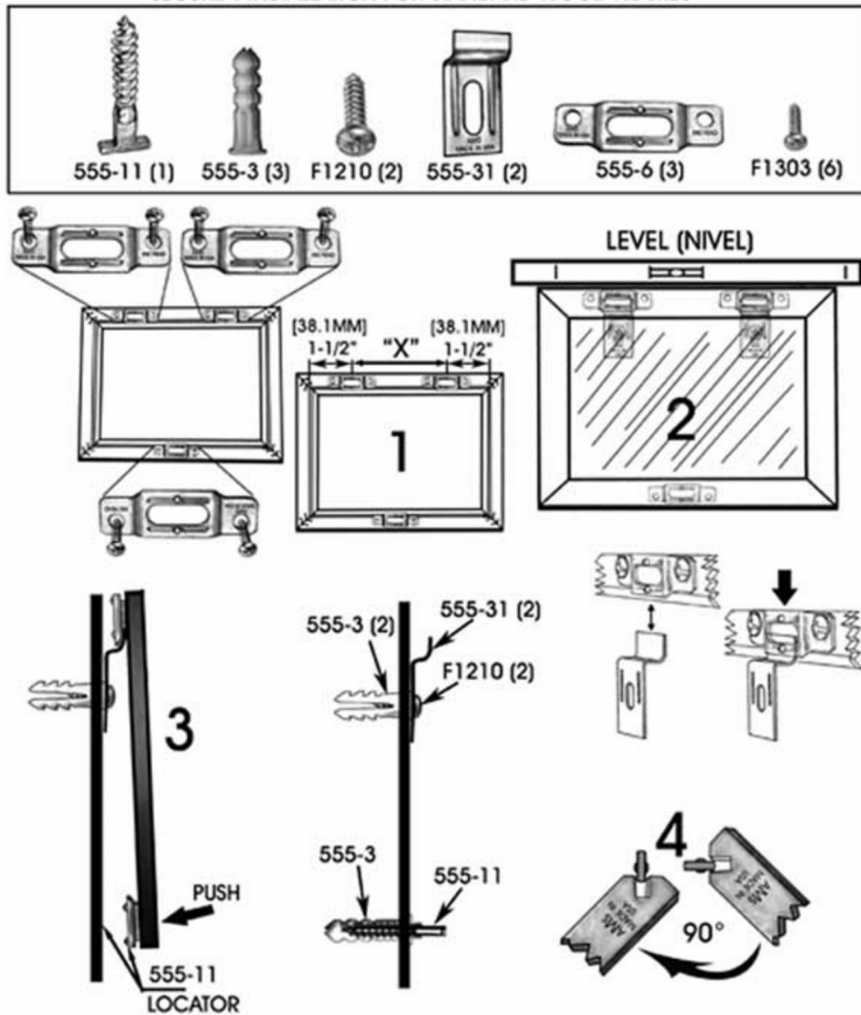