


Temporarily Permanent

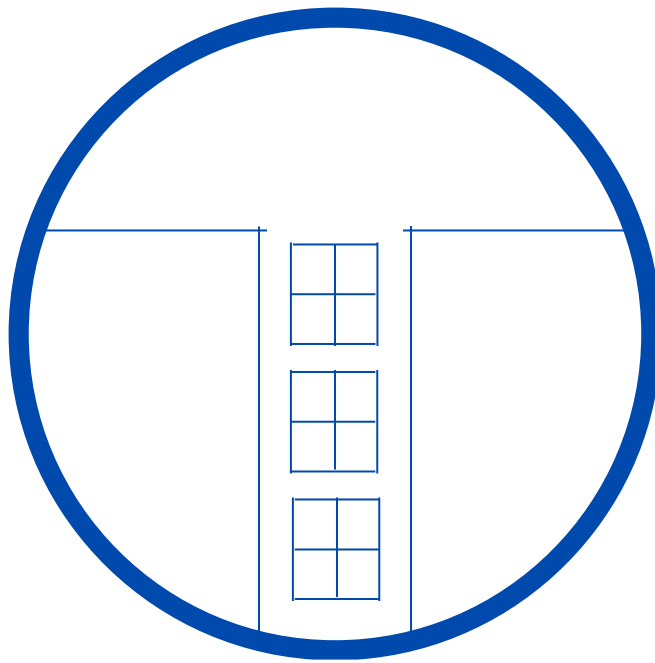


Permanent Design, Temporarily Installed

Installation Guide


Please read and follow the installation instructions and guidelines in this section. Failure to follow the recommended instructions and installation techniques may lead to possible damage to the unit or the surrounding area. This can affect warranty claims.

ATTENTION: This unit requires assembly. A minimum of two people are required for assembly, as several of the sections can be large and unstable until assembled.

You will need to provide the following tools. All other tools are included.

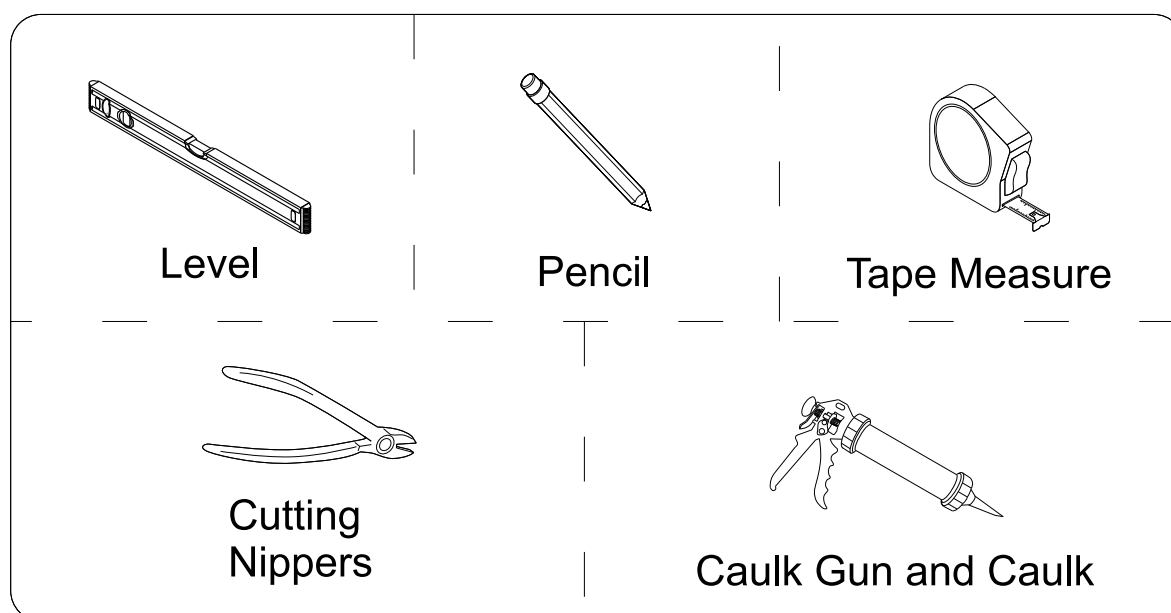

Locate the accessory box and remove the individual screw and hardware packages. Using the material manifest below , lay out all of the parts and tools in sequential order. This will aid in completing the installation quickly and efficiently.

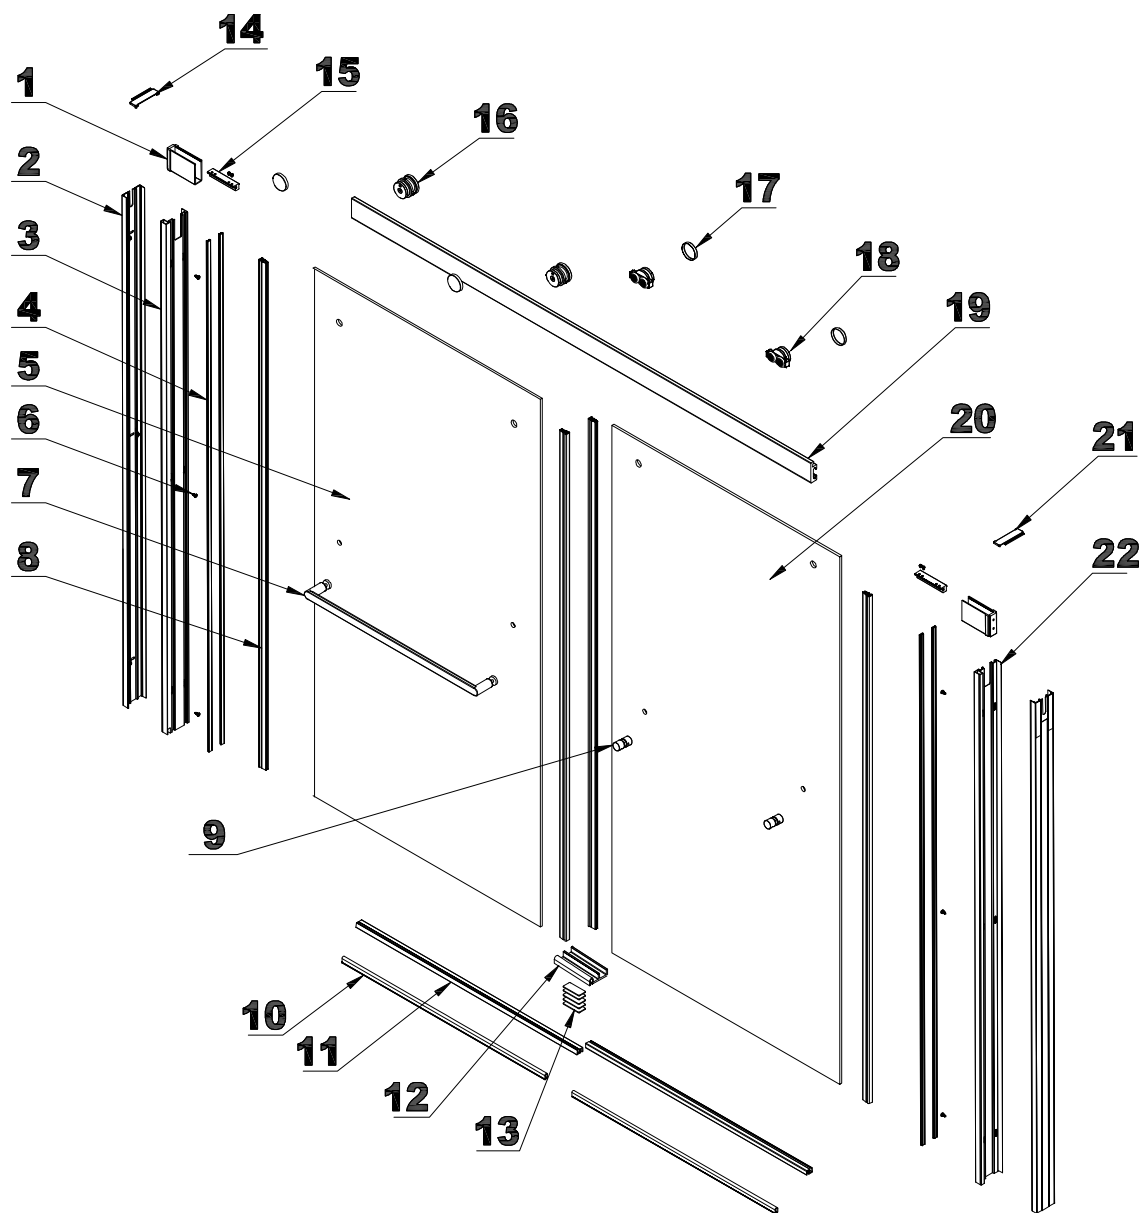


#1		2x
#2		2x
#3		1x
#4		4x
#5		1x
#6		6x
#7		1x
#8		4x
#9		2x

#10		2x
#11		2x
#12		1x
#13	PVC	5x
#14		1x
#15		2x
#16		2x
#17		4x
#18		2x

#19		1x
#20		1x
#21	R	1x
#22	R	1x
#23		1x
#24		1x
#25		1x
#26		1x
#27		2x

Step 1

Tub needs to be CLEAN and DRY before installation begins.

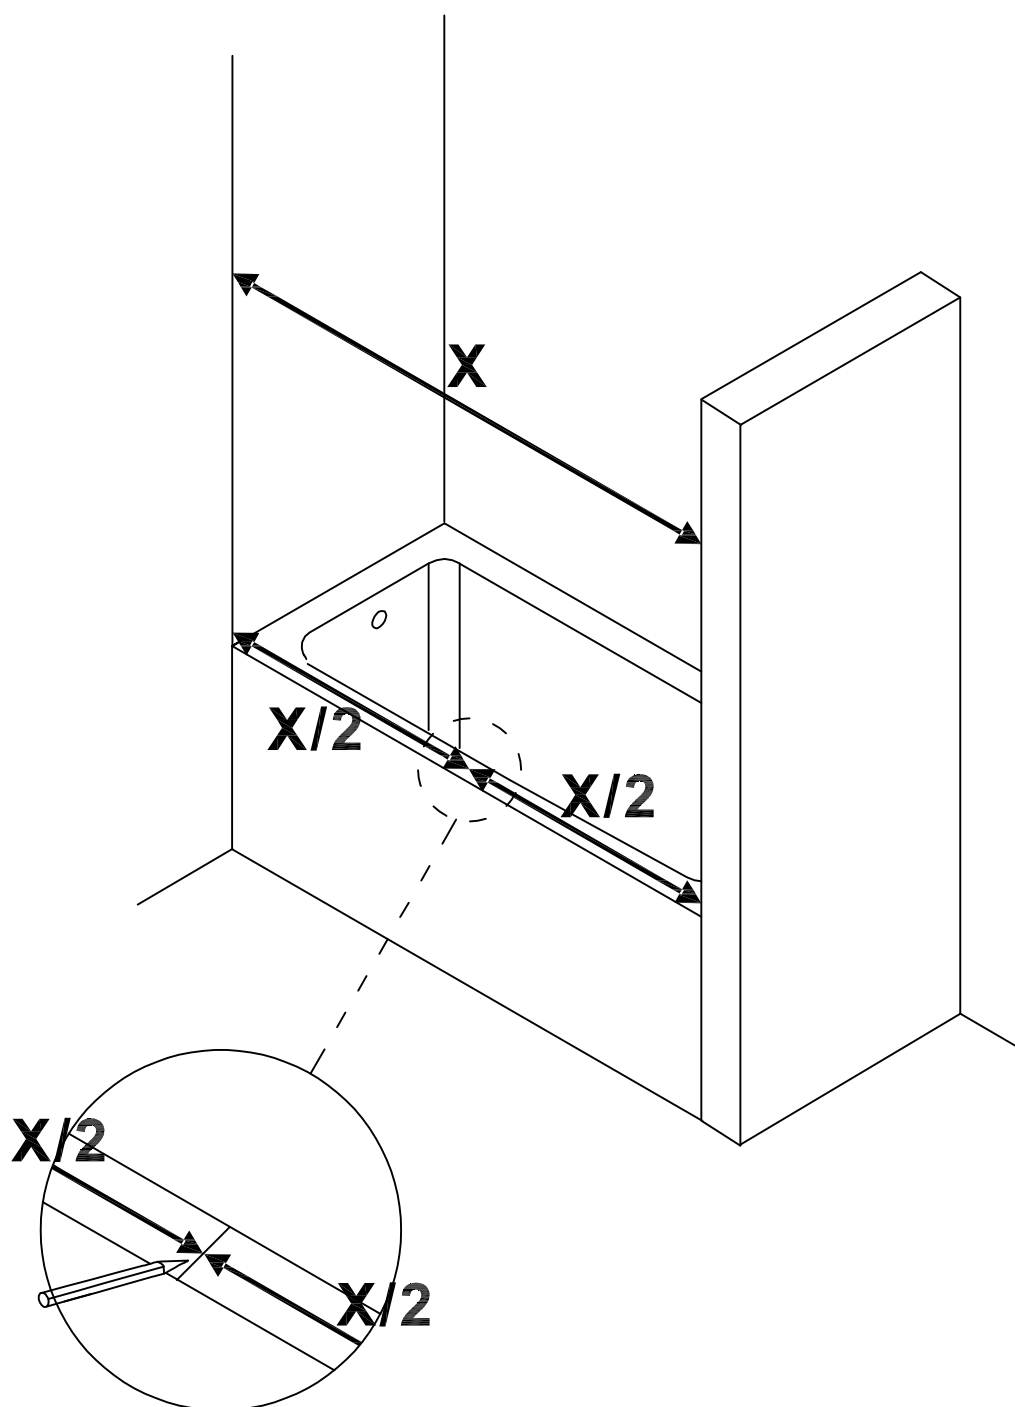


Step 2


#2



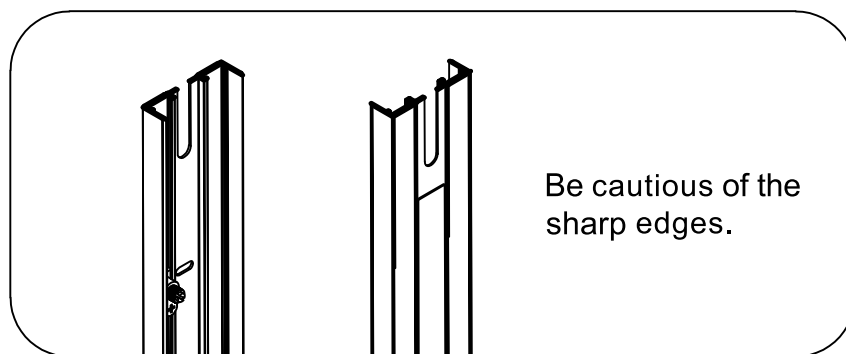




2x


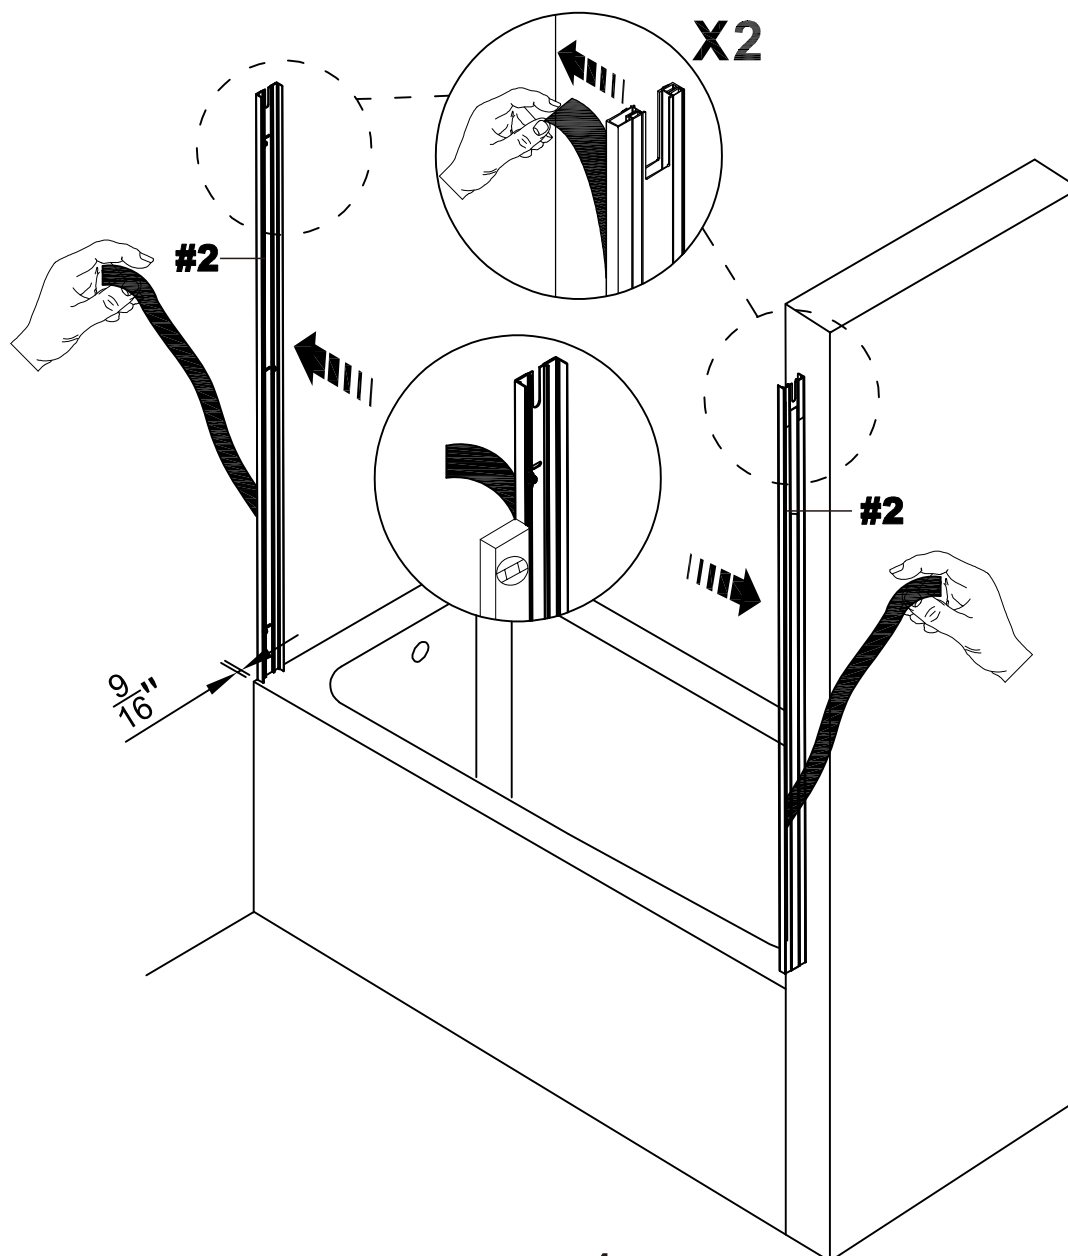


1. Peel off the adhesive tape
2. Press it to stick tightly to the wall




Step 3



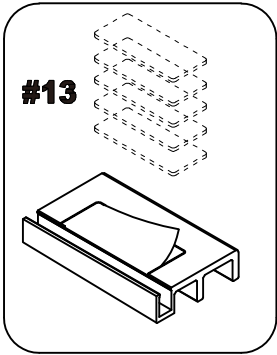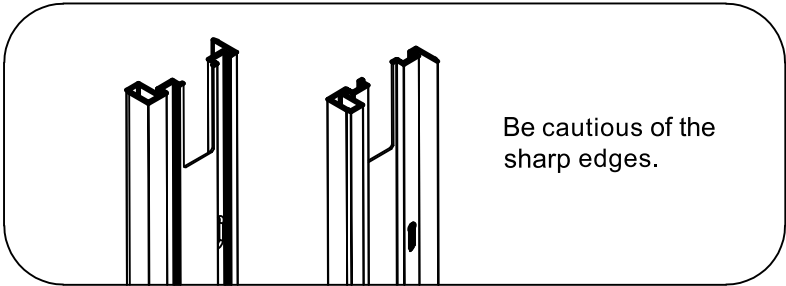

#3	 L	1x	#10	 2x
#22	 R	1x	#12	 1x
			#13	 5x

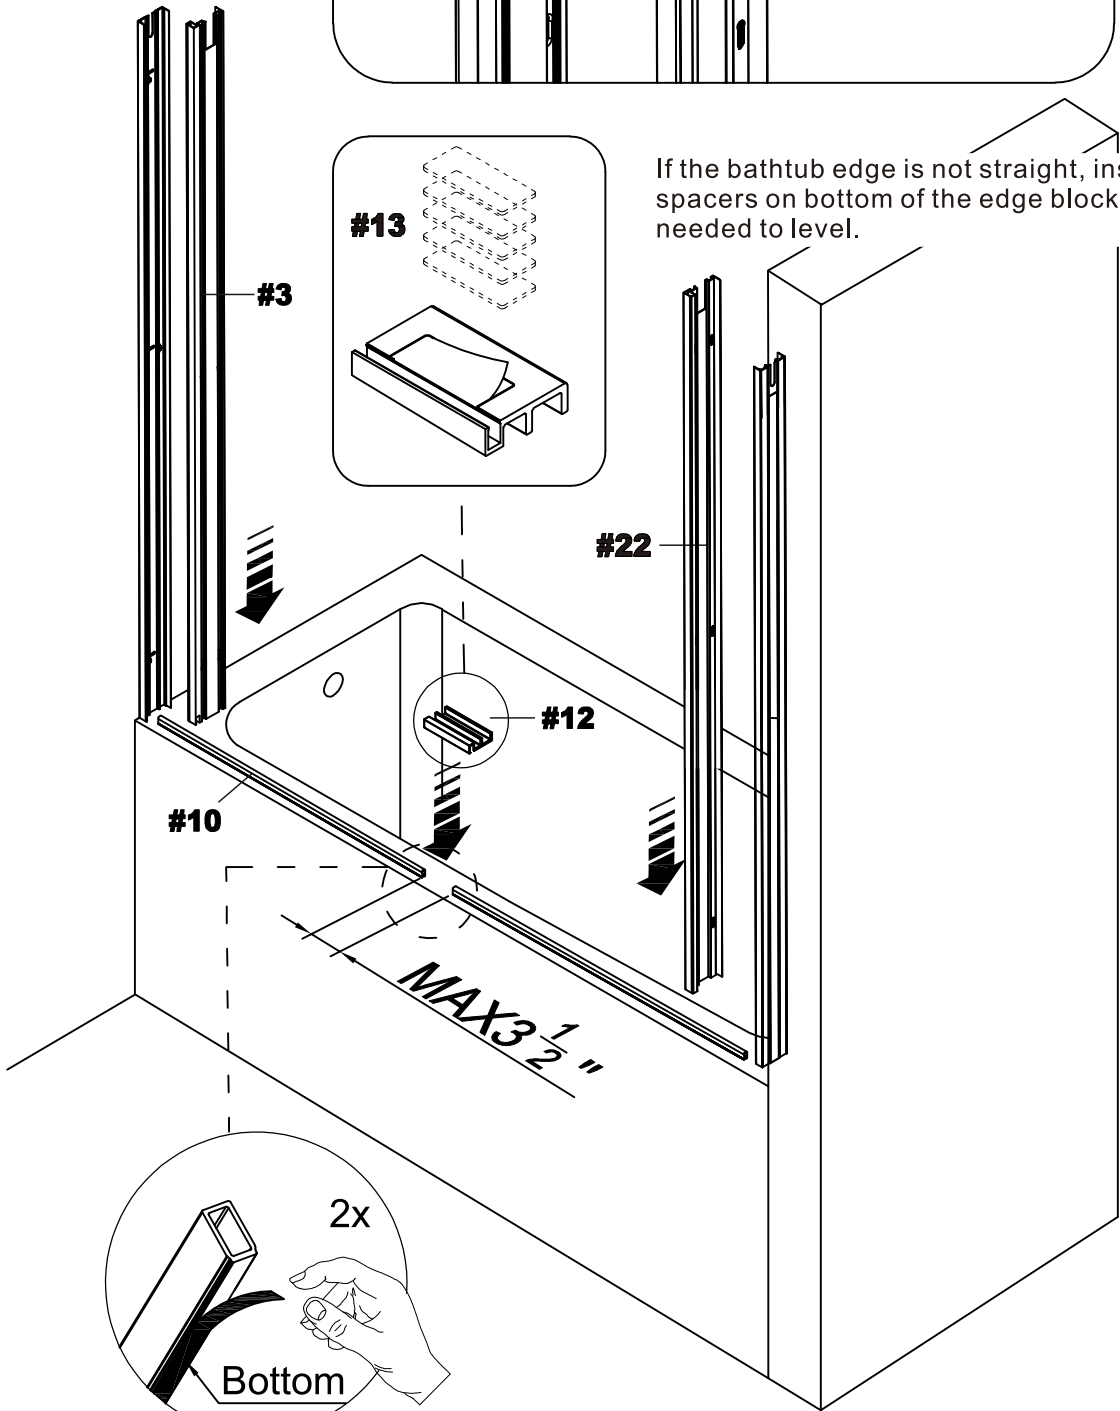


If the bathtub edge is not straight, install PVC spacers on bottom of the edge block(#12) as needed to level.






Step 4

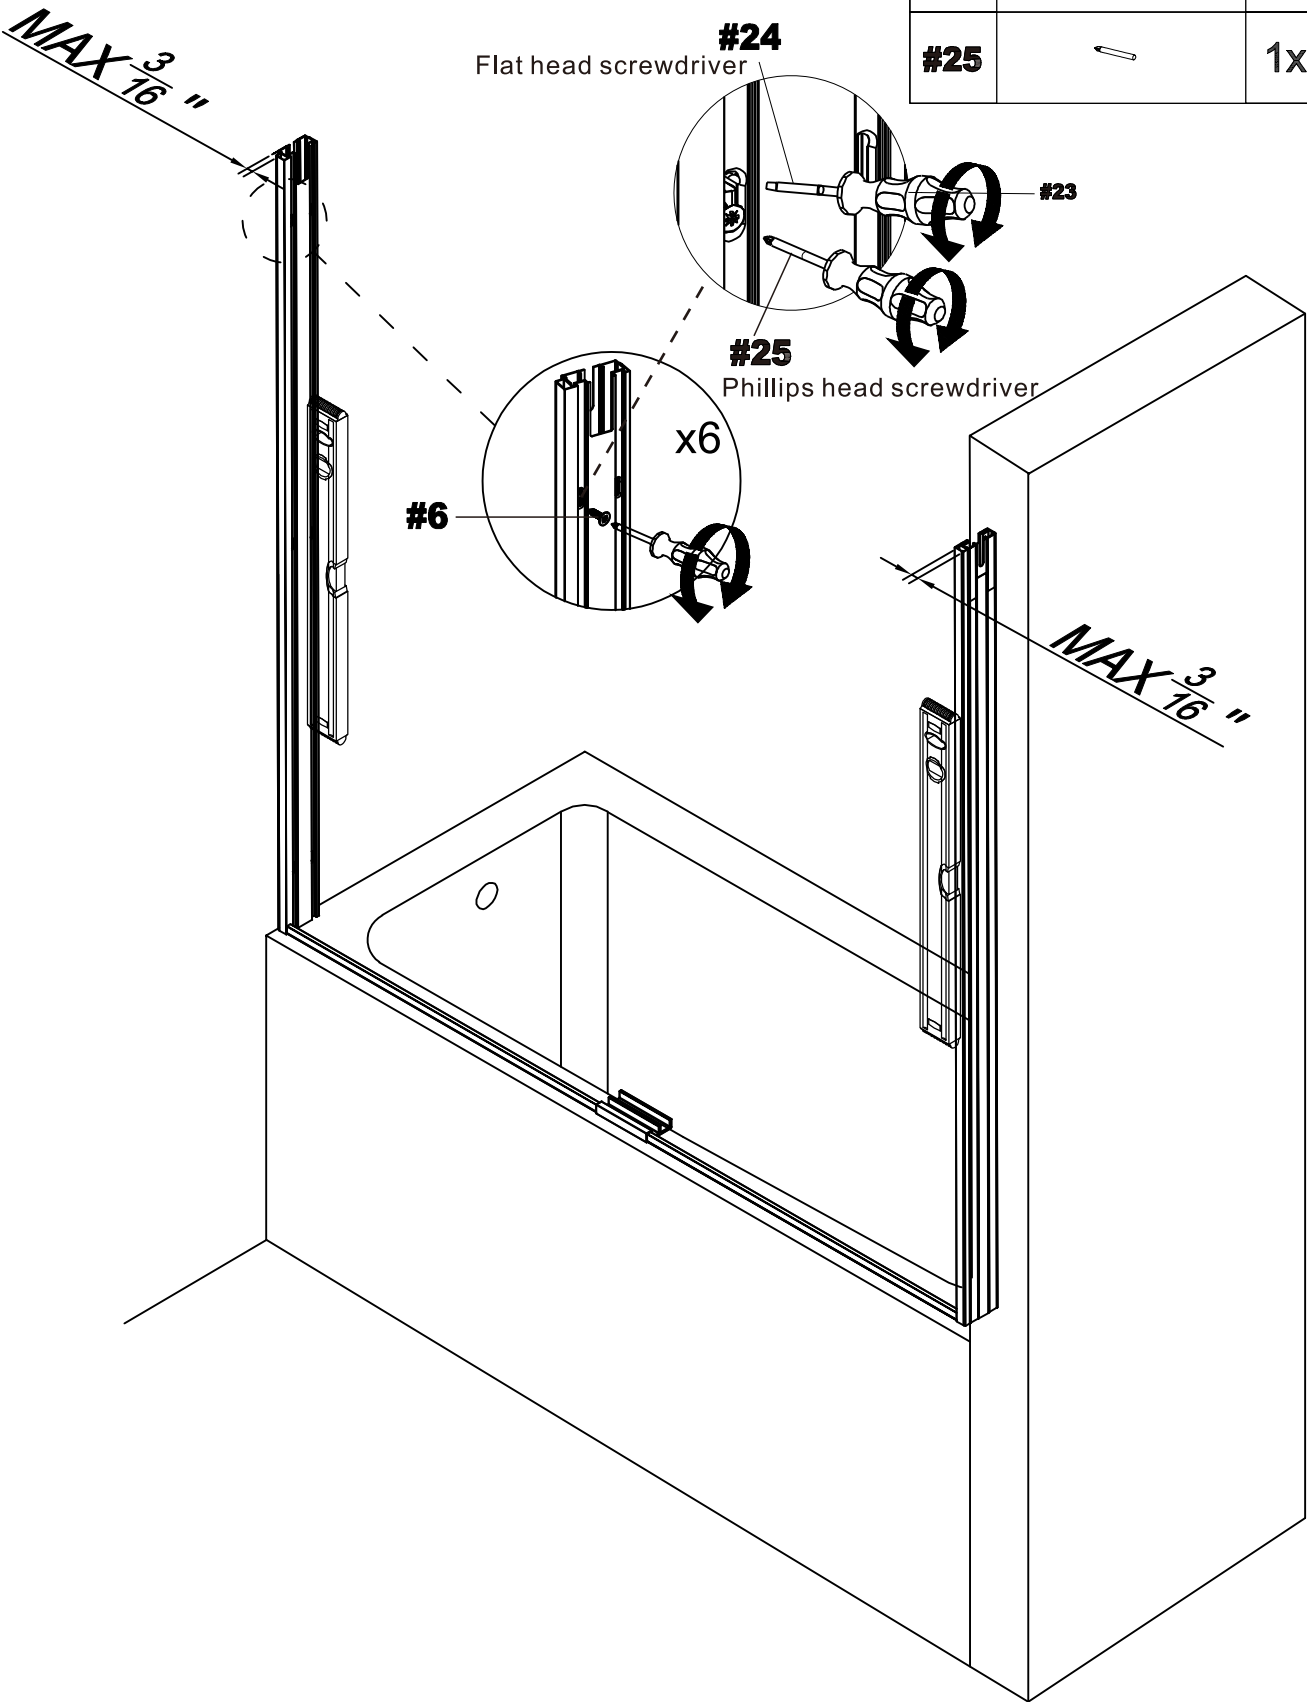
#6		6x	#23		1x
			#24		1x
			#25		1x



Step 5


1


#16		2x	#19		1x
#18		2x			

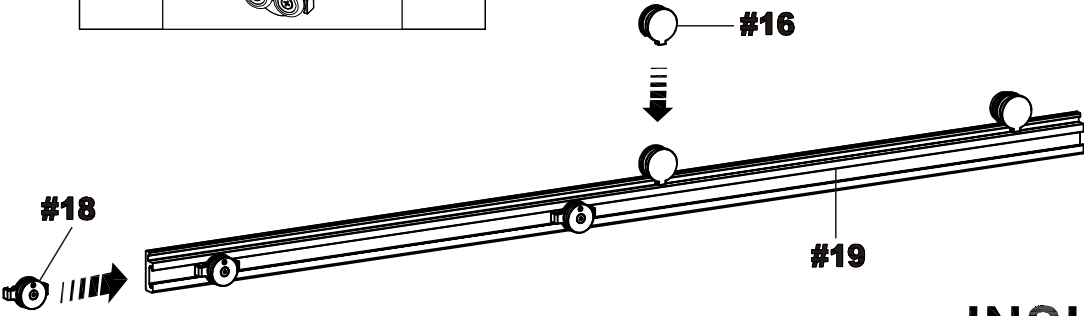

INSIDE


2

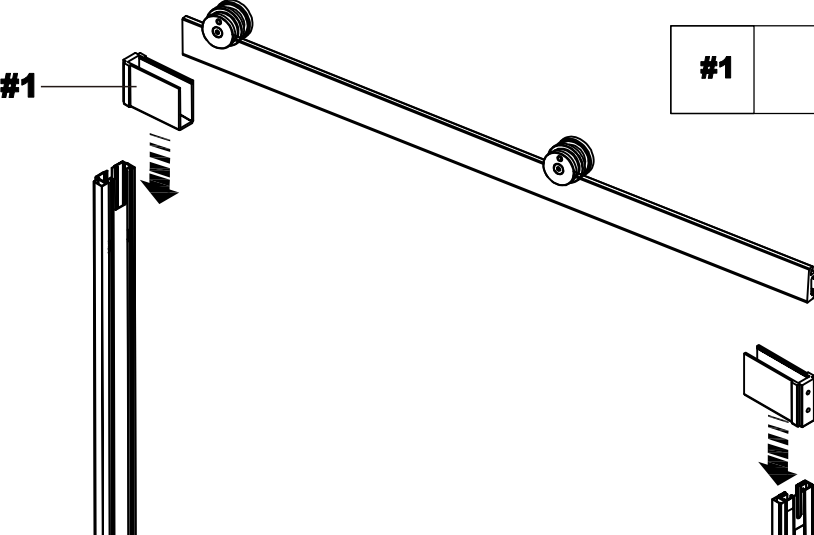



#1		2x
----	---	----

OUTSIDE

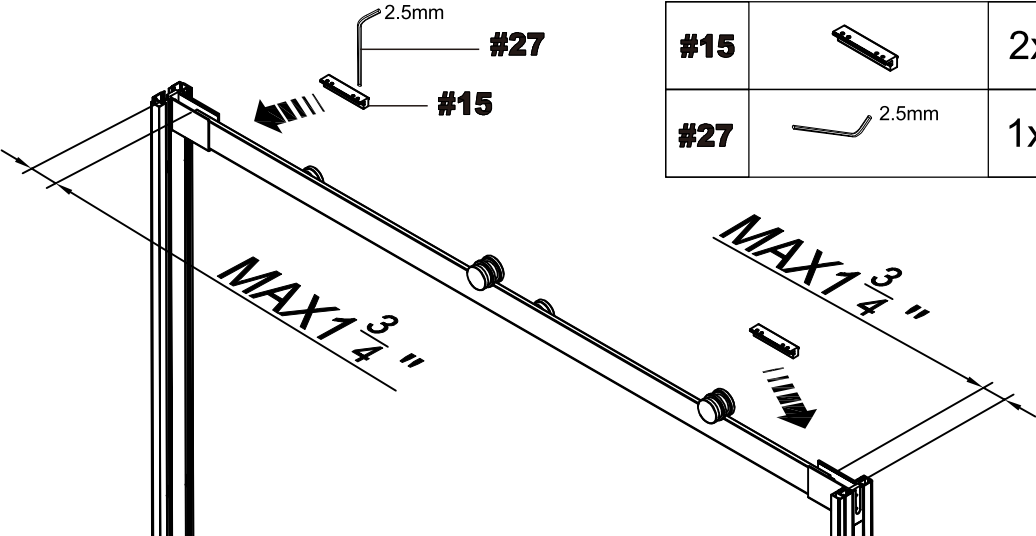3










#15		2x
#27		1x

2.5mm

MAX 1 3/4"

Step 6




#5		1x	#20		1x
#27		1x	#11		2x

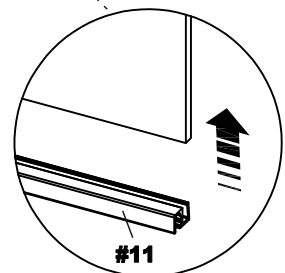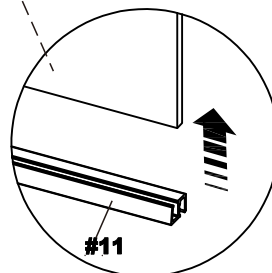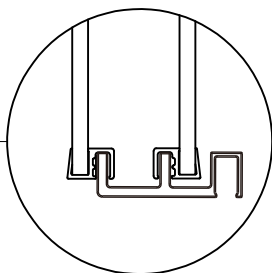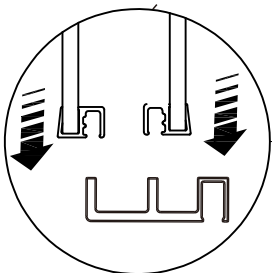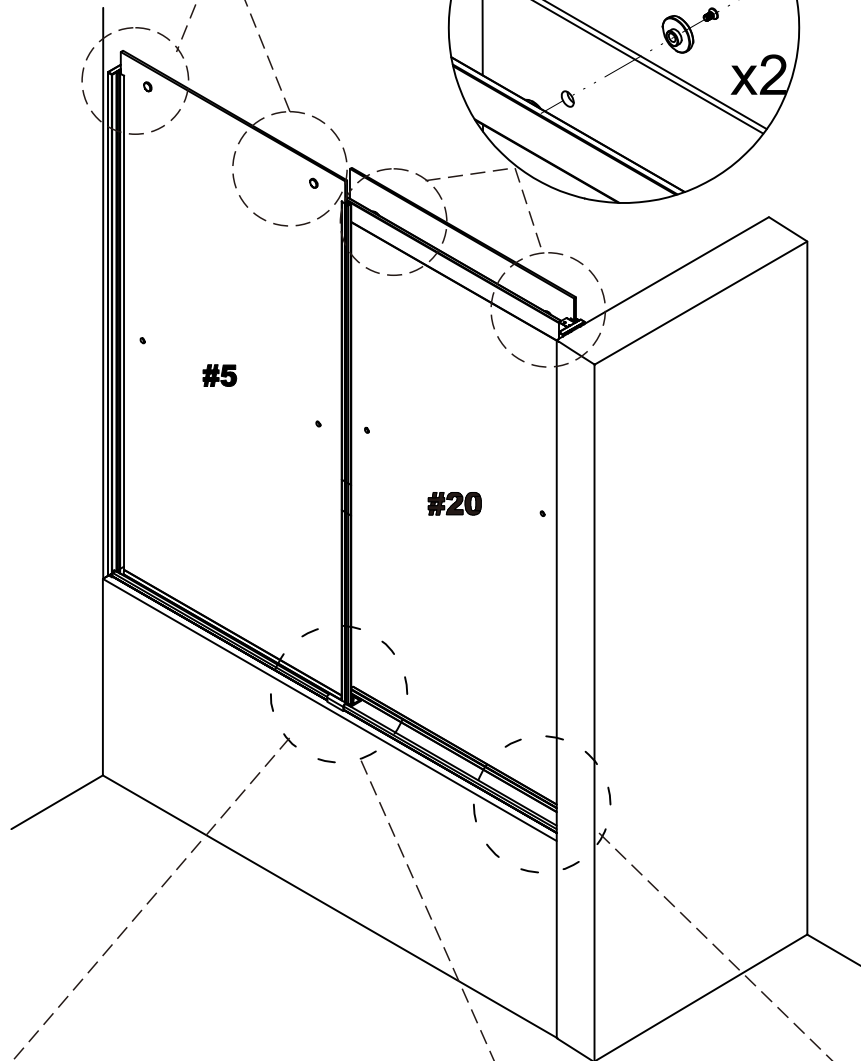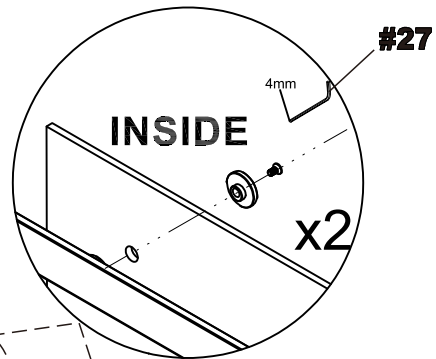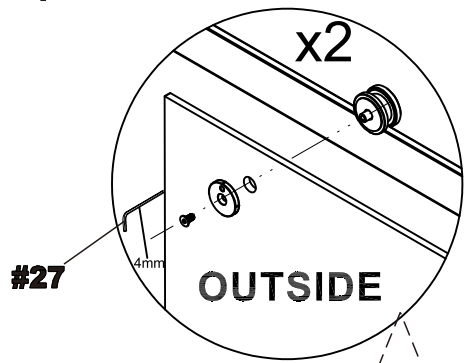


Install door rubber strip to the bottom of the glass facing down on the guide block .

The bottom seal is parallel to the glass.




Step 7


#23		1x	#24		1x	#25		1x
-----	---	----	-----	--	----	-----	---	----

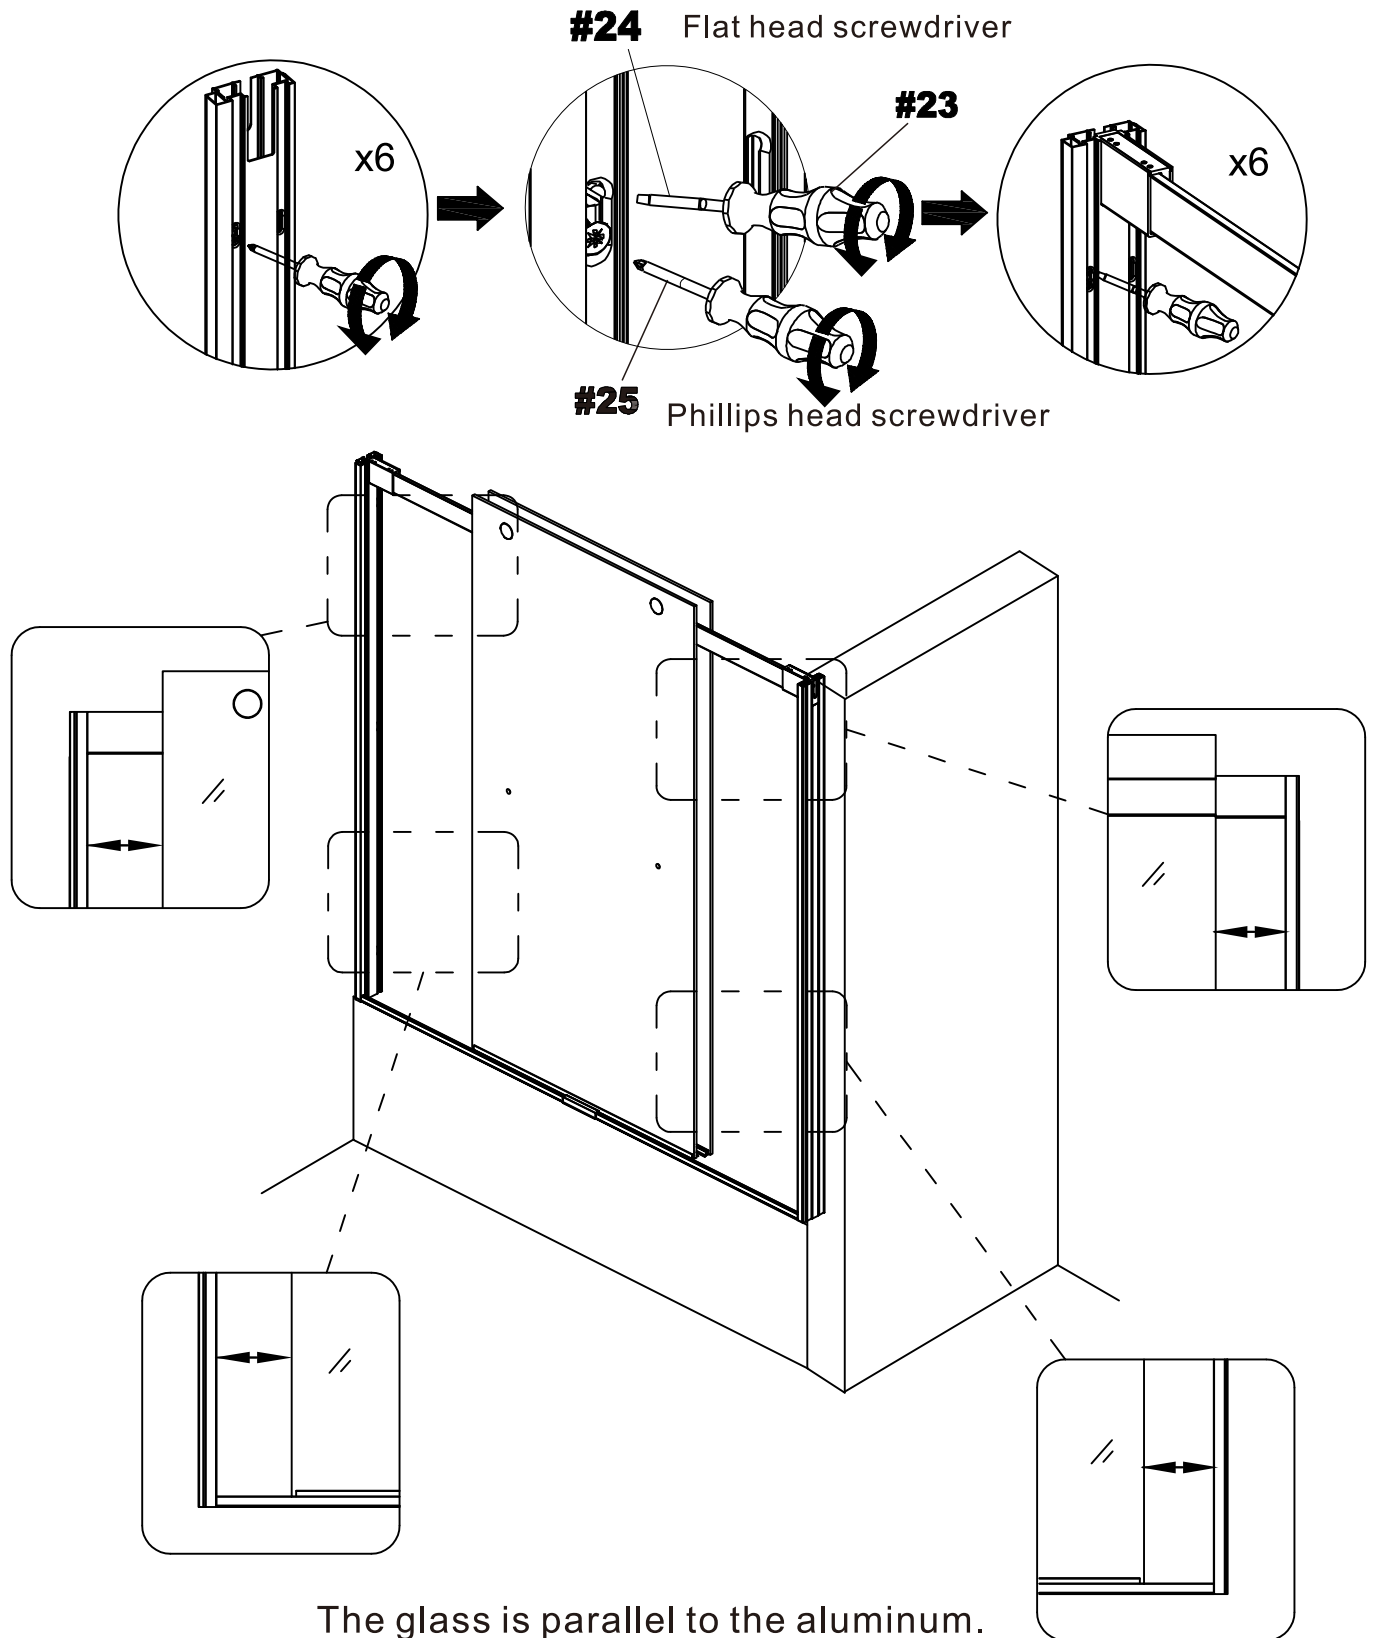Adjust the aluminum (#3 & #22) so that the glass is vertically parallel to the wall.







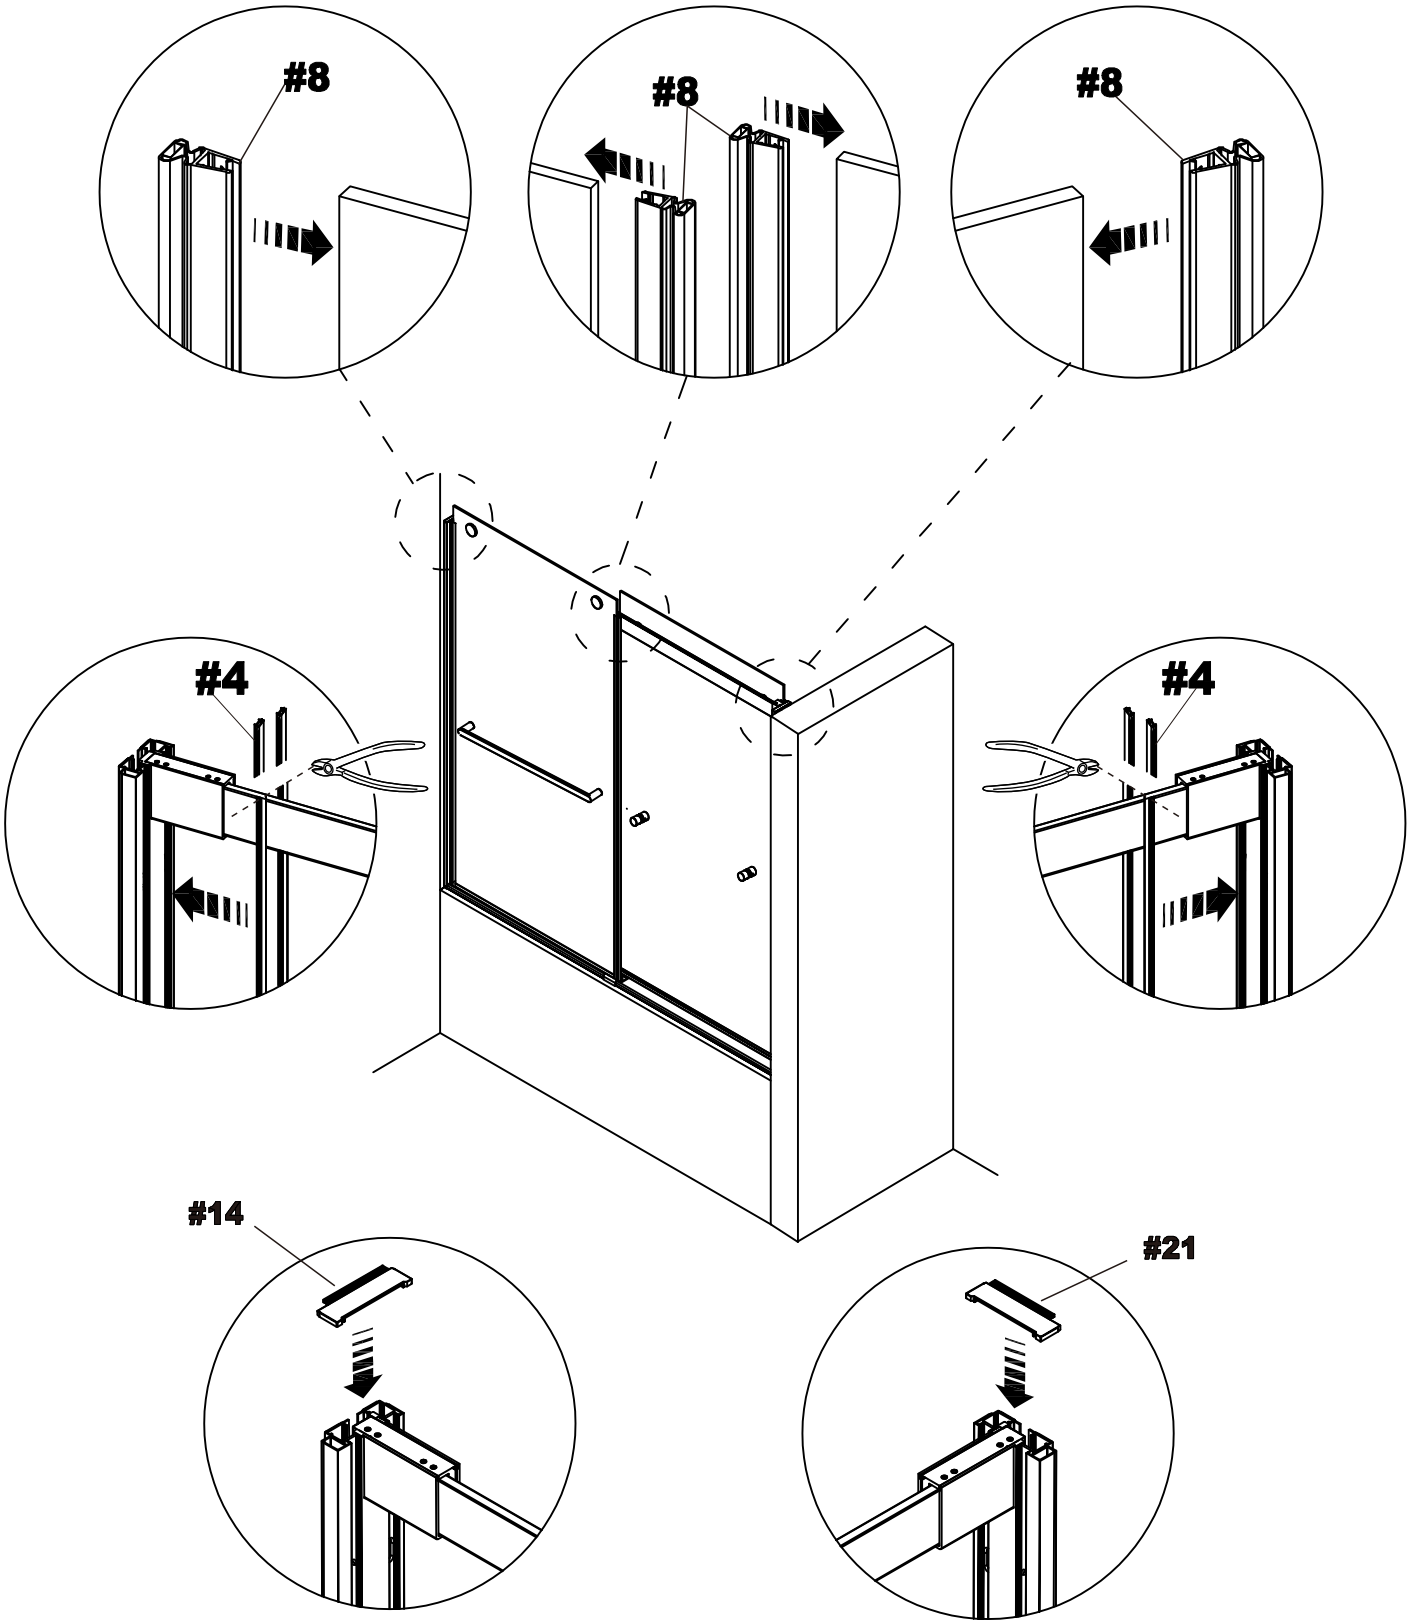
Step 8
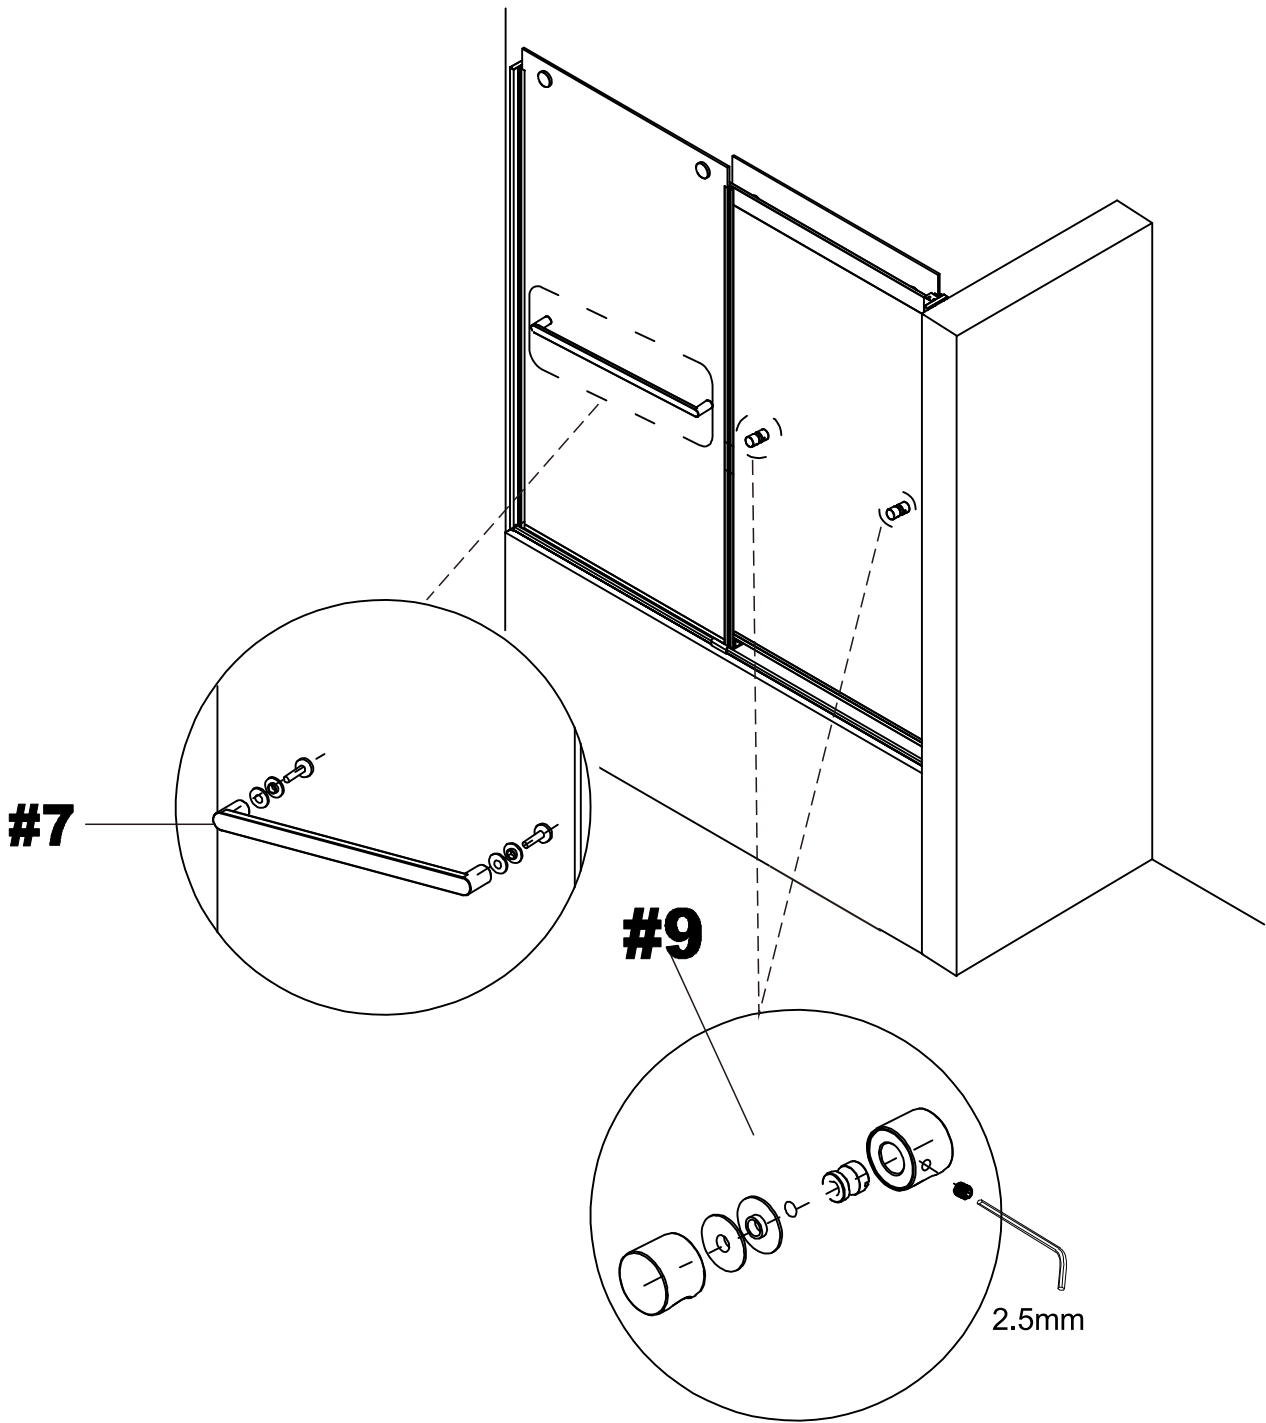
#9		2x	#7		1x
#27	 2.5mm	1x			





Step 9

#8		4x	#14		L	1x
#4		4x	#21		R	1x




Step 10

#26		1x
-----	---	----

#17		4x
-----	---	----

Adjust the wheel to level the glass door.

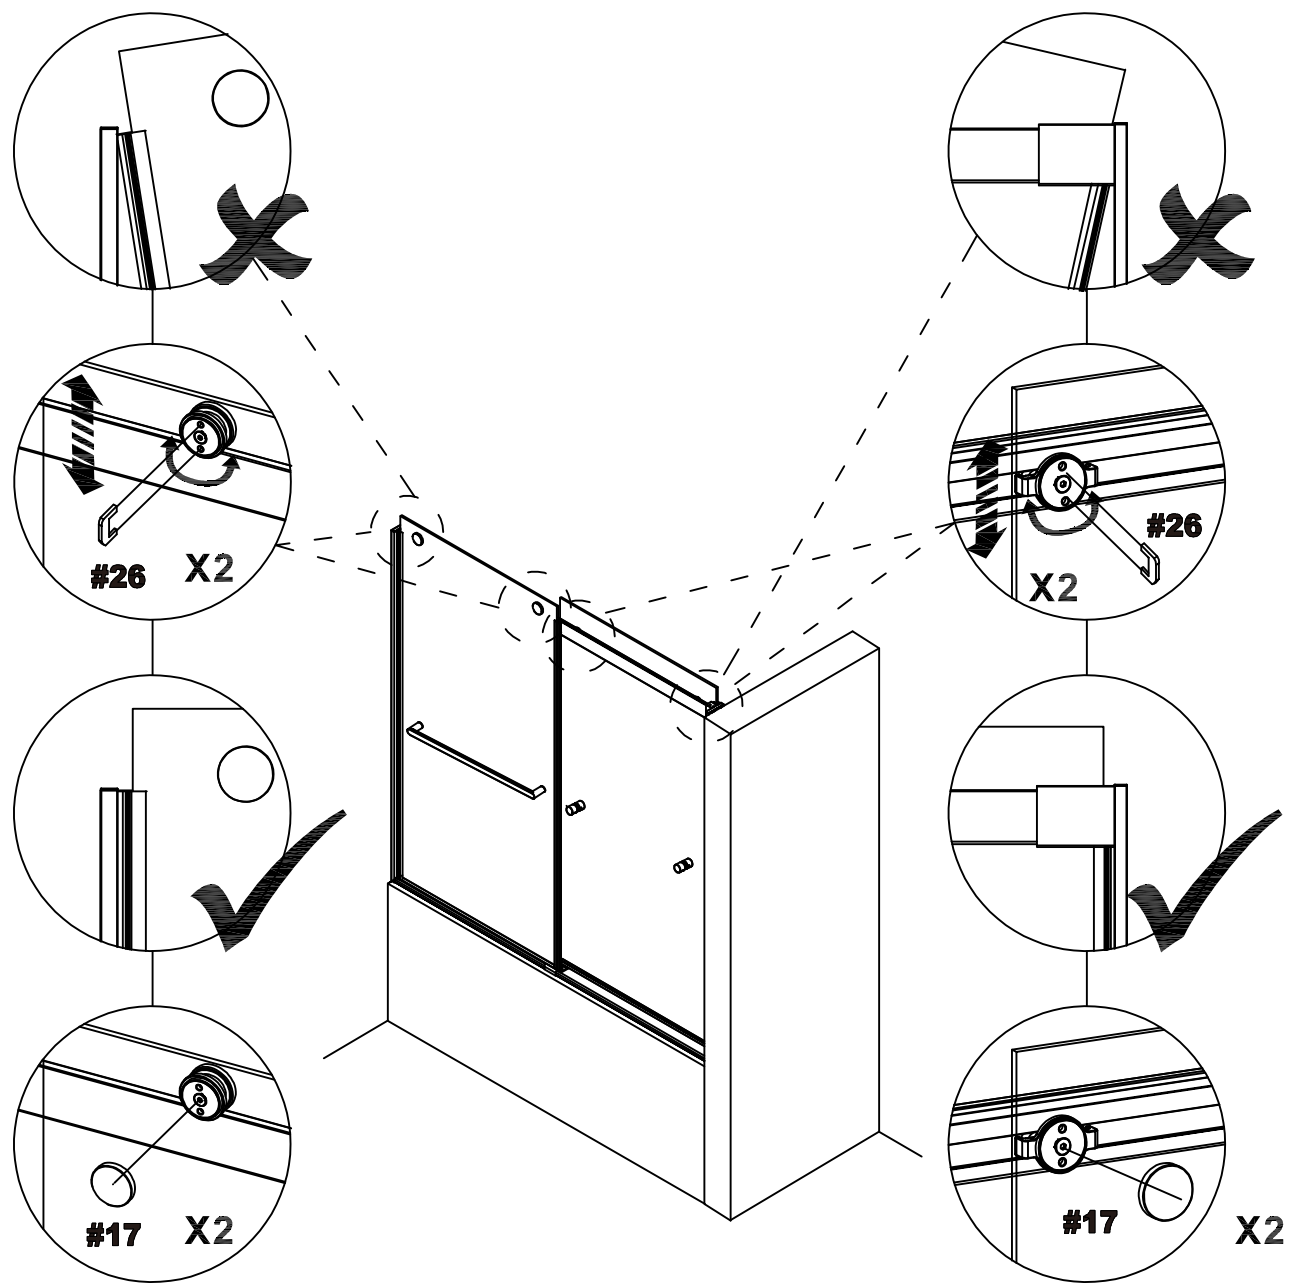

Step 11

Silicone caulk all surfaces where shower assembly contacts wall or Tub , inside and out.

