




# Jamb Juster

## Installation Instructions

### Step 1

Prior to window installation, 4 jamb brackets must be mounted to the window jamb on the upper and lower side jambs. With adjustment screw head towards jamb face, use 2 – 3/4" screws to secure the jamb brackets. The furthest point of the jamb brackets will be 2 1/2" from the face of the window.

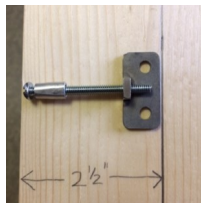

### Step 2

Install window to Manufacturers specifications. The framing width of the rough opening should be 7/8" larger than the window unit.

### Step 3

Align trimmer plate slot over adjustment screw-head and mark center screw hole. Make sure your spade bit will not hit the adjustment screw (you may need to turn in). Drill 1 1/4" hole 1/8" deep. Turn adjustment screw to accept trimmer plate slot and fasten to trimmer with screw provided. Adjust your window to desired distance.



Jamb Juster is designed for +/- 1/8" adjustment prior to foam insulation.



**Jamb Juster** ■ Patent No. 9,010,704 ■ Proudly Made in the U.S.A.

N134 County Hwy M ■ Sarona WI 54870 ■ jambjuster@gmail.com