



Picket Accent Corner Fence (Sku#1724076, CMCNCF4831)



General Information:

- Read instructions before beginning assembly.
- Identify each component from material list.
- When assembling components, place on a non-abrasive surface to avoid scratching.
- Do not use excessive force when assembling components.
- In the event of missing or defective parts, please call our customer service department at 800-266-9092

Tools Required:

- Tape measure, Level, Shovel. PVC glue (sold separately)

Also Needed:

Installation:

1. Insert a bottom rail (holes on one side) into the bottom hole in one end post. Make sure the holes in the rail are facing the other hole in the end post. **Note:** The hole which measures 15.5" from the end of the post is the bottom hole. Insert one of the top rails (holes on both sides) into the second hole in the end post. (Fig1)
Repeat steps for the remaining end post, top and bottom rail. Insert the opposite ends of each rail into the corresponding holes in the corner post to create the "frame" of your corner picket fence.

From the outside of one post to the outside of the next post is 48".(Fig2)

2. Determine the desired location for your corner picket fence, and dig three 11.5" deep holes 45" apart. Set posts with rails in holes. Fill holes half way to hold in place.
3. Slip each picket down through the top rail and into the bottom rail on either side of the corner post. The order of the pickets is shown in Fig 3. Start with longest picket closest to taller center post. Insert the remaining pickets from largest to smallest from Center Post to End Posts. Complete filling the holes and square up Accent Fence.

4. Add Decorative Post Tops: Use PVC glue to adhere the post caps.

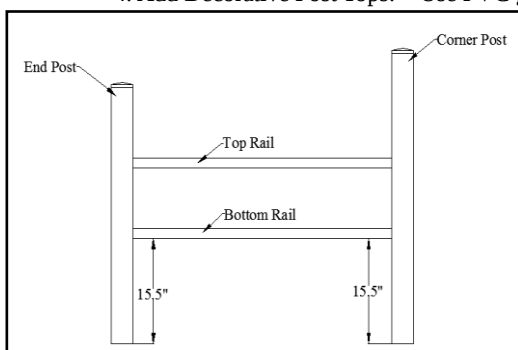


Fig.1

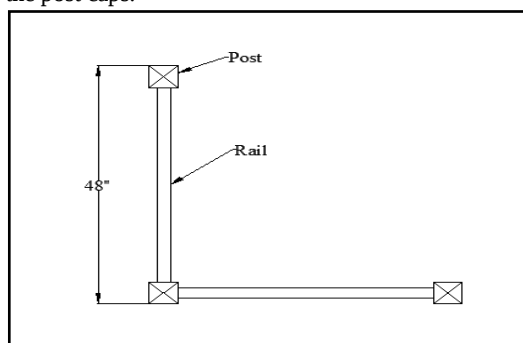


Fig.2

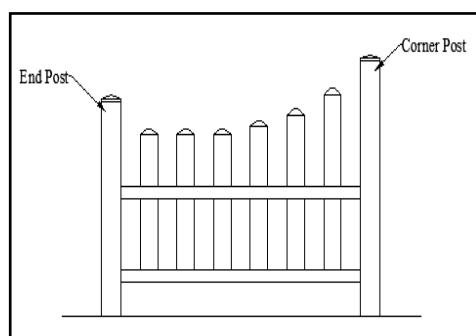


Fig.3