


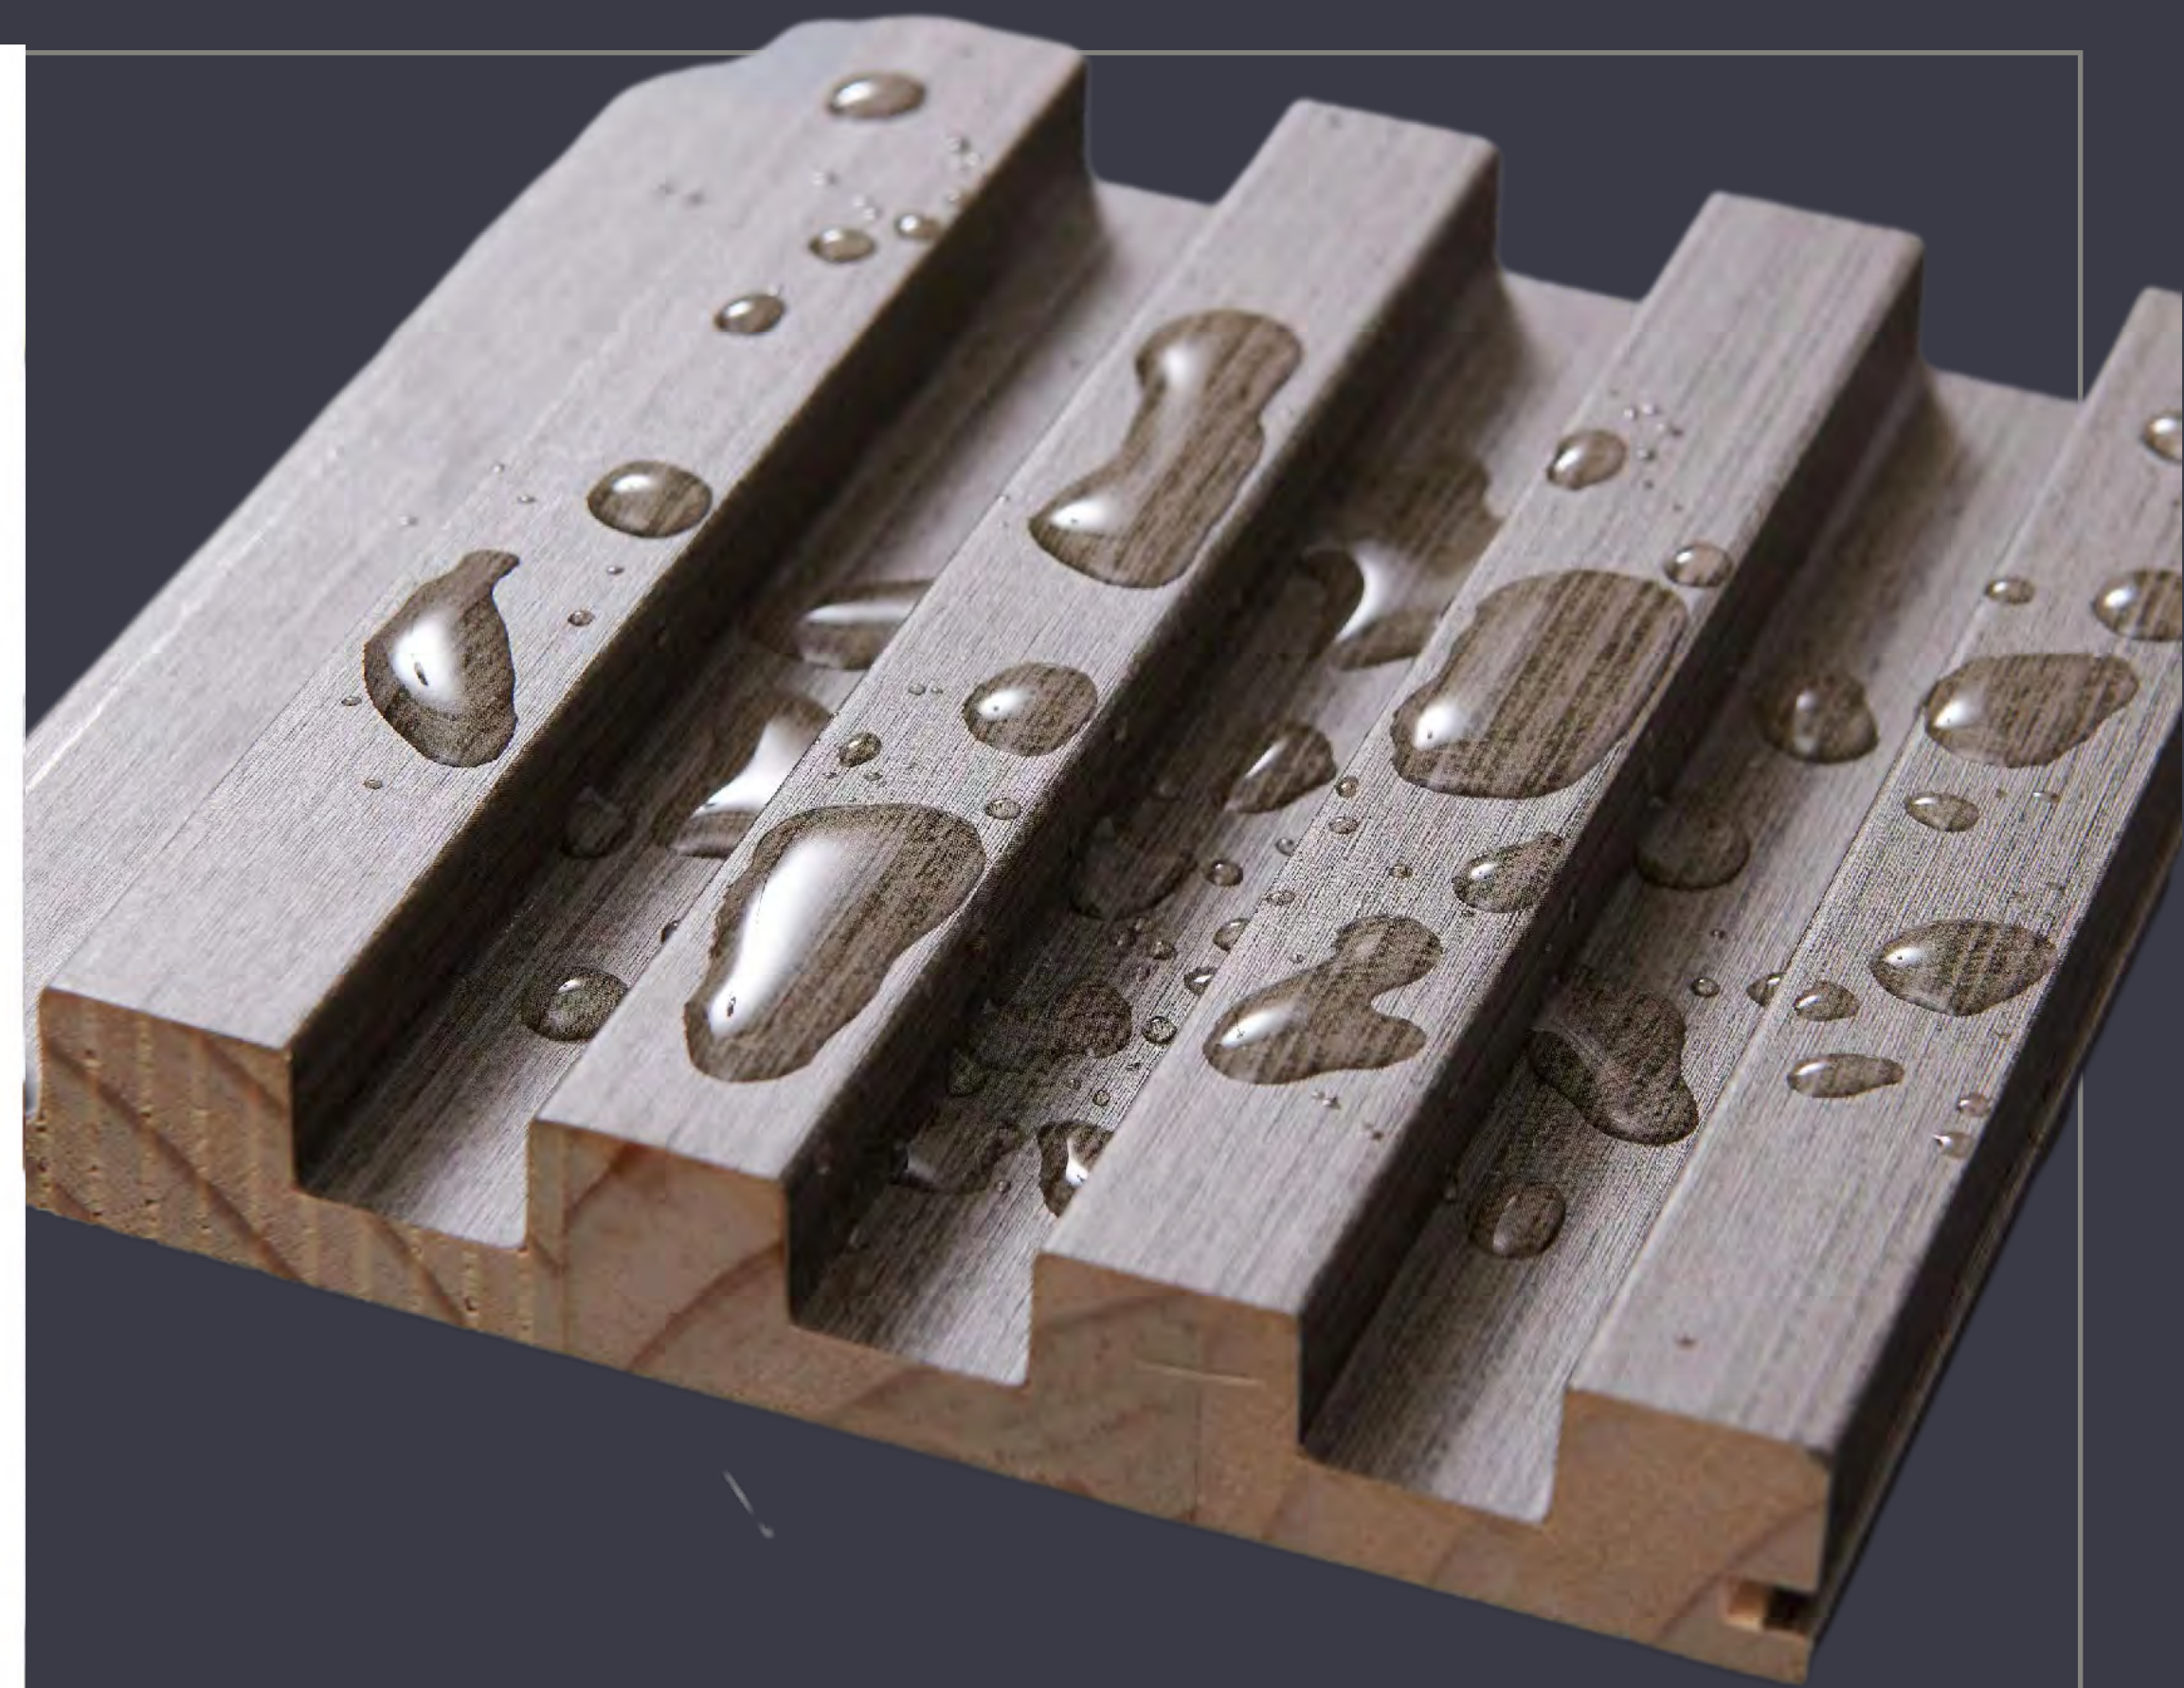


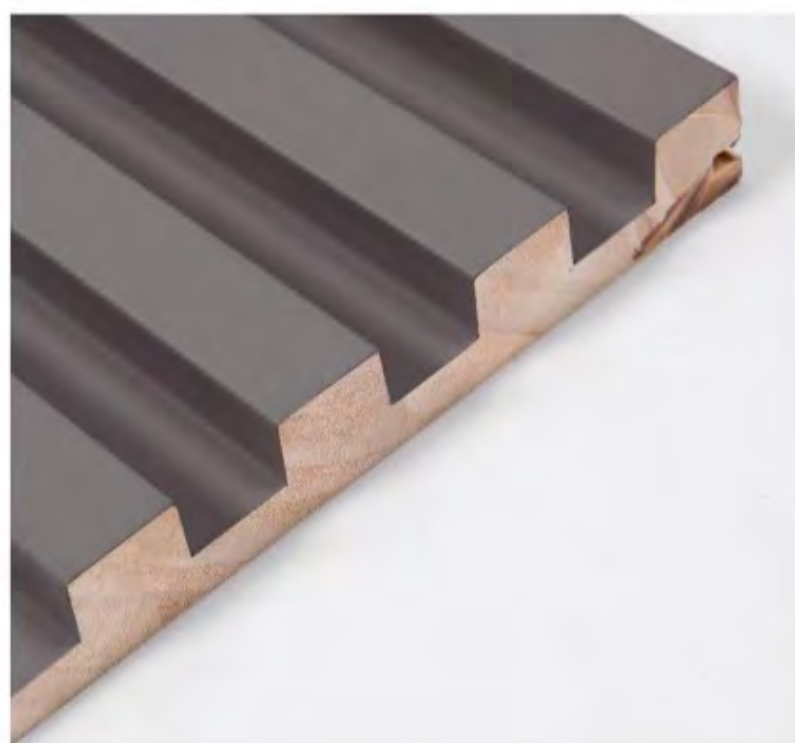




MORE THAN 40 YEARS OF EXCELLENT SERVICE

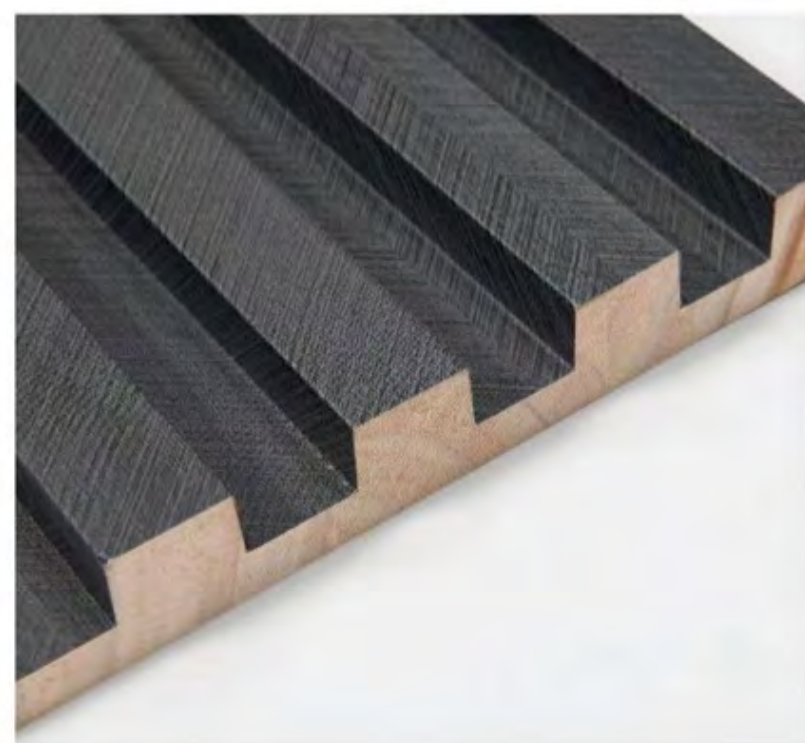

- **FIRE RESISTANCE**
- **ACOUSTIC RESISTANCE**
- **MOISTURE RESISTANCE**
- **ANTI MILDEW AND ANTI FUNGAL**

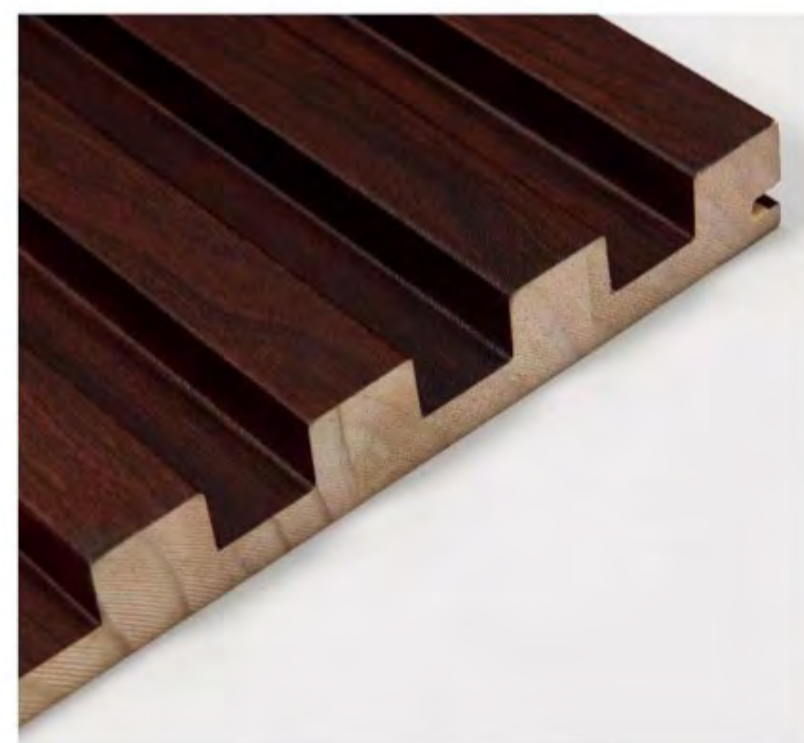


# Installation:

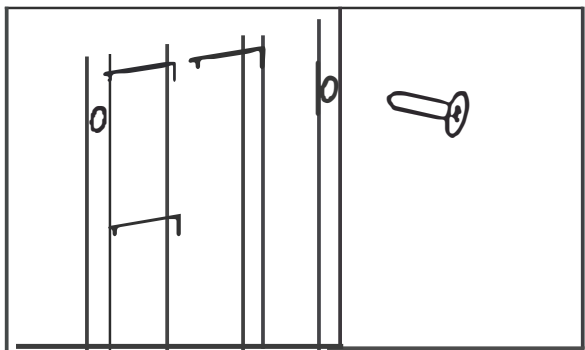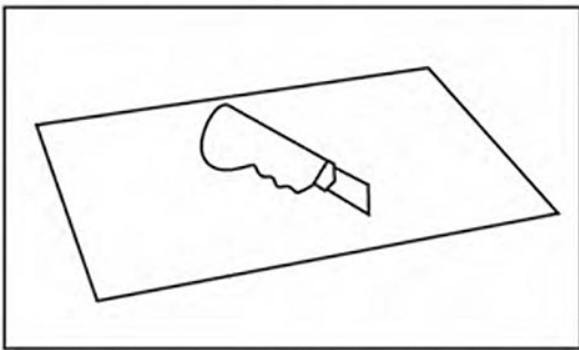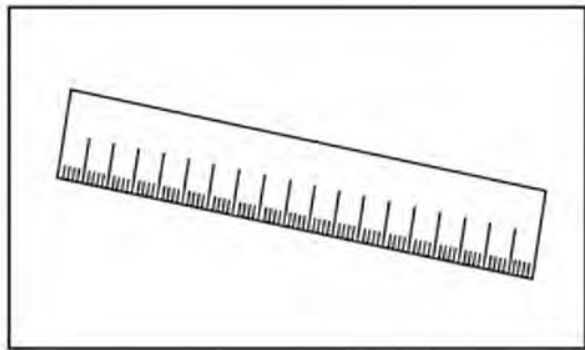

1. Measure the dimensions of the wall or ceiling to be installed.

2. Cut the panel into the proper size.



3. Fix the panels one by one, using tapping screws.

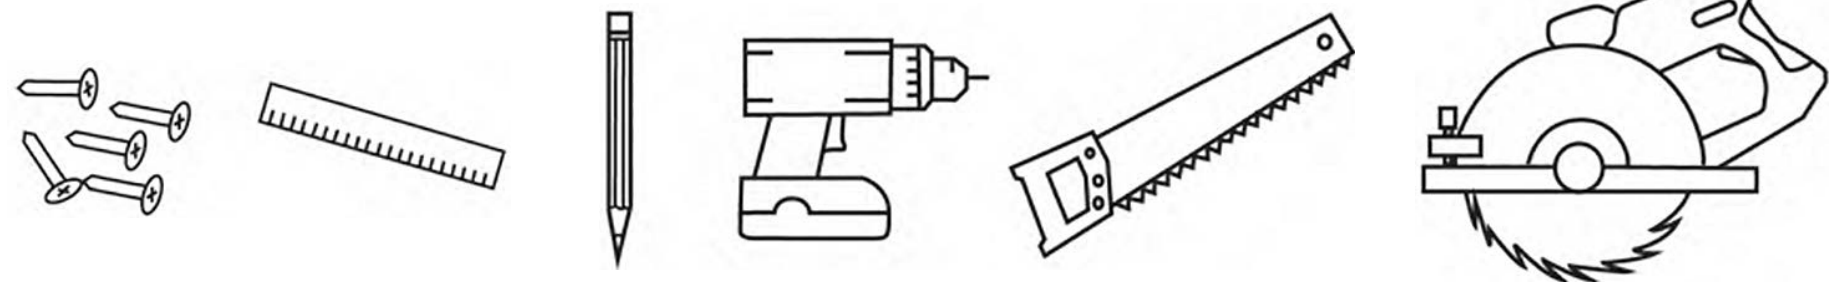

# Accessories:



Clip

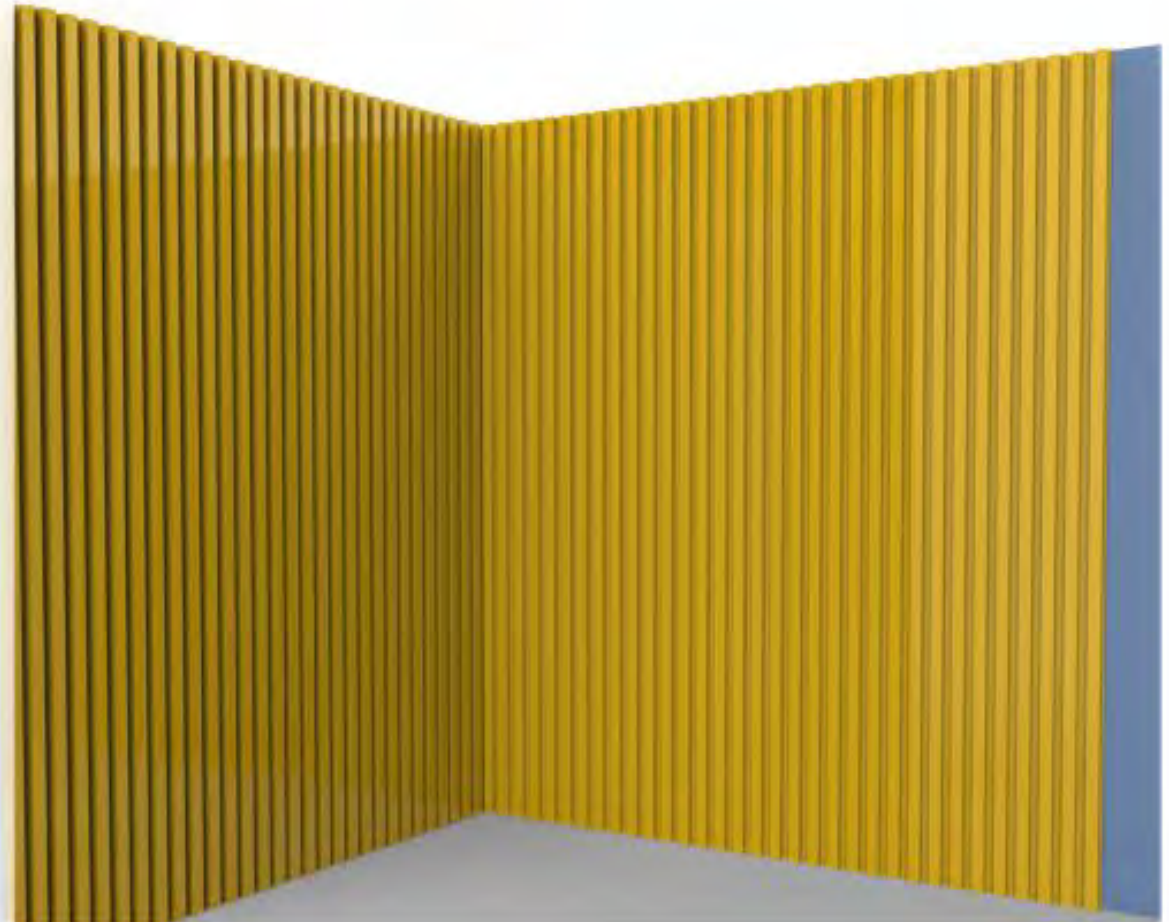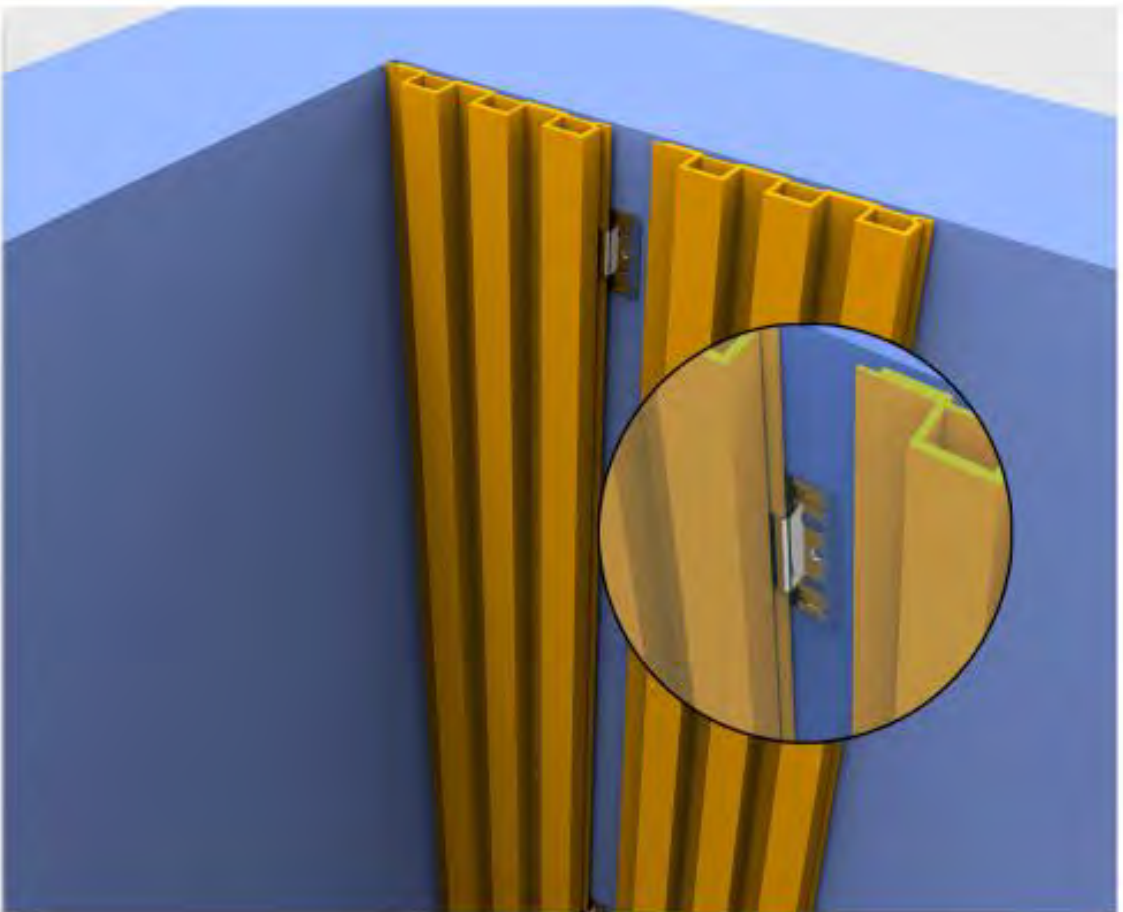

FashionQube™ Showroom & DLW Production Plant:

2400 Rosemead Blvd., South El Monte, CA 91733

(626) 570-8328 Kelvin<sub>(English)</sub> | (909) 763-9089 Michael<sub>(中文)</sub>

[www.fashionqube.style](http://www.fashionqube.style)

