

TS-940 Supply Upgrade Kit Instructions

The TS-940S Power supply upgrade kit was designed to replace the original power supply. This kit is easy to install and should provide years of extended life to your TS-940S, in our opinion one of the best radios ever made by Kenwood.

Unpacking the kit:

Unpack the kit and make sure that you have the following components:

- The TS-940S Upgrade Board with the attached 21V Buck Converter.
- 1 ea. Phoenix 24V @ 20A Power supply (If you ordered the full kit)
- 1 ea. Trimmed Snap Track section
- 1 ea. PS Fan for back panel
- 1 ea. Red/Black Power Cable with Spade Lugs
- 1 ea. Red/Black Power cable with spade lugs on one end, bullet connectors on the other
- 2 pcs of Velcro Tape for power supply mounting the supply
- This instruction Manual

Full TS-940 Upgrade Kit



IMPORTANT – Please review our video at k6iok.com before installing this upgrade kit in your radio – URL is:

https://k6iok.com/videos

Setting the 28V power supply:

Make sure that before you install this power supply upgrade that you set the power supply voltage to 28 volts. Connect a standard line cord to the supply, and use the 18-29.5 control to set the output to +28V +5%.

Installing the Snap Track – The small section of Snap Track is used to mount the TS-940 supply upgrade board. After the old power supply has been fully removed, there is a perfect space for mounting right next to where the old electrolytic capacitors were removed. The best way to mount the Snap Track is using silicone glue or other type of glue that you choose. As shown in the image to the left, the mounting surface is at the bottom side of the chassis on the vertical surface as

shown. After the glue has cured, the installation can be easily finished. See the installation video for more information.

Testing the board and setting the voltages

The board comes with a set of cables that are to be connected to the +28V input to the board, supplied red and black leads. After you set the voltage on the supply to +28V, connect the power input cable to the supply. Be sure to put the supplied blue jumper across the "Power Switch" header and a second one across the "PWR TEST" jumper. All of the LEDs should light up and the board should be ready to test. Using a meter, check the voltages on P5, P9, P8, and P4. The voltages should match with the voltages printed on the PC Board. If they do, you are ready to install the board into the radio.

Setting the 21V Buck Converter voltage

This voltage is set during testing at our location but it is good to re-check it. After applying the power to the 28V input connector, and before you insert the PWR_TEST and power switch jumpers, it is important to set the voltage on the output of the buck converter to 21 volts. On the buck converter, the input is the (+28V) and (Ground) wire, and the output is the (+21V) and (Ground) Wire. You can check the output voltage right at the connector on the main board. Use the Voltage Set Potentiometer to set the output to 21V. This potentiometer is the one on the "input" side of the board.

IMPORTANT – When you are finished checking the power supply upgrade board, be sure to remove the jumper on the PWR_TEST header and the POWER_SWITCH header. These are used for testing the board before installing it in the radio and is not used during normal operation.

Theory of Operation


Check it in your radio first!

We always suggest that you check the board in then radio before you remove the original power supply components. The best way is to watch our video online at https://vimeo.com/254540209 or, you can go to our website at https://vimeo.com/254540209 or, you can go to our website at https://vimeo.com/254540209 or, you can go to our website at https://vimeo.com/254540209 or, you can go to our website at https://vimeo.com/254540209 or, you can go to our website at https://vimeo.com/254540209 or, you can go to our website at https://vimeo.com/254540209 or, you can go to our website at https://vimeo.com/254540209 or, you can go to our website at https://vimeo.com/254540209 or, you can go to our website at https://vimeo.com/254540209 or, you can go to our website at https://vimeo.com/254540209 or, you can go to our website at https://vimeo.com/254540209 or, you can go to our website at https://vimeo.com/254540209 or, you can go to our website at https://vimeo.com/254540209 or you can go to our website at https://vimeo.com/254540209 or you can go to our website at https://vimeo.com/254540209 or you can go to our website at https://vimeo.com/254540209 or you can go to our website at https://vimeo.com/254540209 or you can go to our website at h




"Videos" and select the video called "Testing the board in the TS-940 First". This video shows you how to unplug 5 connectors on the existing AVR board and 2 spade lugs that go to the PA assembly in the radio and move them over to the new upgrade board for testing. Use the diagrams above as a reference to make sure everything is connected correctly. It is a good idea at this point to check the receiver and transmitter for proper operation.

When you finish, the radio should fully function. When you have completed this step, you can then begin to remove the original supply from your radio. You can go to the following: Check it out online: URL: https://vimeo.com/239675728 or, go to our site at k6iok.com and click on "Videos" then select the video Removing the Power Supply.

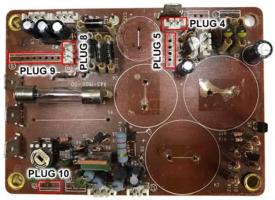



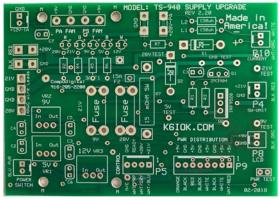

New Supply Upgrade Board

Construction of the Supply Upgrade Board

At Compudigital Industries, we take pride in delivering the highest quality product possible. This is why we have been through 5 revisions of this board before we released the first one for sale. The board is made using commercial quality FR4, .062" double sided circuit board material with solder mask and screen printing to indicate component locations, voltages, and cable colors. The board traces are silver plated to assure maximum current passing capability and the highest level of solderability. The high current through holes are filled with solder as well. The high current traces are wide and as short as possible to make sure that the voltage drops remain minimal during transmit conditions.

The original AVR board in the TS-940 served many functions. First, it controls the fans to make sure that they each come on as the radio requires them. These fans cooled the original power supply and the PA section. The fan controls and thermistors on the AVR are prone to failure, causing the fans to fail to come on when the components get hot. The new board provides 2 fan outputs, both operating at 9 volts and they run continuously. The Quint Power supply requires very little cooling but does need some air moving through it. The finals also do not require a full speed fan and so the 9V line has proven to work very well.

Another function of the original AVR board is to provide +21 volts, +9V, and +5V using the external pass transistors, regulators, heat sinks etc. Our new board has a +21V DC to DC 12 amp converter mounted on top of the board, and a 9V, 5V, and some models a 12V Switching Power supply mounted on the circuit board. These on board converters run with up to an amazing 98% efficiency and so they run cool, providing everything the TS-940 needs to run properly.

You will notice that the new board has a +28 volt input (spade lugs) and a +28 volt output (Marked +28V-PA) which serves the PA module. Referring to the schematic diagram you will notice that this 28V source goes through a 15A fuse, and then a .015 ohm (15 milli-ohm) 1% 5W resistor, used as a current sensor. This sense voltage provides and indication of the transmit current through PLUG 10 via the two 150uh chokes. This voltage is used to provide the meter reading for current during transmit, and to control the output power to make sure the driver and final stages remain safe. The original power resistor is subject to change which can throw off the readings to the control circuits of the radio. The maximum specified power output in all modes is 110 Watts and the radio uses this resistor to determine the output level.



LED Indicators We use 4-5 multi colored LEDs to indicate the different voltages within the upgrade board. The RED Led is used for 28V, Green is for 21V, Yellow for 9V, Blue for 5V, and on some models, White for 12V. These LEDs do not confirm that the voltages are correct, they just indicate that the voltages are there.



We have installed 2 protection Schottky diodes for reverse polarity protection. D1 is in place to protect the 21V line and D2 is used to protect the 28V line. If either of the voltages somehow get reversed, the diodes conduct and the respective fuse will blow.

Power-up Sequencing

On power-up, there is a specific sequence that is required to make sure the TS-940 processor starts properly and that the memory will be retained. The 28 volt line is normally in the ON condition all of the time. When you turn on the power switch, the 21V line is applied to PLUG 5, pin 1 and PLUG 4, pin 1. When these two voltages are applied, the associated circuitry comes online and then when ready sends a READY indication to PLUG 5, pin 3. This is an indication for our board to bring up the 9V and 5V power supplies. We use a high power MOSFET (Q2) to provide 21V to the inputs of the 9V and 5V switching power supplies when the READY signal has been received. And you will see the results on our power indication LEDS. When you press the power button, the RED is already on, indicating there is 28V power, the 21V line comes up (Green LED) and then after a very short delay, the 9V and 5V power supplies are enabled. Normally, while the radio is operational, all of the LEDs are lit up.

The TS-940 timer switch - prevent a real headache!

Many radios now days have a timer switch that is used to automatically turn the radio on and off automatically. The TS-940 was way ahead of its time and had the same. If the timer switch is pushed in, the radio checks with the timer module (behind the LCD display) to see if any timing function is scheduled. If not, the radio will just not come on. During development of this supply upgrade product the timer switch caused us many hours of frustration when it was inadvertently pressed in and we did not know it. The result, a completely dead radio. Make sure that the timer switch is not pressed in during your testing!

The Cooling Fan Outputs

We have provided 2 fan outputs so that you can hook your fans directly to the board. The fan included in the full kit is a 12V low current model used to put minimal air through the switching power supply. It runs perfectly at 9 volts. The fan that cools the TS-940 Final stages is a 12 volt fan that we also run at 9 volts. Running at a full 12 volts gets pretty noisy and is really not required.

Securing the power supply in the case

The Quint power supply is sized perfectly to fit within the TS-940 case. The best way we have found to secure it to the bottom of the case is using Velcro Tape (supplied). After you have completed all of the wiring and are ready to wrap the project up, you can secure the supply to the radio with the supplied VELCRO tape. See image to the right.

IMPORTANT NOTE: Internal batteries in the TS-940 are important!

There are 2 memory retention batteries in the TS-940 and both are critical. One is for the timer/clock module and the other is the memory retention battery located under the speaker. Most TS-940S radios have never had these batteries replaced. We recommend that you replace both as a part of this upgrade. You can purchase these batteries from our store at Mclick.com or through a retailer like Amazon. We will be providing a video outlining the steps to take in order to replace these batteries at our site at Mclick.com.

NOTE ABOUT KENWOOD CONNECTORS:

The connectors used in the Kenwood TS-940 are delicate and do not respond well to plugging and unplugging continuously. We recommend

that you keep this repetitive action to a minimum to prevent damage to the plugs. The original pins on the AVR board and other parts of the radio are .037" and these header connectors are no longer available. We use a header with .035" pins, the only option we have been able to find anywhere. Many thanks to one of our partners PIEXX for their assistance in locating the headers we use!





If you have any questions about your installation, please contact us at 916-205-2200.