

RED GRID

TRANSFER PAPER FOR INJECTION PRINTERS
(PREFERIBLY PIGMENT INKS)




World-Paper

"Your imagination is the limit"

RED GRID

- RED GRID PAPER FOR BACKGROUNDS WHITE OR CLEAR SUITABLE FOR USE ON ANY INKJET PRINTER INK.
- TEXTILES MADE OF COTTON, POLYESTER AND BLENDS COTTON-POLYESTER.
- SOLID AND BRIGHT COLORS AFTER OF SEVERAL WASHES.
- SOFT TOUCH ON THE PRINT.

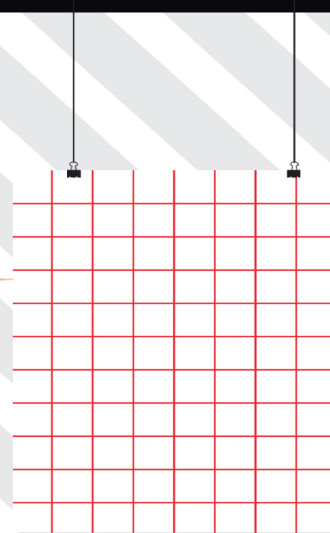

CREATES
DESINGS
IN JUST
3 STEPS

1. DESING



2. PRINT



3. IRON



- IMAGE SHOULD BE PRINTED IN REVERSE.

INSTRUCTIONS OF IMPRESSION:

- PAPER TYPE: NORMAL OR PHOTO.



HOW IT WORKS

1. CUT OUT THE UNPRINTED EDGE OR BACKGROUND OF THE PRINTED DESIGN BECAUSE ALL THE TRANSFER PAPER THAT YOU IRON.
2. ADJUST THE TRANSFER PLATE TO 175°C AND HIGH PRESSURE.
3. PLACE THE T-SHIRT ON THE IRON AND PERFORM A PRE-PADDING FOR 4 - 5 SECONDS TO ELIMINATE WRINKLES.
4. PLACE THE TRANSFER PAPER WITH THE PRINTED SIDE IN CONTACT WITH THE SHIRT, AND PLACE OVER A PROTECTIVE PAPER.
5. CLOSE THE IRON AND IRON AT 175°C, HIGH PRESSURE AND 15 SECONDS.
6. OPEN THE IRON AND REMOVE THE SHIRT.
7. WAIT FOR THE T-SHIRT TO COOL AND REMOVE THE TRANSFER PAPER.
8. REPLACE THE SHEET AND PLACE A SHEET OF SILICON ON IT AND PERFORM THE IRONING FOR 5-6 SECONDS.

CARE AND WASHING

1. LEAVE FINISHED ITEM FOR AT LEAST 24 HOURS BEFORE WASHING.
2. FABRICS MAY THEN BE MACHINE WASHED SEPARATELY (INSIDE OUT, DO NOT USE BLEACH OR BLEACH ADDITIVE DETERGENT) IN COLD WATER.
3. DO NOT USE FABRIC SOFTENER.
4. DRY AT NORMAL SETTING; DO NOT DRY CLEAN
5. KEEP PRODUCT IN CLOSED PACKAGE BETWEEN USES; STORE IN A COOL, DRY PLACE.

