


READY TO ASSEMBLE

2-PERSON

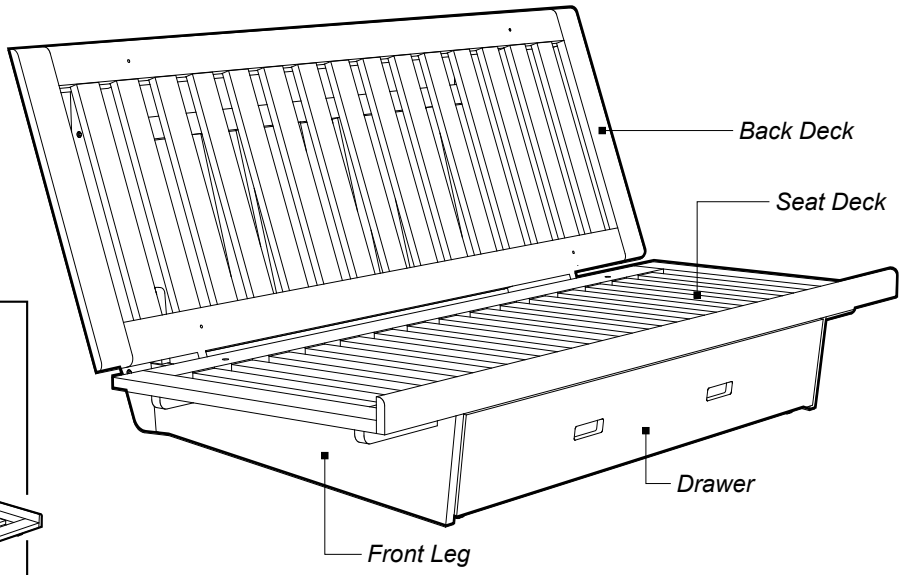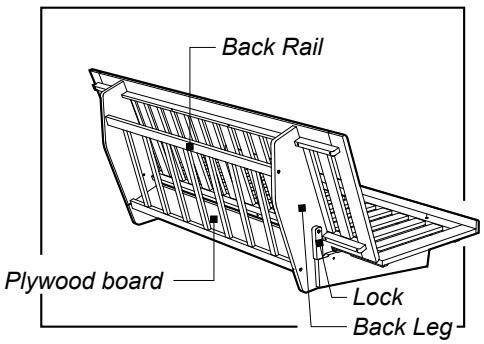




1.1 PART IN THIS BOX


A. 
BACK LEGS x 2
(RIGHT & LEFT)


G. 
LOCKS x 2

B. 
FRONT LEGS x 2
(RIGHT & LEFT)

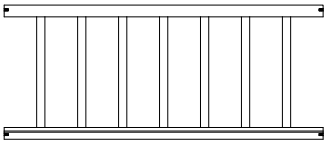
C. 
BACK RAIL x 1


D. 
PLYWOOD BOARD x 1

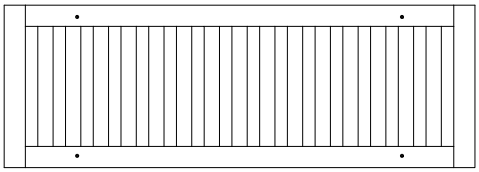E. 
BACK DECK x 1

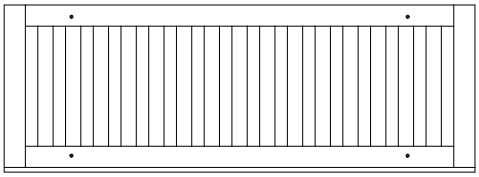F. 
SEAT DECK x 1


1.2 HARDWARE IN THIS BOX


45mm Bolt x 8 Pcs


60mm Bolt x 8 Pcs



Allen Key x 1 Pc

2.1

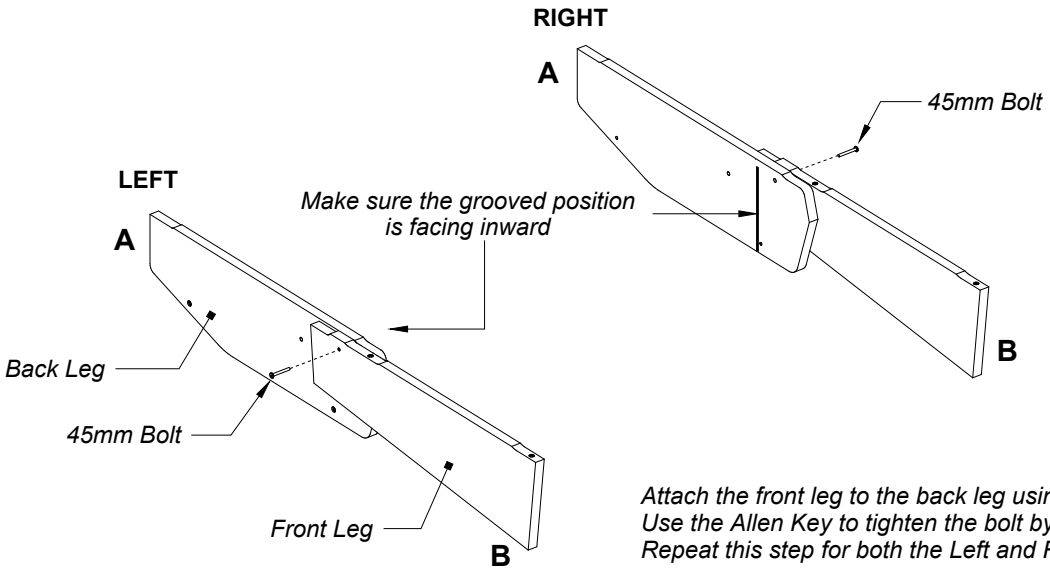


Attach the front leg to the back leg using the 45mm Bolt.
Use the Allen Key to tighten the bolt by turning it clockwise.
Repeat this step for both the Left and Right Legs.

2.2 CONNECT BACK RAIL WITH THE LEG

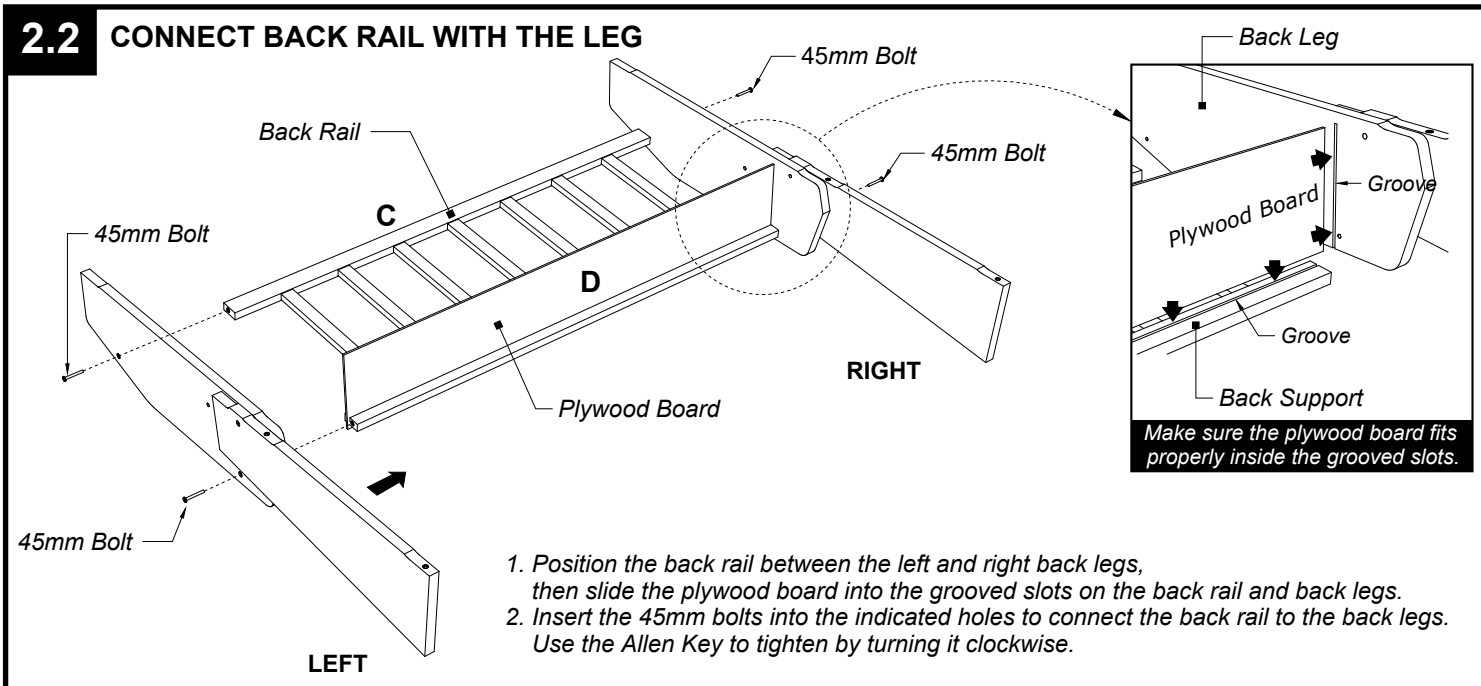

1. *Position the back rail between the left and right back legs, then slide the plywood board into the grooved slots on the back rail and back legs.*
2. *Insert the 45mm bolts into the indicated holes to connect the back rail to the back legs. Use the Allen Key to tighten by turning it clockwise.*


2.3 ATTACH THE BACK DECK

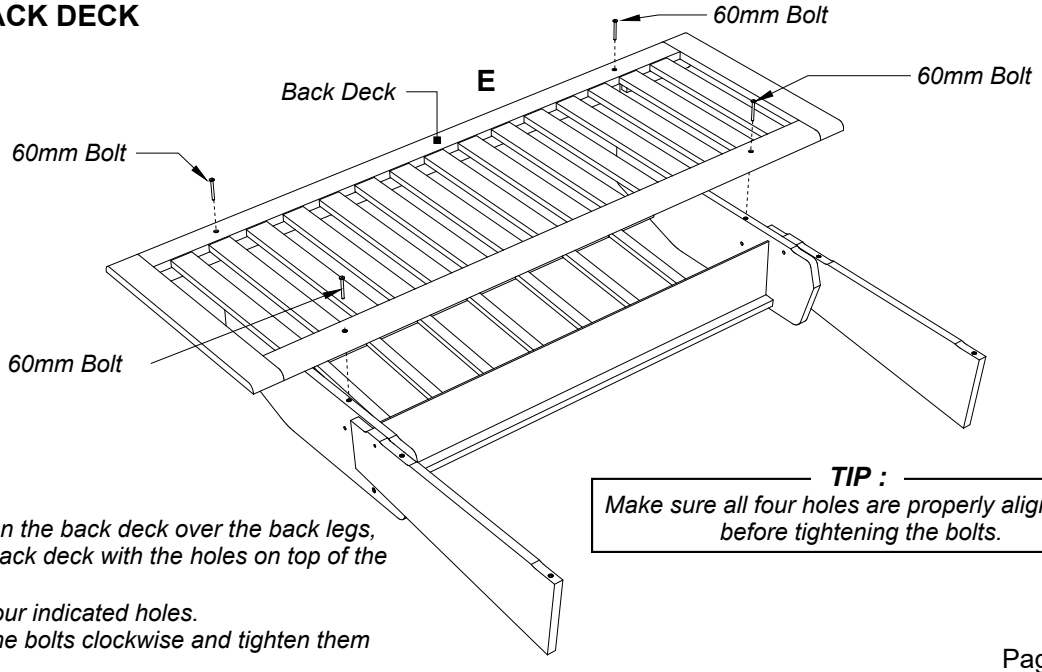

TIP :
Make sure all four holes are properly aligned before tightening the bolts.

1. *Carefully place and position the back deck over the back legs, aligning the holes on the back deck with the holes on top of the back legs.*
2. *Insert the 60mm into the four indicated holes. Use the allen key to turn the bolts clockwise and tighten them*

3.1 ATTACH THE SEAT DECK

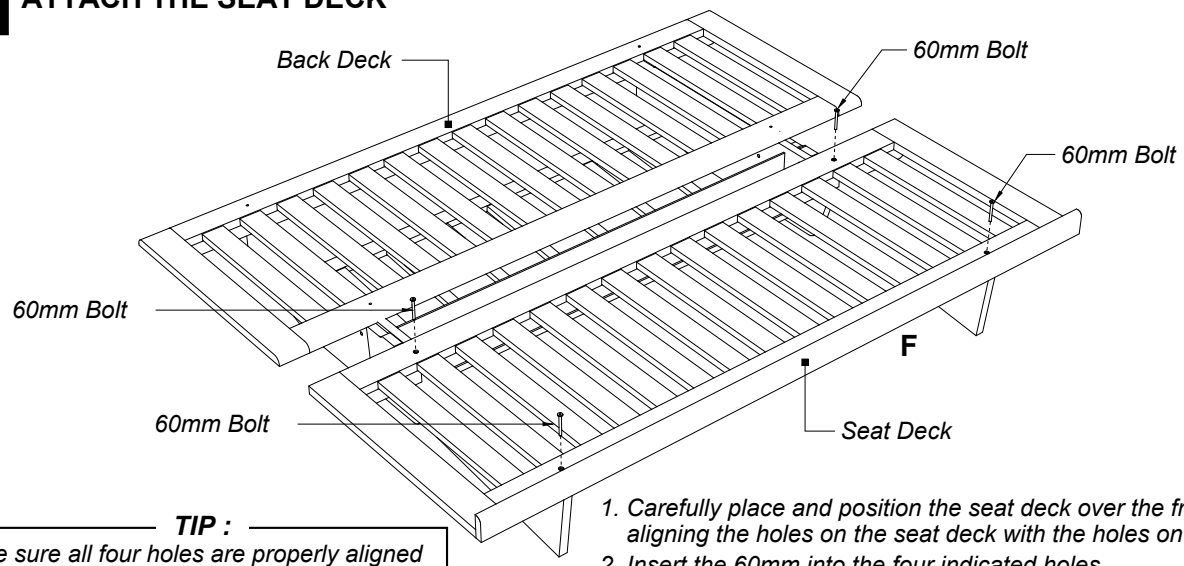



TIP :
Make sure all four holes are properly aligned before tightening the bolts.

1. *Carefully place and position the seat deck over the front legs, aligning the holes on the seat deck with the holes on top of the front legs.*
2. *Insert the 60mm into the four indicated holes. Use the allen key to turn the bolts clockwise and tighten them*

3.2 INSTALL THE LOCK AND DRAWER

Note: Drawer assembling instruction is located in the drawer box

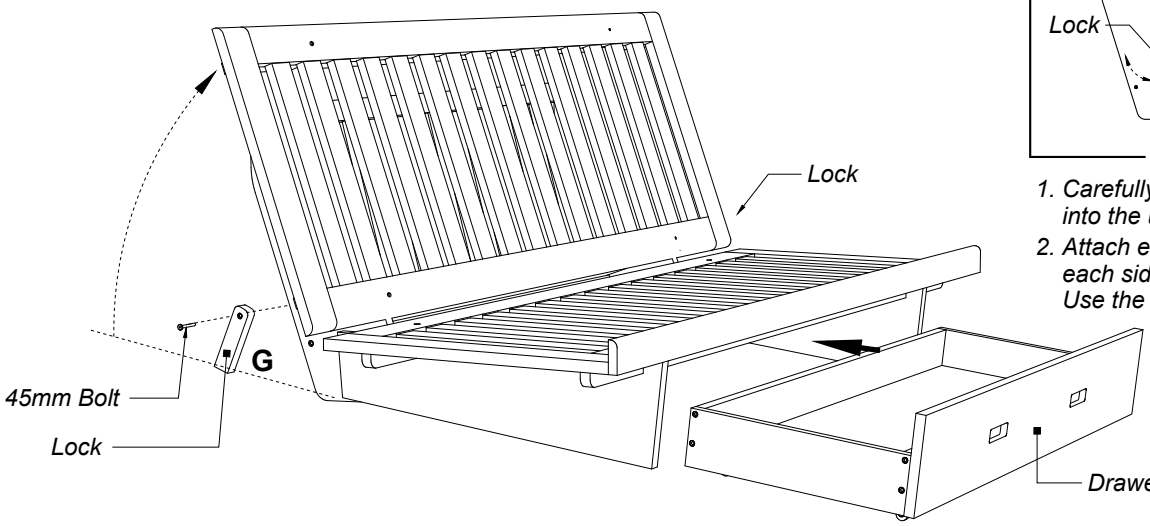

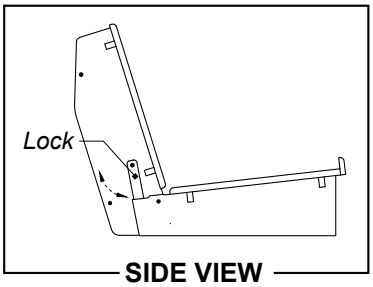


SIDE VIEW

1. *Carefully lift the back deck into the upright position.*
2. *Attach each locks, one for each side using the 45mm bolts. Use the allen key to tighten*

Once the drawer has been assembled, carefully slide it into the space underneath the seat deck.


3.3

OKINAWA assembly is complete..!

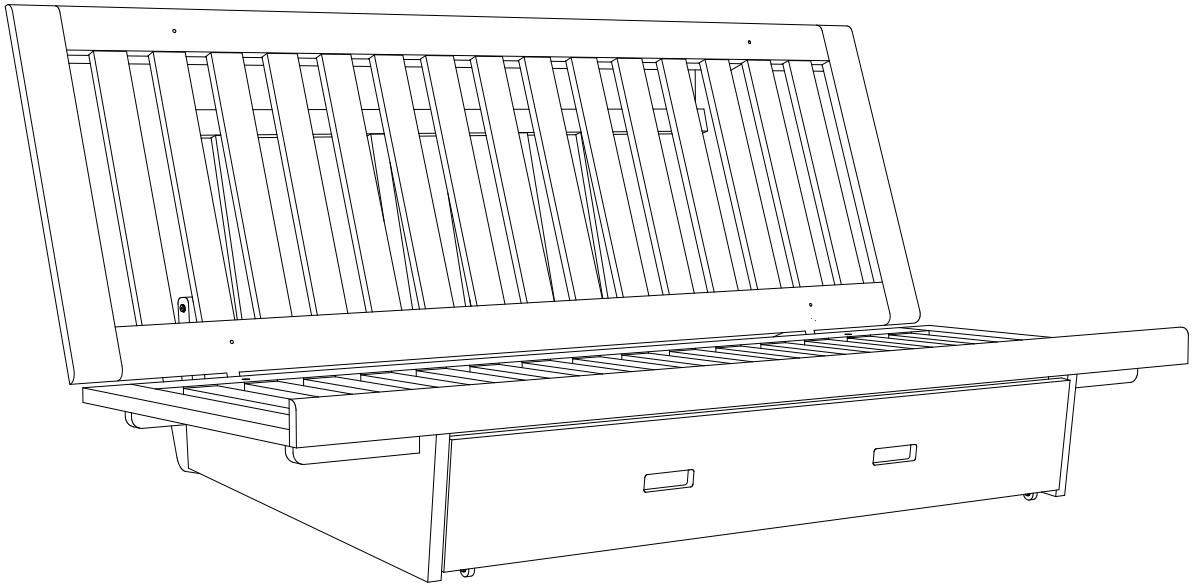


READY TO ASSEMBLE


1-PERSON

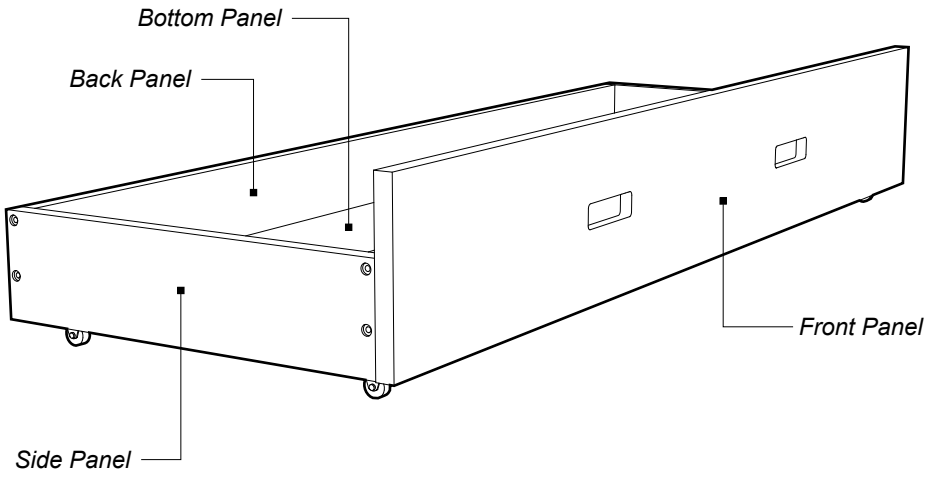

1.1 PART IN THIS BOX



FRONT PANEL x 1




BACK PANEL x 1



SIDE PANELS x 2
(RIGHT & LEFT)



SIDE SUPPORT x 2



CENTER SUPPORT x 1



BOTTOM PANEL x 1

1.2 HARDWARE IN THIS BOX



Wooden Dowels x 12 Pcs




35mm Bolt x 8 Pcs



Allen Key x 1 Pc

2.1

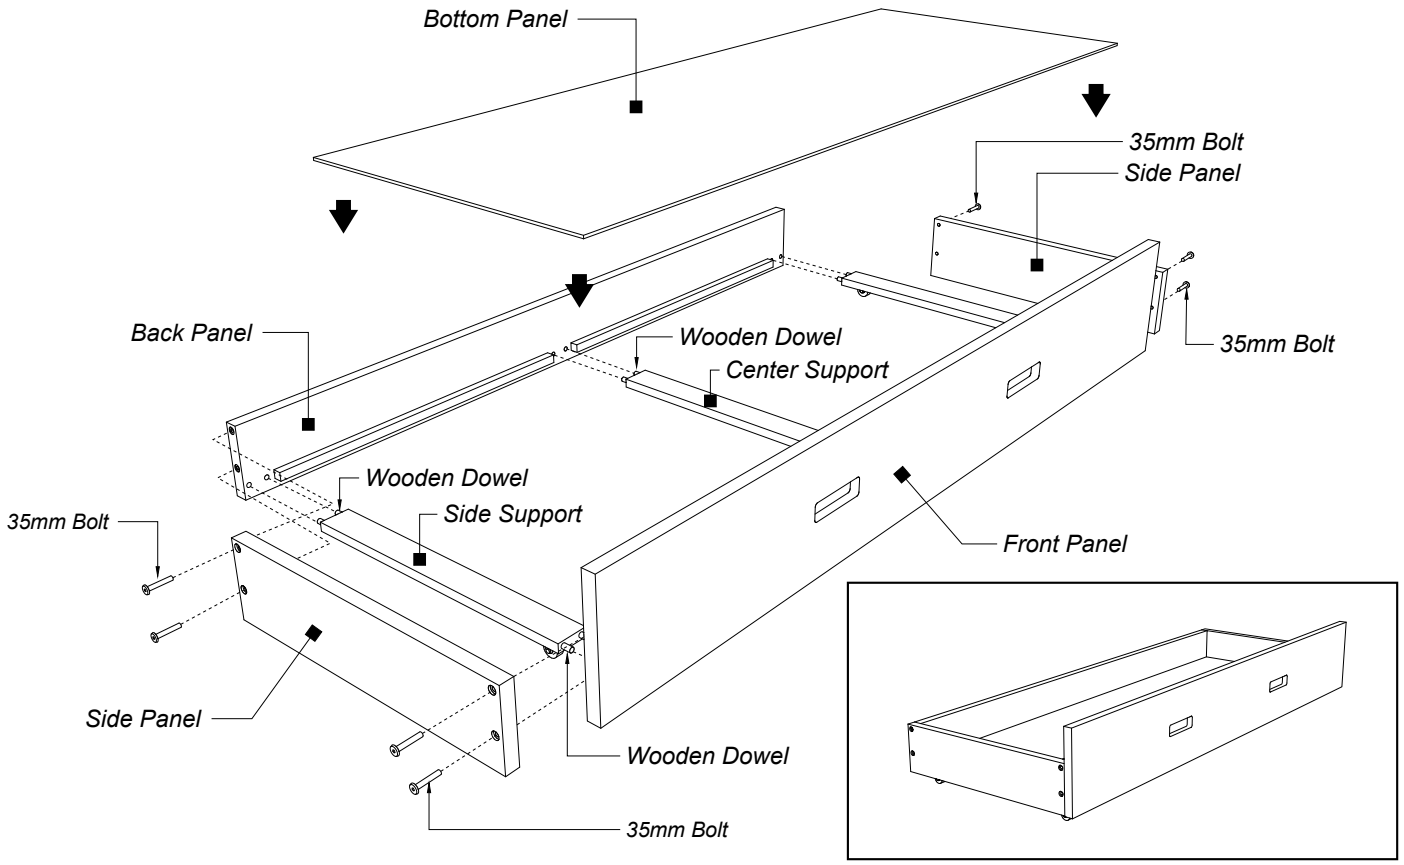

2.2

OKINAWA DRAWER

1. Insert the wooden dowels into the indicated holes on the side supports and center support.

2. Connect the front panel with the back panel using the side supports and center support. Carefully attach the side supports and center support to both the back panel and front panel.

3. Attach the left and right side panels to form the drawer by inserting the 35mm bolts into the indicated holes on the side panels. Use the allen key to turn the bolts clockwise and tighten then.

4. Position the bottom panel and carefully lower the bottom panel into the drawer frame.

Assembly done!