


COLD WEATHER START KIT

PART# 6732926225

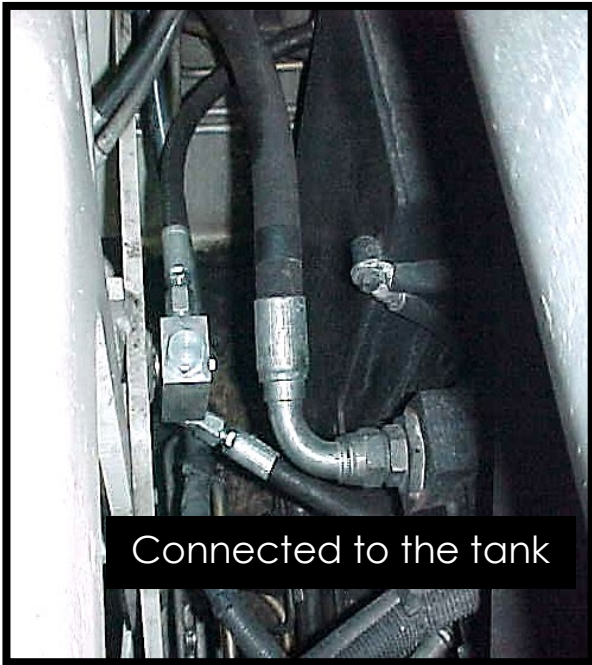

TO CONNECT TO TANK:

- Find the nearest spare return port in front of the hydraulic tank.
- Install the 90° boss fitting.
- Mount the aluminum block of the cold start kit onto a convenient spot on the frame with the included bolt.



TO CONNECT TO THE PUMP:

- Remove the test fitting from the GP Pump.
- Install the "T" of the cold start kit onto the GP pump.
- Replace the test fitting onto the "T" of the cold start kit.