

CrocBox

Go to www.crocboxes.com for installation video

Ideal Installation

Tools Needed - 1 - Spade Shovel
2 - 40 Lb Bags of Pea Gravel

- 1) Determine where you would like your Crocbox located.
Bury in a level area with nothing behind the box for 3 feet.
- 2) Place Crocbox in desired location and trace the bottom of the box on the ground. i.e. powder or landscaping spray paint
- 3) Dig the hole for your Crocbox. Keep the sides of the hole as vertical as possible and the bottom as flat as possible. The hole needs to be 12-13 inches deep.
- 4) Fill bottom of the hole with 3-4 inches of gravel and keep it as level as possible.
- 5) Place Crocbox in hole and fill in any voids on the sides with extra dirt and compact to ensure snug fit.
- 6) Pay special attention that the Crocbox lid is flush with ground. If installed correctly, the Crocbox will virtually disappear and you can mow right over it.
- 7) Your Crocbox is now ready for you to practice more.




CrocBox

Thank you for purchasing the American made Crocbox.
Visit www.crocboxes.com for our
other products and accessories.


Please visit:
www.crocboxes.com
once again, Thank you
The Crocbox Team

Step 1

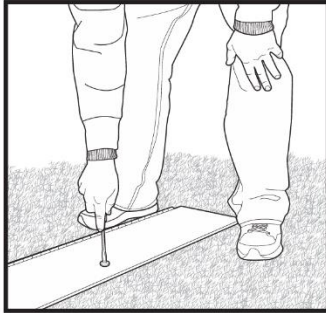


Open Latches with Flat Head Screwdriver

Step 2

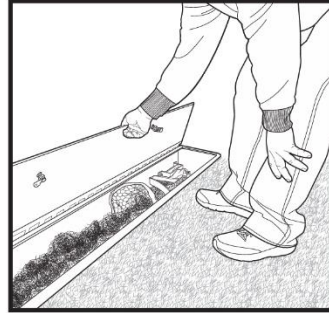


Open Box Lid to reveal Net

Step 3

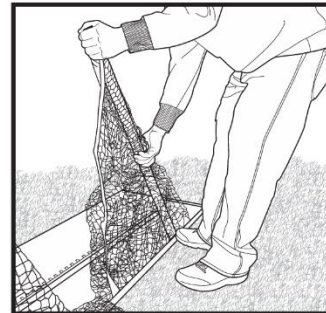


While facing the Box, lift the Top Pole in the Box to the Left

Step 4

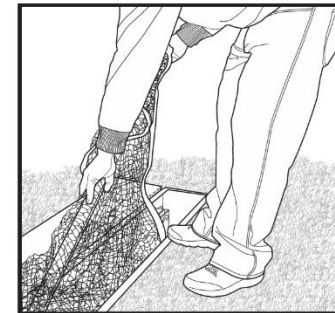


While facing the Box, lift the Bottom Pole to the Right

Step 5

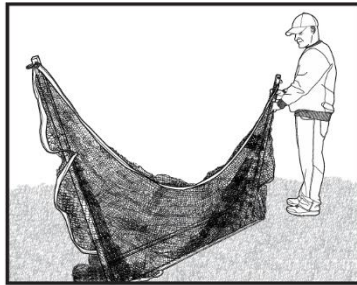

Extend the Right Pole until the Push Pin Locks into place

Step 6

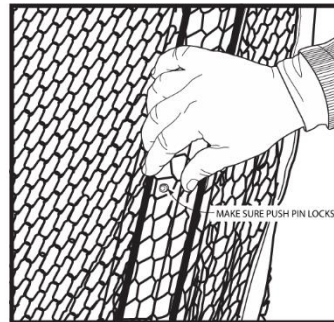


Make sure Push Pin locks into place

Step 7




Lock the Right Pole into place by moving the Pole to the right inside the bracket until it stops

Step 8

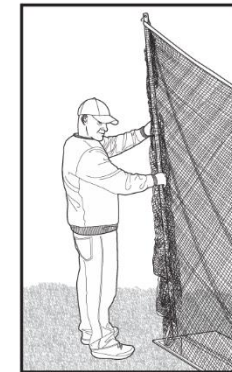

Extend the Left Pole until the Push Pin Locks into Place at the full Extended Position

Step 9

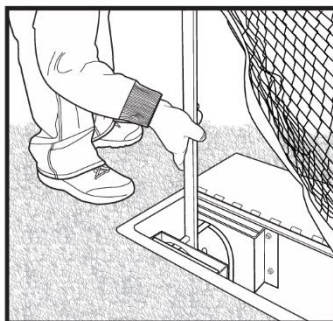

Lock Left Pole into place by moving the pole to the left inside the bracket until it stops and slides down

Putting Net Away

Step 1




Put Poles down in the reverse sequence that was used to assemble the Unit. Remember to lift pole up in the Bracket before releasing Push Pin

Step 2



While facing the box, place the Right Pole in first, followed by the Left Pole

Step 3

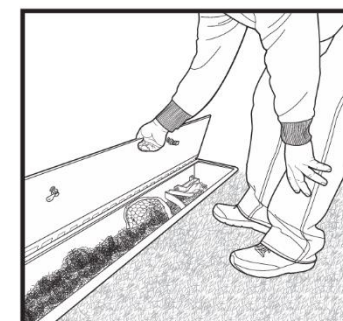

Close Box Lid to Protect Net and Relock Latches