

# **BARTON**

**Industries.**

**Attention:** If you have a 2013 and newer Mustang, please make sure to check your stock box before installing Our Barton Short Throw Shifter. There has been a minor change in the stock box. Not every 2013 and newer vehicle has this change.

**Once** you have un-installed your stock shifter and before you begin to install the Barton Short Throw Shifter, please measure from the flat surface on the top of your box, to the top of your reverse lockout. The New box design will measure **2 inches** in height **as shown in the photo.** (Old box height is **1.800 inches**).



**After** you have taken the measurement and if the height of your reverse lockout is 2 Inches, you need to turn your OEM handle 180 degree's. Completely remove screw on side of handle, Rotate your handle 180 degree's. Then slightly push down on the handle, and re-install screw. Make sure to fully remove the screw before rotating the handle to prevent the screw from marking the sleeve on the shaft. After rotating 180 degree's it will put the 2013 mark to the driver's side of the vehicle facing the reverse lockout. **As shown in the photo.**



Any questions, please call (607-863-4757) Mon-Fri, 7am-5pm est. Or Email [Dave@bartonindustries.com](mailto:Dave@bartonindustries.com) WE THANK YOU FOR YOUR PURCHASE.

# 2011 Mustang Barton Industries Short Throw Shifter Installation Instructions



Barton Industries

349 Rout23 Cincinnatus NY 13040

(607) 863-4757

Thank you for purchasing the Barton Industries Short Throw Shifter. Our Short Throw Shifter will have approximately 40% reduction in throw. The shifter will have a very solid mechanical feel. Some noise may be present at times. This noise is slight however it can vary from every vehicle. Resting your hand on the shifter will cause excessive noise, and can cause premature wear on the shifter and transmission.

**IMPORTANT:** Anytime working on a vehicle, make sure you are working on a clean level surface. Make sure car is in gear and emergency break is set. Allow adequate time for the exhaust and other components to cool prior to installation. Please read the instructions through completely before beginning installation so you can better understand the process. We recommend doing all work on an automotive lift. If you do not have access to a lift we recommend taking it to someone who does.

Barton Industries will not be held accountable for any damages occurring before, during, or after the installation process of the Short Throw Shifter.

INSTALLATION VIDEO AVAILABLE AT

[www.bartonindustries.com](http://www.bartonindustries.com)



**\*\*BEFORE BEGINNING ANY WORK, MAKE SURE VEHICLE IS ON A LIFT OR ON JACKSTANDS.\*\***

1.

STEP 1

Unthread the factory shift knob by rotating it counter clockwise .



STEP 2

Open the center compartment and free the center trim by pulling it upwards from the center console. It's easiest to start on the passenger side rear corner.



STEP 3

Unclip the trunk, traction control, and hazard lights accessory harness.



STEP 4

Carefully set the center trim piece on the passenger seat being careful not to damage any wiring in the process



STEP 5

Remove the two plastic hold downs. The passenger side unscrews, and the driver side pulls straight up.



STEP 6

Pull back the insulation to reveal the rubber dust boot.



STEP 7

Remove rubber dust boot by pulling it up and off the shifter.




STEP 8

Carefully raise car in the air. We recommend using a lift, however properly used jack stands could suffice. Use jack stands at own risk.

STEP 9

Using a 10mm socket, loosen nut as pictured a few turns, this is on the passenger side. There is no need to fully remove the nut.

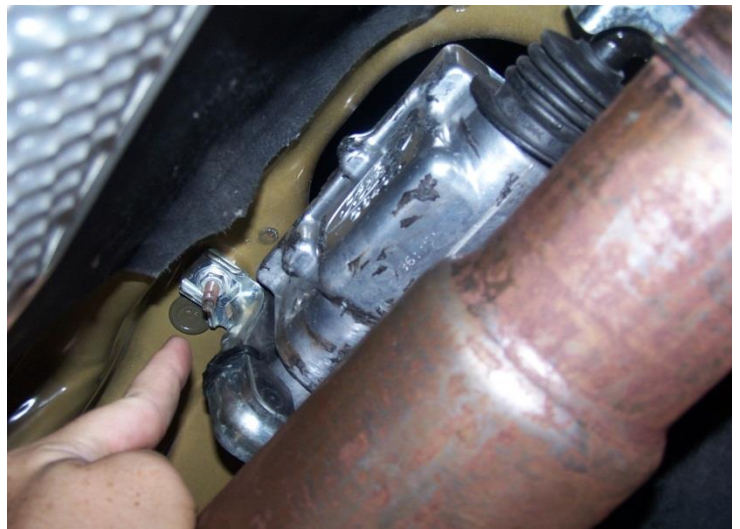


### STEP 10

Using a 10mm socket, **remove** nut on driver side of vehicle.



### STEP 11

Pull down the driver's side of the hanger and separate the hanger from the casting. Some soapy water may aid in this process

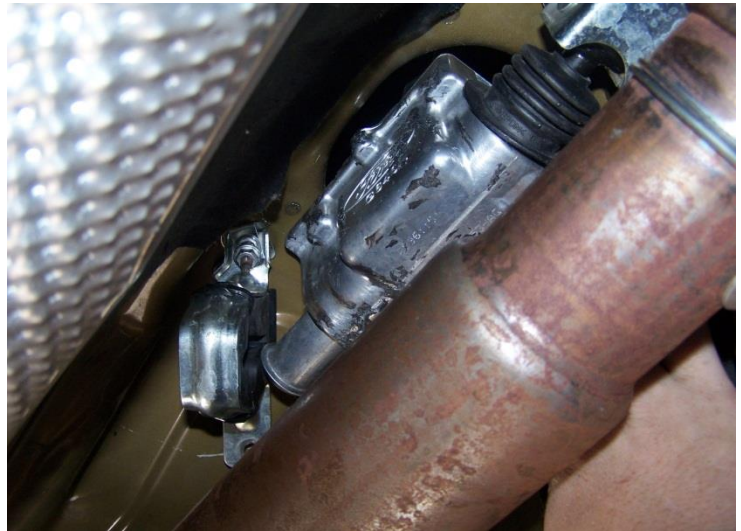

### STEP 12

Using a 3/8 socket, remove the 4 bolts on the outer corners of the shifter assembly. It may be necessary to move and tilt the shifter around to gain access to some bolts. Place bolts to the side, these will be re-used.



STEP 13

Remove the shifter assembly from the car.



STEP 14

Remove the black plastic pivot cup from the factory shifter assembly, and re-install onto the new Barton assembly.

STEP 15

Place the Barton shifter into the shifter housing and using a 3/8 socket re-install the 4 bolts removed from step 12.

**NOTE: DO NOT OVERTIGHTEN BOLTS.**



STEP 16

Re-attach the hanger to the shifter housing and re-tighten the nuts using a 10mm socket.



### STEP 17

Re-install the dust boot making sure the small opening on the bottom of the boot falls into the recess at the bottom of the shifter. It is easiest to get the driver side in place and then pull it over to the passenger side.

**NOTE: DO NOT OVER LOOK THIS STEP.**

**THE BOOT MUST WRAP AROUND AND FALL INTO THE GROOVE AT THE BOTTOM OF THE SHIFTER. A QUICK VIDEO OF THIS CAN BE FOUND ON OUR WEBSITE.**



### STEP 18

Tuck the boot into the body seam and pull the top of the boot down so that it falls beneath the under cut.



### STEP 19

Put the insulation back into position and re-install the 2 plastic hold downs.



STEP 20  
Re-attach the harness clip.



STEP 21  
Put the center trim back into position and re-attach.



STEP 22  
Thread the shift knob adapter as far down as it will go.



### STEP 23

Thread the shift knob all the way down. If the shift pattern does not line up then back it off until it's lined up and rotate the adapter up to the knob and tighten the knob against the adapter.



**NOW – Go ENJOY your NEW SHIFTER!!**

Thank you for your order. Please be sure to check out our online store that we are always adding new products to at:

[www.bartonindustries.com](http://www.bartonindustries.com)

If you have any questions during your installation, please call Dave:

Mon-Fri. 9am – 5pm (607) 863-4757

Or email at: [dave@bartonindustries.com](mailto:dave@bartonindustries.com)

**30-Day Money Back Guarantee:** Shifter MUST be returned in 30 days from the day of UPS or USPS delivery. This means we or one of our dealers must have the shifter in our hands in 30 Days. The shifter MUST be returned in its original packaging along with all paper work and accessories including the receipt. Shifter CANNOT be damaged and Barton Industries reserves the right to refuse any return at their sole discretion. Normal wear and tear from the installation process and usage is acceptable; ANY blatant attempt to damage the product and return it will be REFUSED. If the above criteria is met the FULL purchase price and shipping will be returned to the end customer. Any costs associated with the return, shipping and insurance, is the FULL responsibility of the end user.

**WARRANTY DISCLAIMER:** Barton Industries warrants any unit to be free of defects in materials and workmanship for a period of one (1) year from the date of purchase. WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, abuse, improper repair, or unauthorized modification. Every Product we sell, we CNC machine and every piece is fully tested in real world environments. However, materials wear and everybody will treat the product different. When we design a product we do so in a manner that allows any part of the end product to be replaced or repaired. Any product deemed defected in the one (1) year period will be repaired or replaced by Barton Industries. Any repair or replacement of parts out side of the one (1) year period will be subject to a repair fee.