



Westland Whirlwind HAS 7 Conversion & Mk 30 Torpedo

AC-242

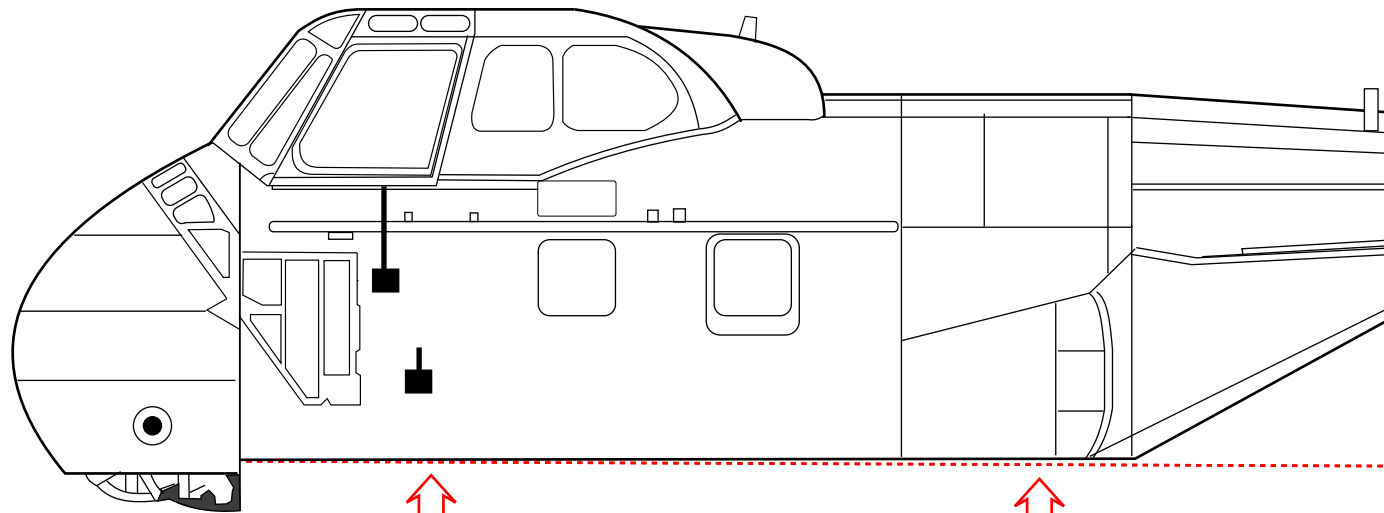

Remove kit part and fit new resin lower fuselage



1. Remove the lower fuselage along the Kit engraved line as shown red dash line.
2. Clip the lower fuselage fin as well.
3. Using the old cabin floor from the kit, mark the positions of the two bulkheads and fix them to the new resin lower fuselage using super glue.
4. The old kit floor is not used.
5. Assemble the rest of the kit as per instructions.
6. Once complete, fit the new resin lower Fuselage onto the completed model.

Cut Line



1:72
Scale