




This set comes with both the early kinked engine pylons and the more common late style straight pylons. The RAF VC-10 all used the late style pylon as shown below.



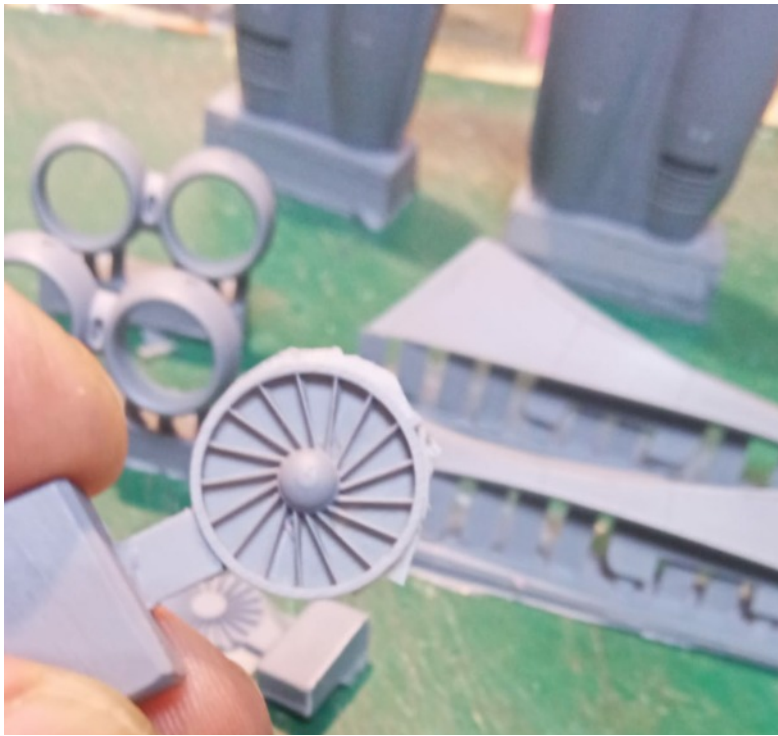

Sand both engine blade sets so that only the blades are left. This is delicate but worth doing carefully. Inner and outer blades are slightly offset as pictures.

