




ON TARGET

Military vehicle Range

AIR-GRAPHICS

MV-1004

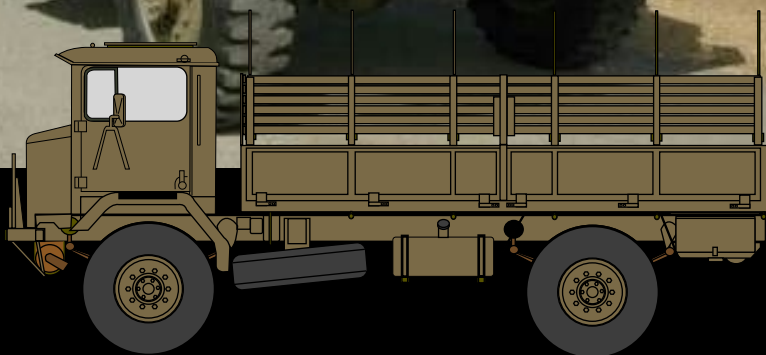






1:72
Scale

INTERNATIONAL ACCO

Mk.3 2.5t 4x4 GS Truck

AIR-GRAPHIC MODELS

General Arrangement Drawings

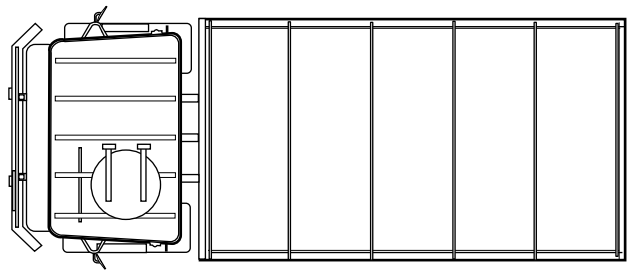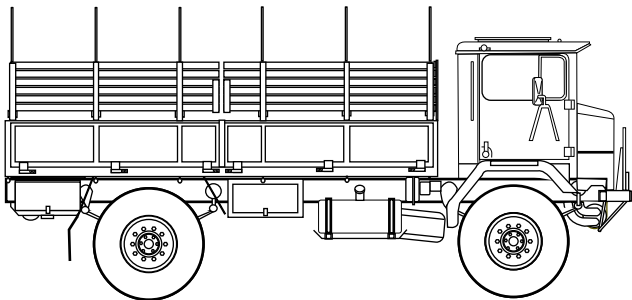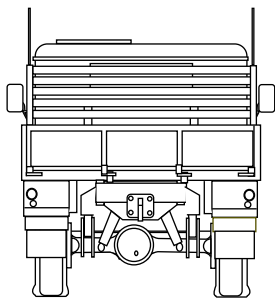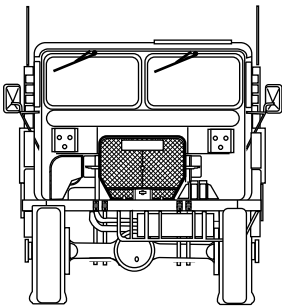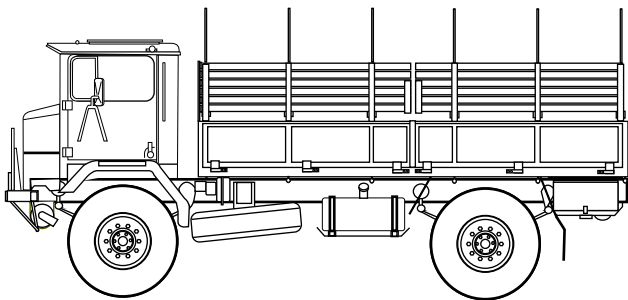

International ACCO Mk.3 2.5t
General Service Truck

Drg No: MV-721004-01

Drawn: Gary Madgwick

1/72 Scale @ A5

16/08/2021




Copyright Gary Madgwick
Air-Graphic Models 2021

1

Stage 1 - Clean up and Preparation

Clean up all the resin parts, cut from resin runners and wash in warm soapy water. Once all the parts have been washed & dried, put back in plastic bags for safe keeping.

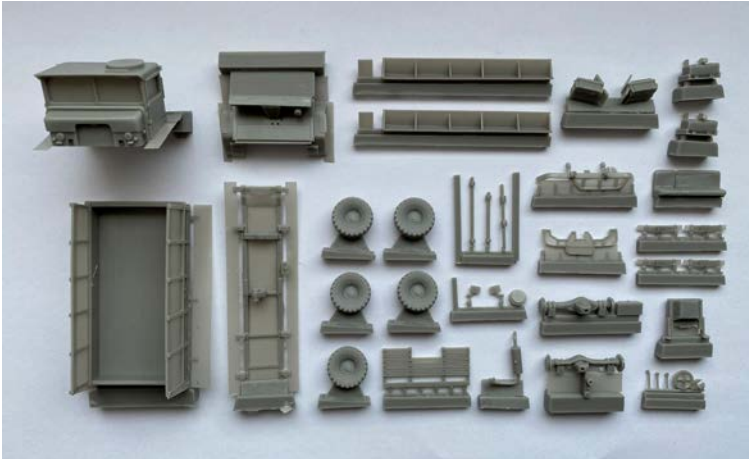

2

Chassis Assembly





Cut out the chassis in stage 1. Be very careful as this is delicate.

Fit the leaf springs Parts 2 - 5 and then the axles.



Tip, Dry fit drive shaft 7 to axle 6 before gluing.

You will need to drill out the hole in the Front cross bar for shaft 10.

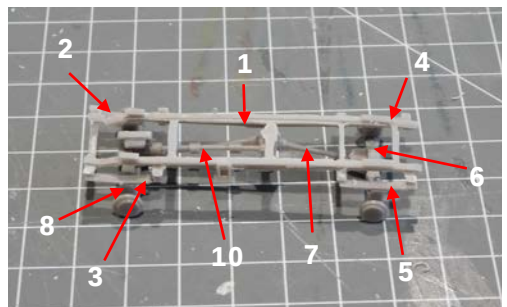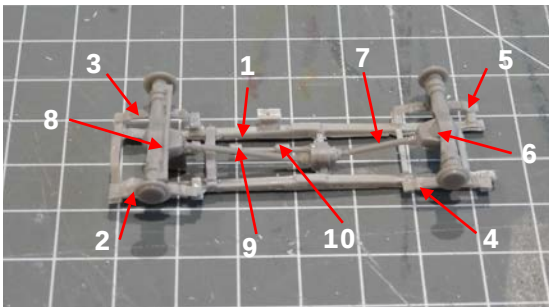

3

Wheels

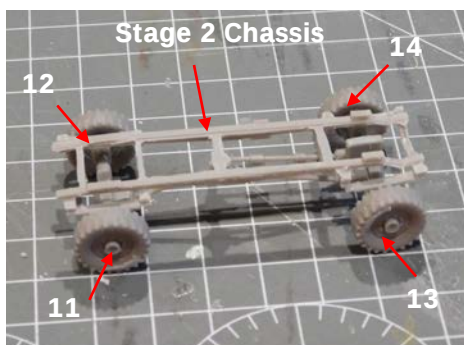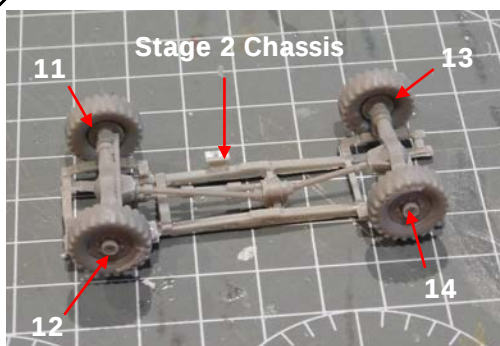

Fit wheels one at a time and check chassis sits level. When fitting final wheel check chassis does not rock. There is a small amount of adjustment that you can do on each wheel inner hub.


4

Rear Body

Clean all the resin flash from the rear body shell in Stage 1.

Fit the front body shell resin piece No 28 before fixing the body to the chassis.


Fix rear body to chassis and then fit the spare wheel holder Part 27 and spare wheel Part 15. Next fit the rear underside boxes Parts Part 23 & 24.

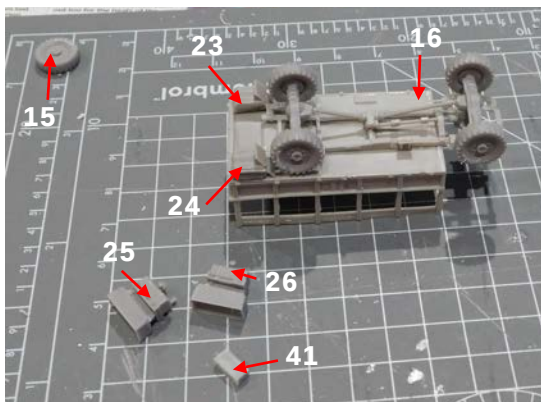

Fit fuel tanks either side. Parts 25 & 26.

Fit mud flaps Parts 19 & 20.




Fit rear tow bracket Part 21 followed by the tow hook Part 22.

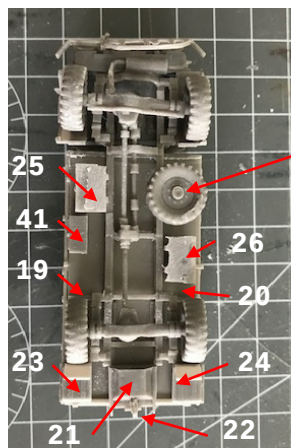

27 & 15



5

Cab Interior

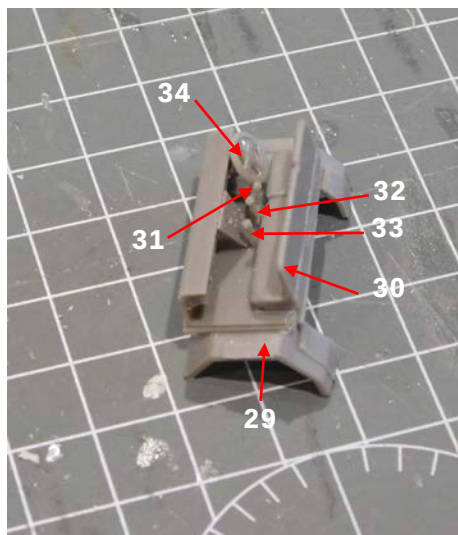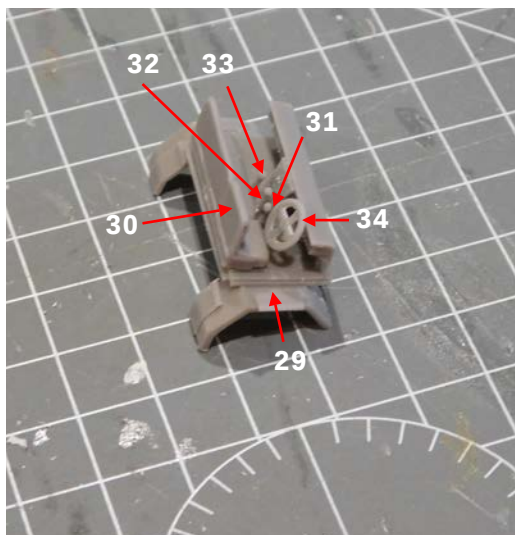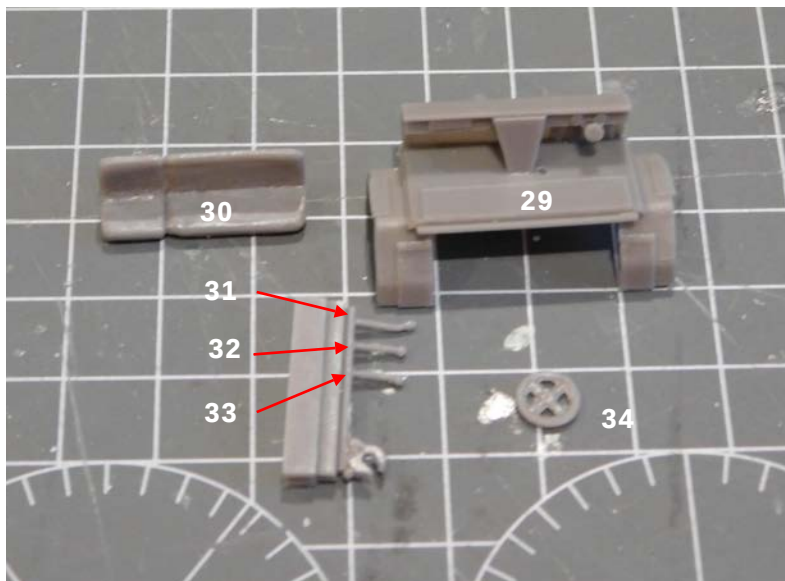

6


Cab body and details.

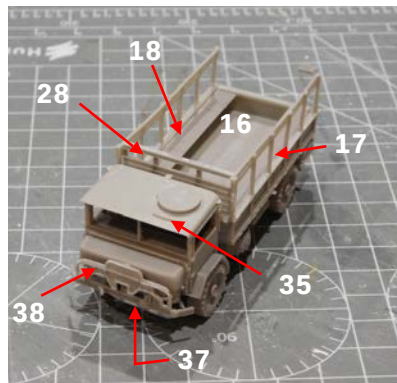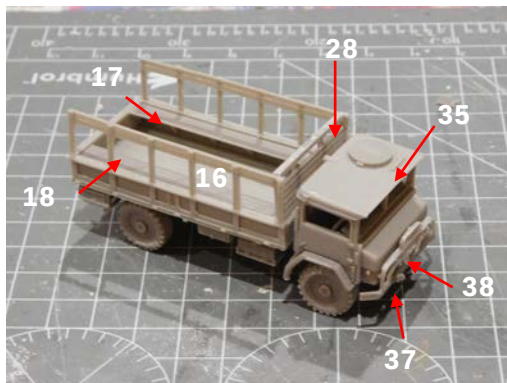


Note* Paint all of interior before fixing the cab body. We would also recommend if you are fitting glazing. (Supplied), you paint the exterior of the cab before fitting the body the the cab base and interior.

Fit bench seats in rear, Parts 17 & 18.


Fit exhaust part 36, followed by exhaust guard 37 and then grill 38.

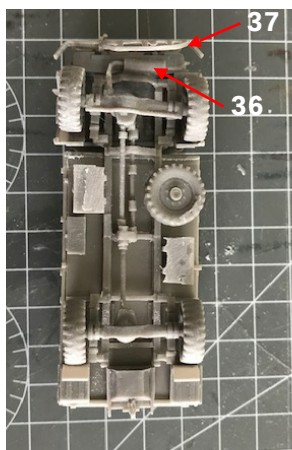

Finally fit wing mirrors
Parts 39 & 40.

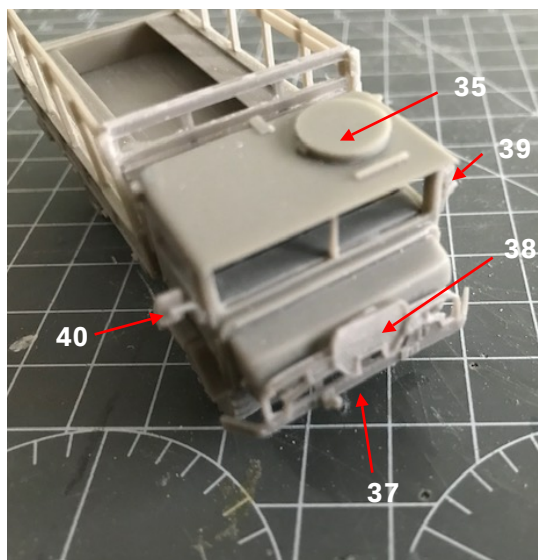

Colour Scheme and Markings


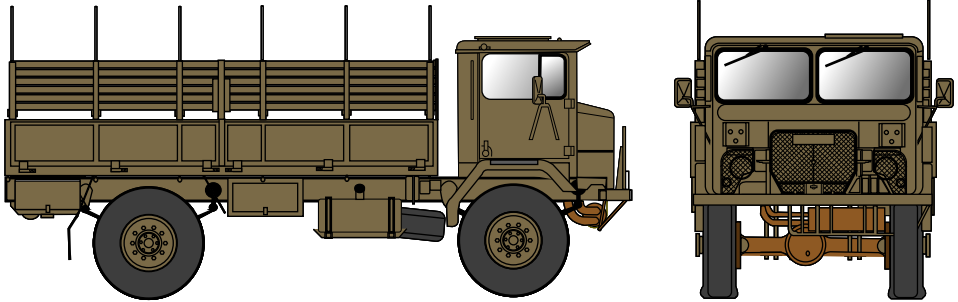


Olive Green Lustreless from 1967. Used in Vietnam on all Army vehicle.
Sometimes referred to as Olive Drab.



General pictures of the Acco
2.5t 4x4 GS Truck.

Workshop conversion to the
2.5t GS trucks in Vietnam.

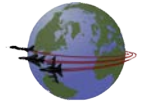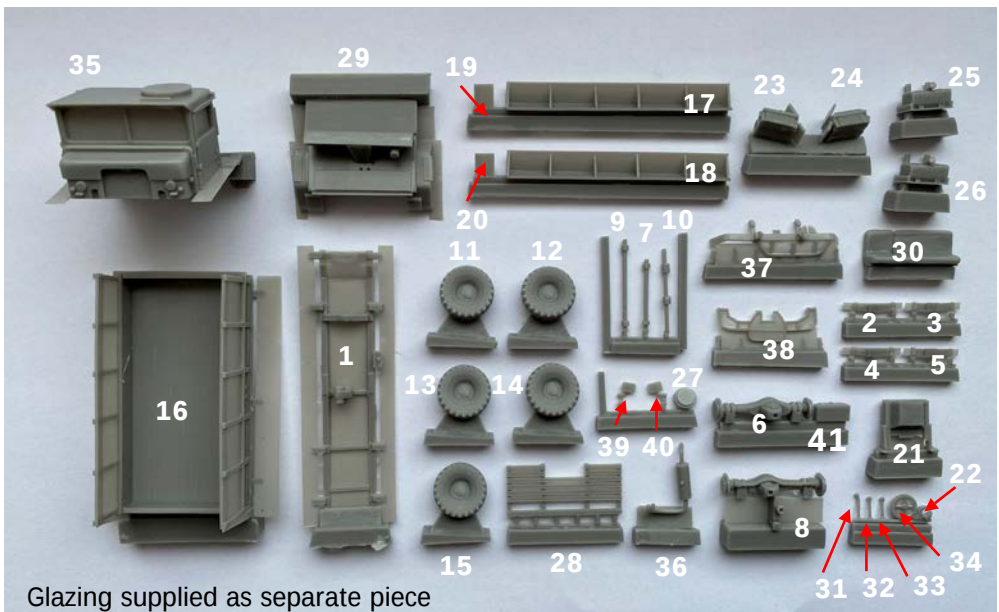

INSTRUCTIONS

- Remove any flash by gently snapping off, or cutting with a scalpel and then lightly sanding.
- Only use Super-glue or a two-part epoxy glue to fix parts.
- Gluing is easier if mating surfaces are slightly sanded to roughen the resin before gluing. Also clean off any dust before gluing.
- Before painting, thoroughly wash all parts in warm water with detergent.
- We recommend the application of a base coat in a light colour to show any blemishes prior to final painting.

WARNING & SAFETY!

- These parts are moulded in polyurethane resin. Please take care when sanding and cleaning up the resin by wearing a dust mask or other protective breathing device to avoid inhalation of the dust particles.
- Wash hands, resin parts and the work surface after sanding resin.
- When using Super-glue or two-part epoxy glue, please take precautions to avoid contact with skin and eyes.
- It is also advisable to wear a mask to avoid breathing in any fumes from the glue or work in a ventilated room.
- The use of barrier creams on hands or wearing disposable gloves, and working in a well ventilated area, is strongly recommended.
- Not suitable to children under 14 years of age.

Thank you for purchasing this Air-Graphics product which forms part of a range of accessories, conversion sets, decals & kits all to 1/72 Scale.

Air-Graphics: 24 Fyfield Close, Wantage, Oxfordshire,
OX12 8HN, UK.
E: gary.madgwick@air-graphics.co.uk