






Avenger T1

1:72 Scale

Beechcraft 350ER

AIR-GRAPHIC MODELS **



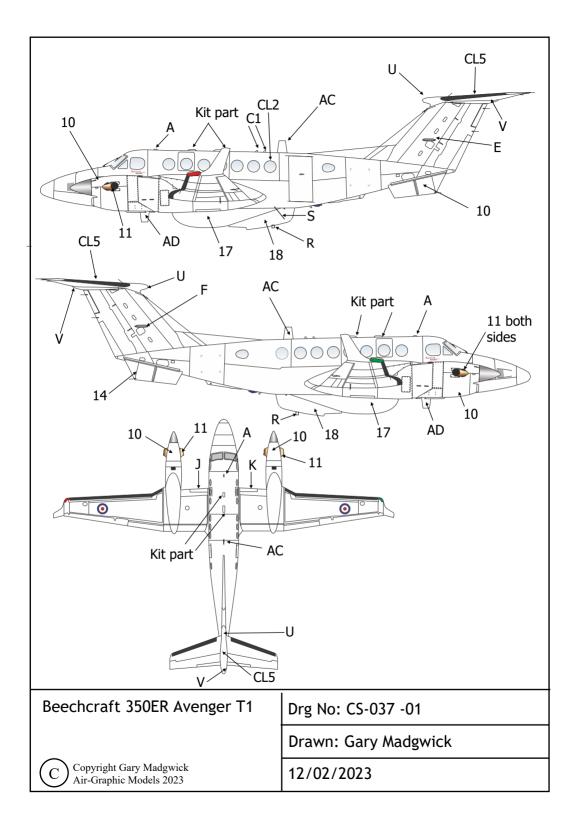


1


Cabin Assembly

Follow kit instruction Stage 1-4 for colour scheme but replace all the parts apart from G6 and G13. Use new instrument panels.


Part 5 is Military

Part 6 is civil. Decal sheet can be used for the civil instrument panel if required. (Supplied in kit)

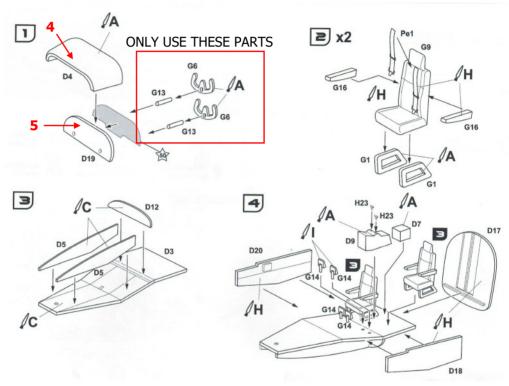

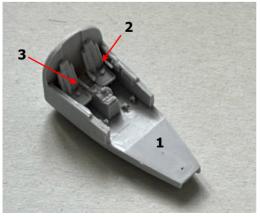

Note Parts 7 and 8 are the windows screens that go behind the main cabin windows.

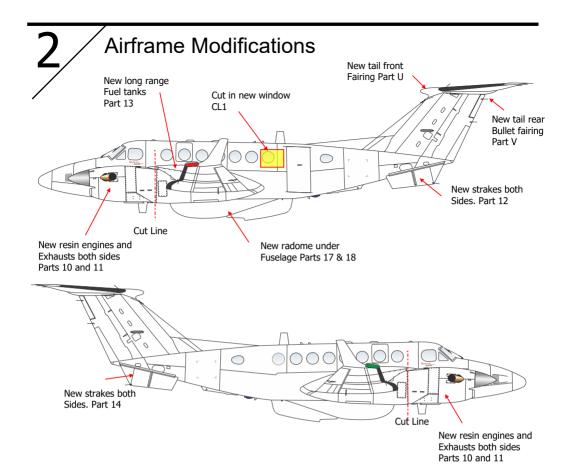













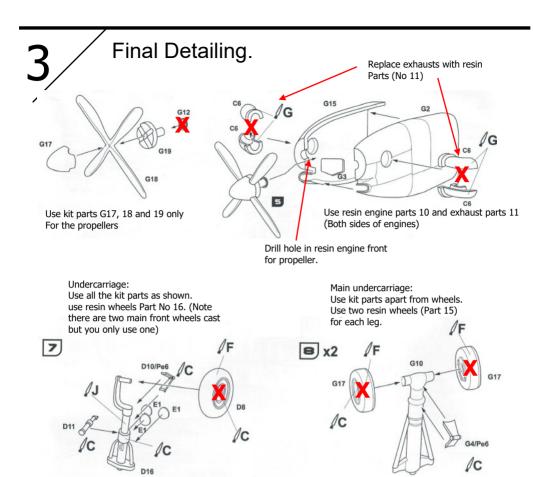



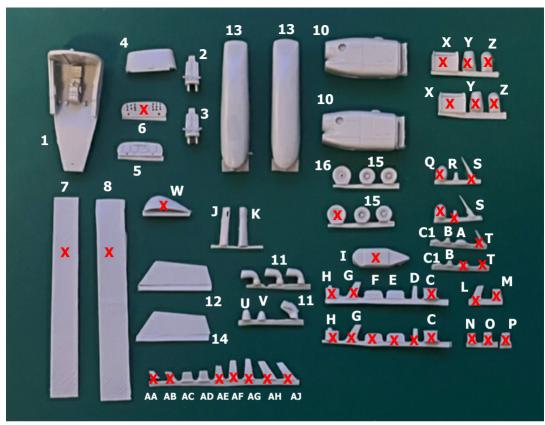





INSTRUCTIONS

- Remove any flash by gently snapping off, or cutting with a scalpel and then lightly sanding.
 Only use Super-glue or a two-part epoxy glue to fix
- Only use Super-glue or a two-part epoxy glue to fix parts.
 Gluing is easier if mating surfaces are slightly sanded to roughen the resin before gluing. Also clean off any dust before gluing.
 Before paining, thoroughly wash all parts in warm water with detergent.
 We recommend the application of a base coat in a light colour to show any blemishes prior to final painting.

WARNING & SAFETY!

- VYARNING & DAFETY!

 'These parts are moulded in polyurethane resin.

 Please take care when sanding and cleaning up the resin by wearing a dusk mask or other protective breathing device to avoid inhalation of the dust particles.

 Wash hands, resin parts and the work surface after

- Wash hands, resin parts and the work surface after sanding resin.
 When using Super-glue or two-part epoxy glue, please take precautions to avoid contact with skin and eyes.
 It is also advisable to wear a mask to avoid breathing any fumer from the glue or work in a ventilated room.
 The use of barrier creams on hands or wearing area, is strongly recommended.

 Not suitable to children under 14 years of age.

Thank you for purchasing this Air-Graphics product which forms part of a range of accessories, conversion sets, decals & kits all to 1/72 Scale.

