
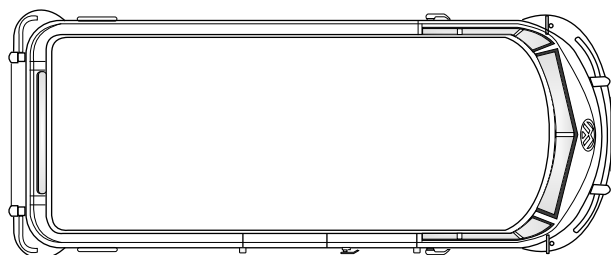
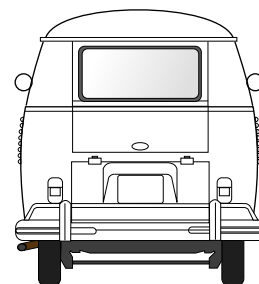
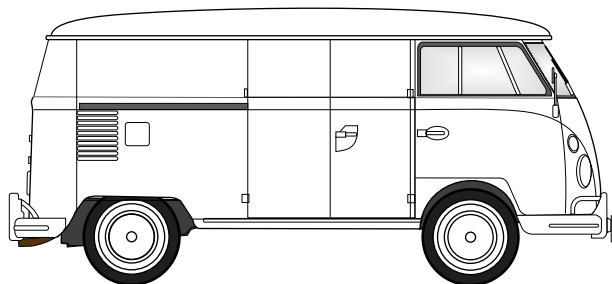
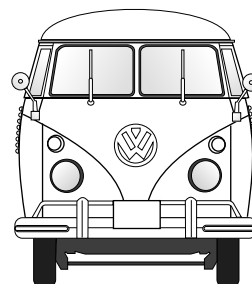


# VW T1 Combi Van Scale Plans

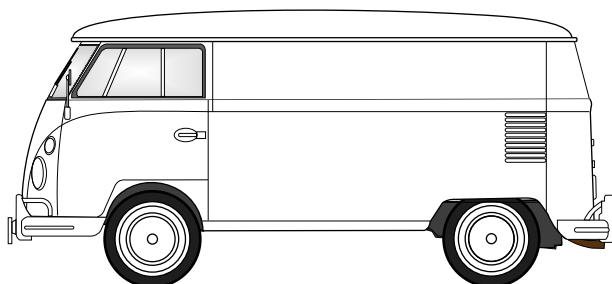

Note, we recommend  
the internal is painted  
before assembly.  
Do any filling of windows  
Before assemble of the model

VW T1 Combi Van in  
Military Service

Drg No: GSE-045

Drawn: Gary Madgwick

Scale

Not to scale


Date

14/03/2024




Copyright Gary Madgwick  
Air-Graphic Models 2024


# VW T1 Transporter Van Colour Schemes

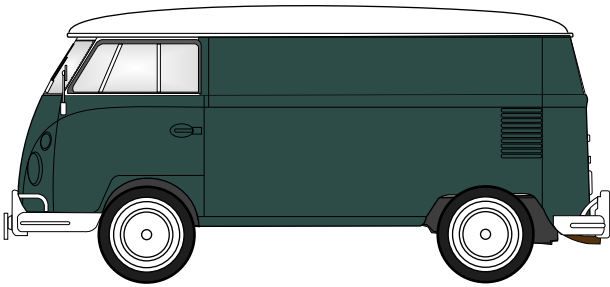


Australian Army & Air Force T1 Van 1960's  
Deep Brunswick Green with White Roof

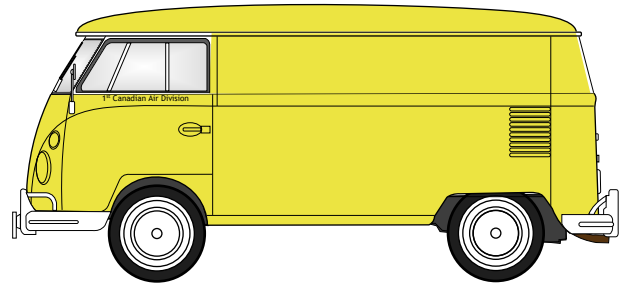


Canadian Air Force T1 Van 1960's  
CFB Baden-Söllingen  
International Yellow Colour Scheme

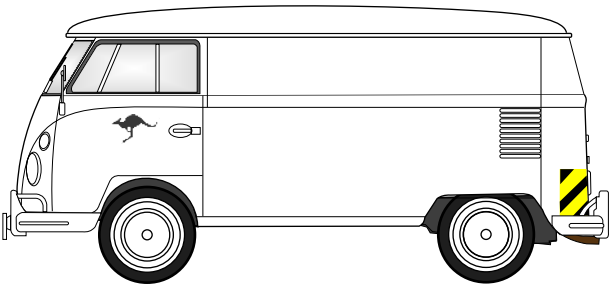


Australian Air Force T1 Van Early 1970's  
White overall seen at RAAF Butterworth, Malaya

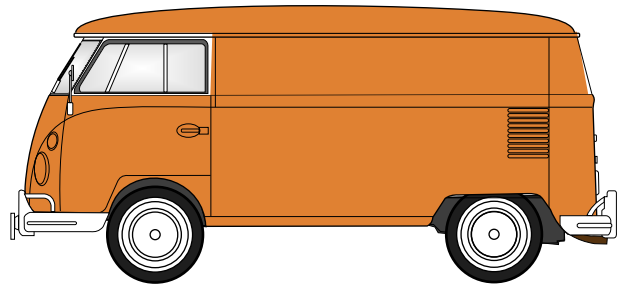


German Air Force T1 Van 1950/60's  
Orange Colour Scheme

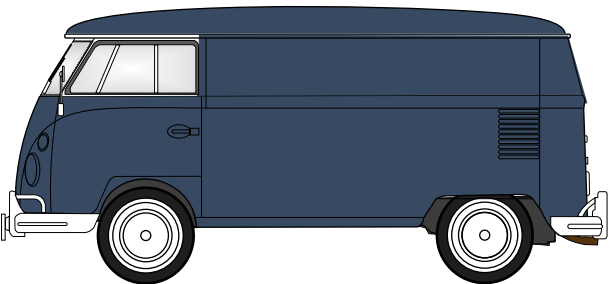

RAF T1 Van RAF Gütersloh  
Germany 1960's  
RAF Blue Grey Colour Scheme

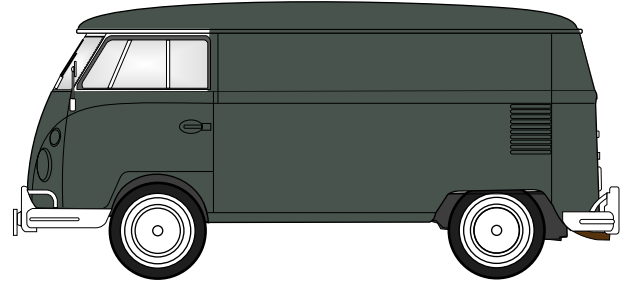

Danish Air Force T1 Van Early 1960's  
Danish Green Colour Scheme

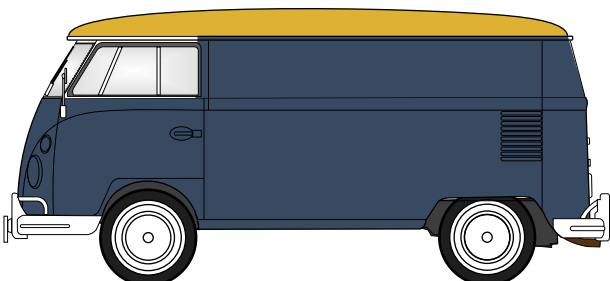

RAF T1 Van RAF Bruggen  
Germany 1960's  
RAF Blue Grey and Golden Yellow Colour  
Scheme