


STAIR NOSINGS

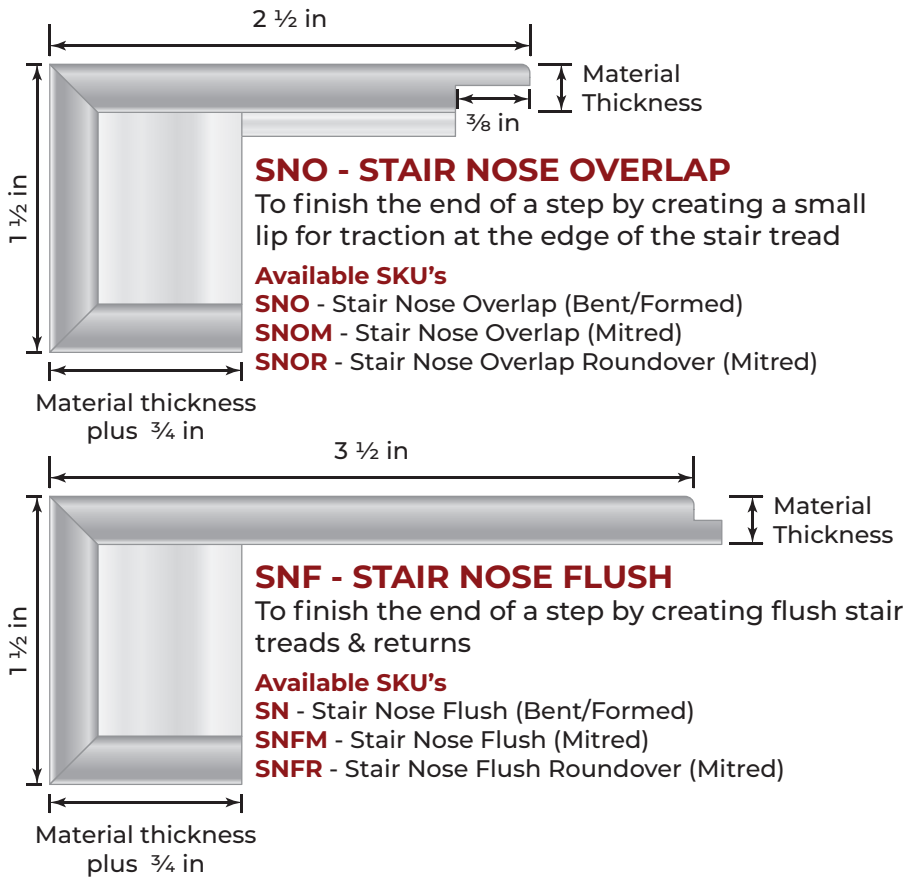

STANDARD MOLDINGS AVAILABLE

FORMED/BENT (MOST VINYL)

STAIR NOSINGS

- ▶ SNF - Stair Nose Flush
- ▶ SNO - Stair Nose Overlap

TRANSITIONS

- ▶ RD - Reducer
- ▶ TM - T-Mold (1.5")
- ▶ TM2 - T-Mold (2")

MITRED (LAMINATES & HARDWOODS)

STAIR NOSINGS

- ▶ SNFM - Stair Nose Flush
- ▶ SNFR - Stair Nose Flush Round Over
- ▶ SNOM - Stair Nose Overlap
- ▶ SNOR - Stair Nose Overlap Round Over

TRANSITIONS

- ▶ RDM - Reducer
- ▶ TM - T-Mold (1.5")
- ▶ TM2 - T-Mold (2")


Note: "-E" suffix added for painted edges (TM-E / RD-E / SNO-E etc.)

TRANSITIONS


TM - T-MOLDING (ANY MATERIAL)

To transition between floors of equal height

TM - T-MOLD 1 1/2"

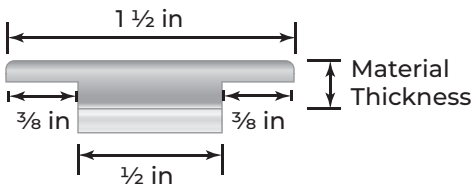


TM2 - T-MOLD 2"

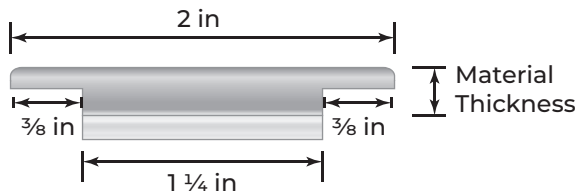


RD - REDUCERS

To transition between floors of unequal height

RD - REDUCER (FORMED)

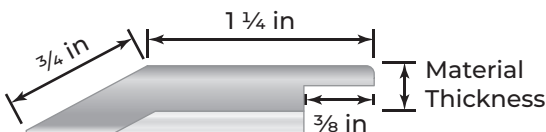

RDM - REDUCER (MITRED)

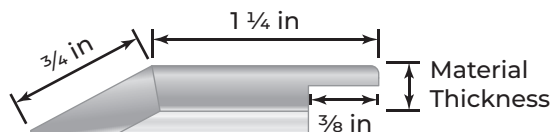

INFO@ALL-TRIMZ.COM
 CELL: 403-988-0362



FV - FLOOR VENTS


Available in 3 x 10 and 4 x 10 duct sizes
 Additional sizes available on request

ANY MATERIAL


FLOOR VENTS (3" OR 4" DUCT)

- ▶ **FVF3** - Floor Vent Flush Mount (3 x 10)
- ▶ **FVT3** - Floor Vent Top Mount (3 x 10)
- ▶ **FVF4** - Floor Vent Flush Mount (4 x 10)
- ▶ **FVT4** - Floor Vent Top Mount (4 x 10)


FVF & FVT - Floor Vent Top View

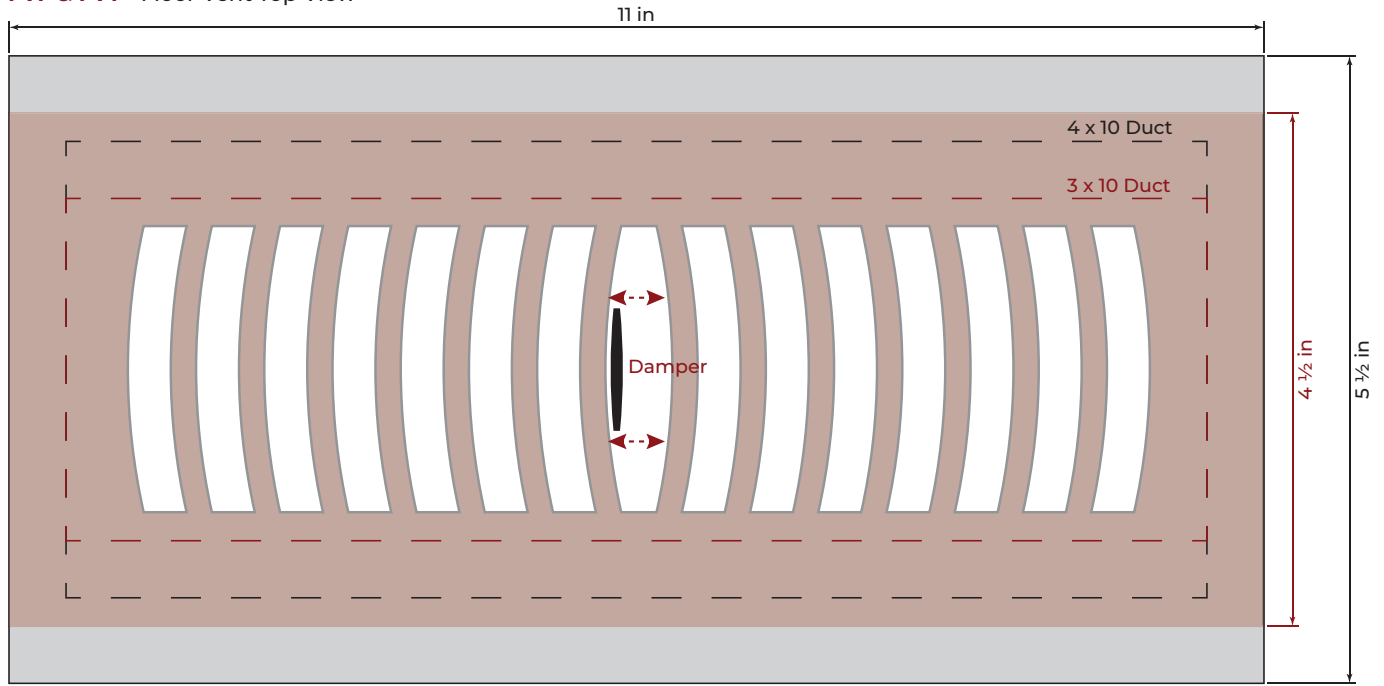


FVF & FVT - Floor Vent Side View

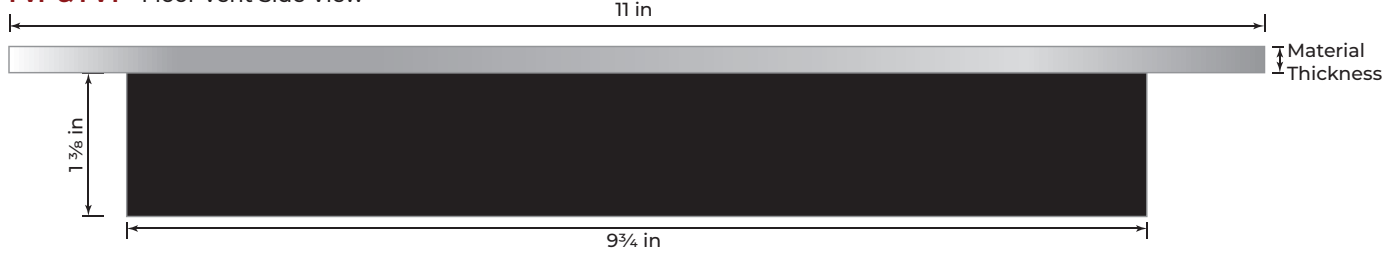


FVT3 - Floor Vent Top Mount

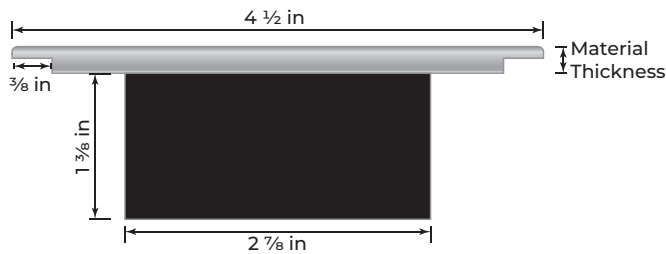

FVT4 - Floor Vent Top Mount

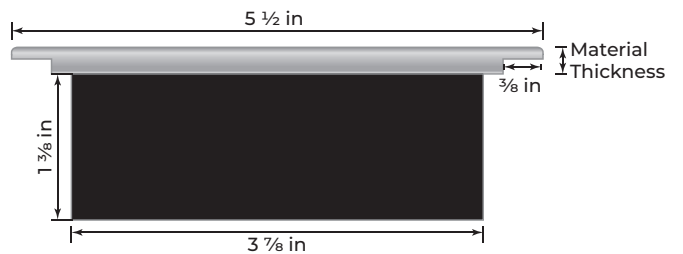

FVF3 - Floor Vent Flush Mount

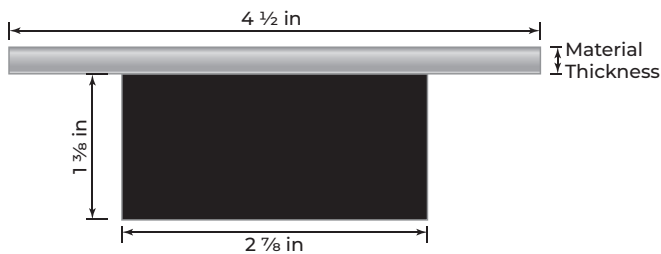

FVF4 - Floor Vent Flush Mount

