



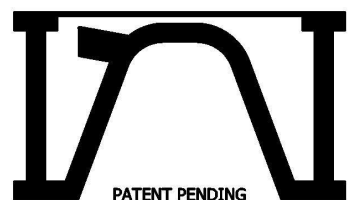


In Assembly Guide

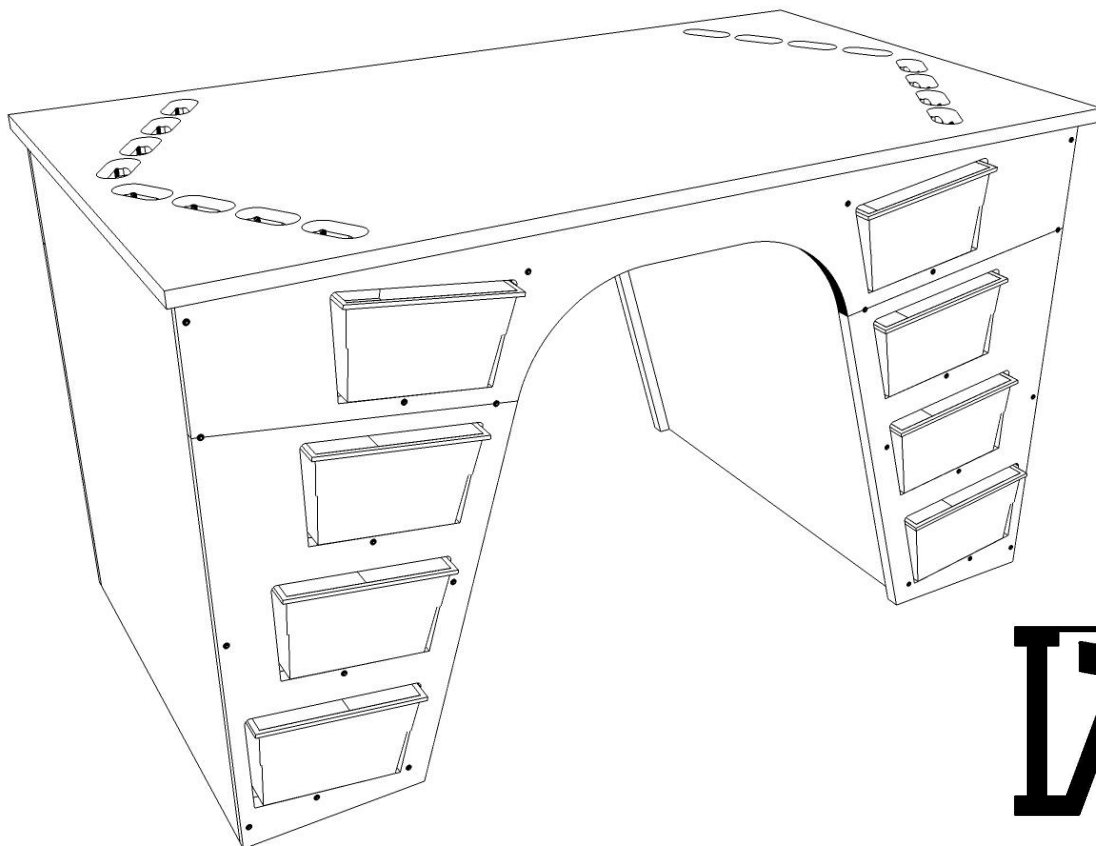


Large box contains the following items:


Top with attached hinged faces: Quantity (1)

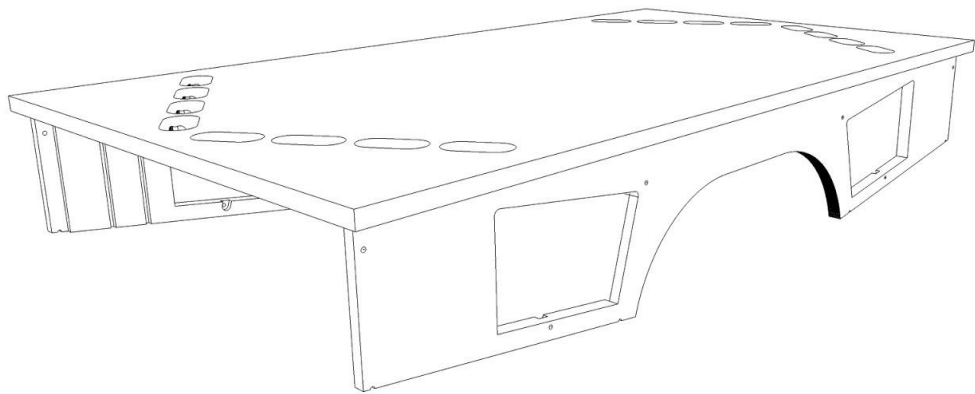


Side Panel:
Quantity (4)

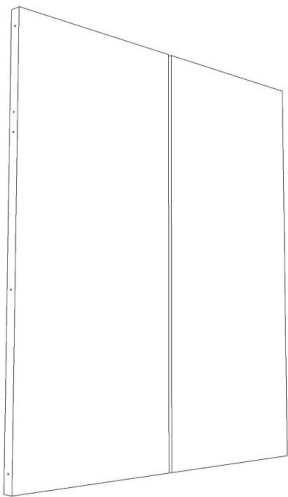


Left Face:
Quantity (2)

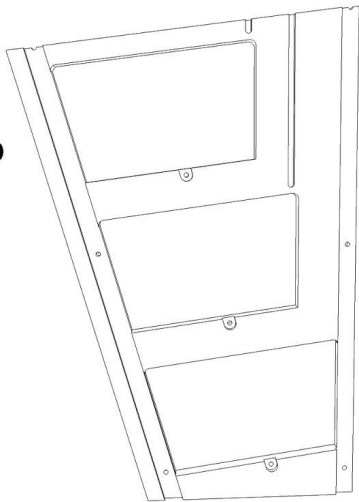


Right Face:
Quantity (2)

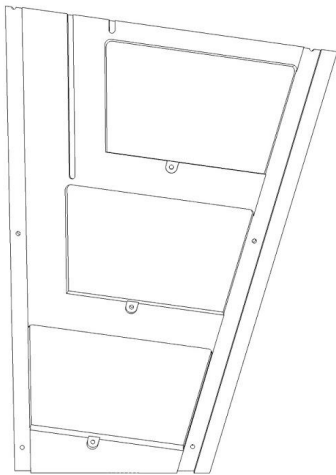


Small Baffle:
Quantity (2)

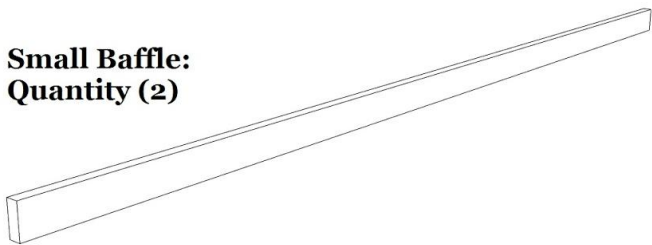


Large Baffle:
Quantity (2)

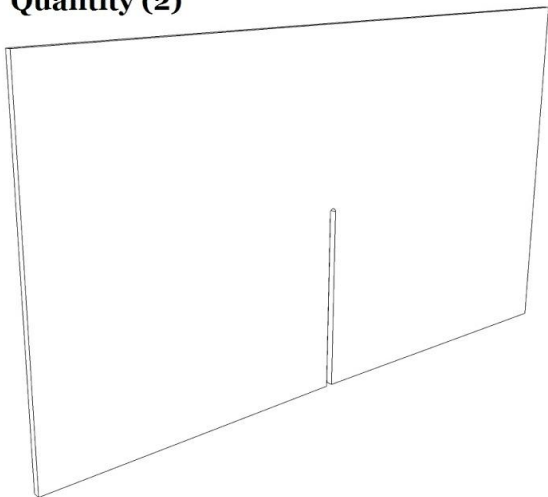


Medium Baffle:
Quantity (2)

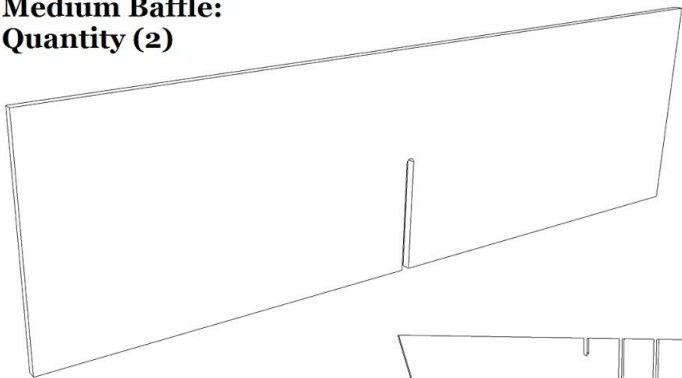


Center Baffle:
Quantity (2)

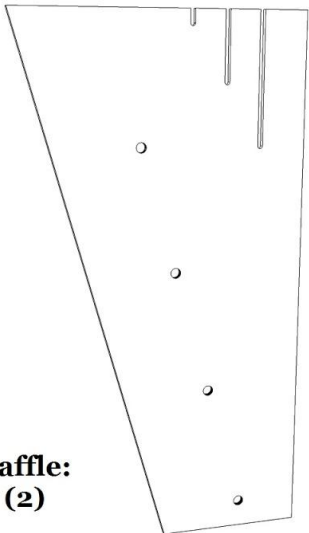

Tray Support Dowels:
Quantity (8)

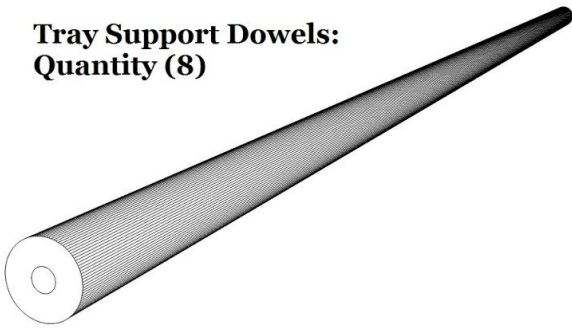


Screws:
Quantity (48)

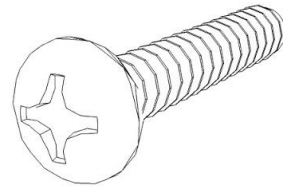


Separate small box includes the following:


Trays:
Quantity (16)

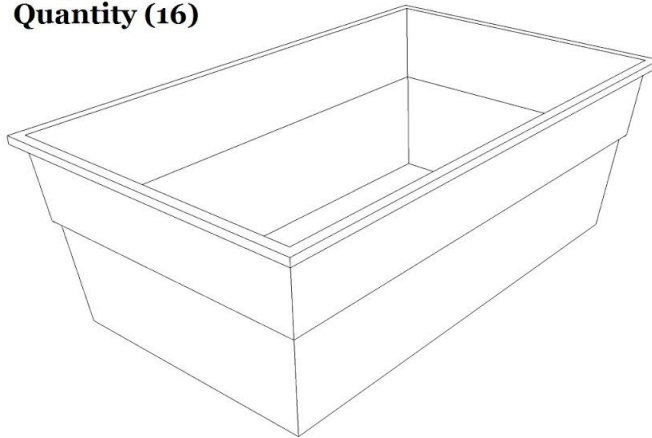


**Step 1: Lay Inl top face-down
on carpeted surface.**

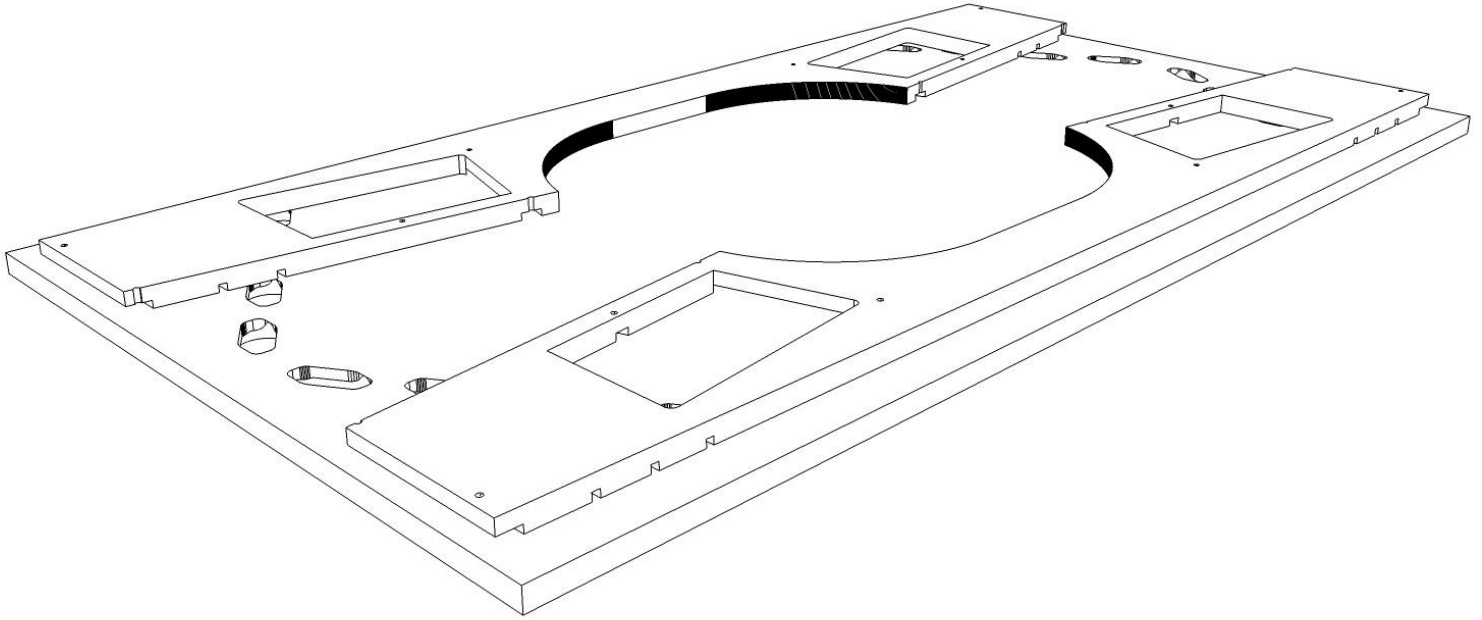


**Step 2: Rotate the
hinged faces upright.**

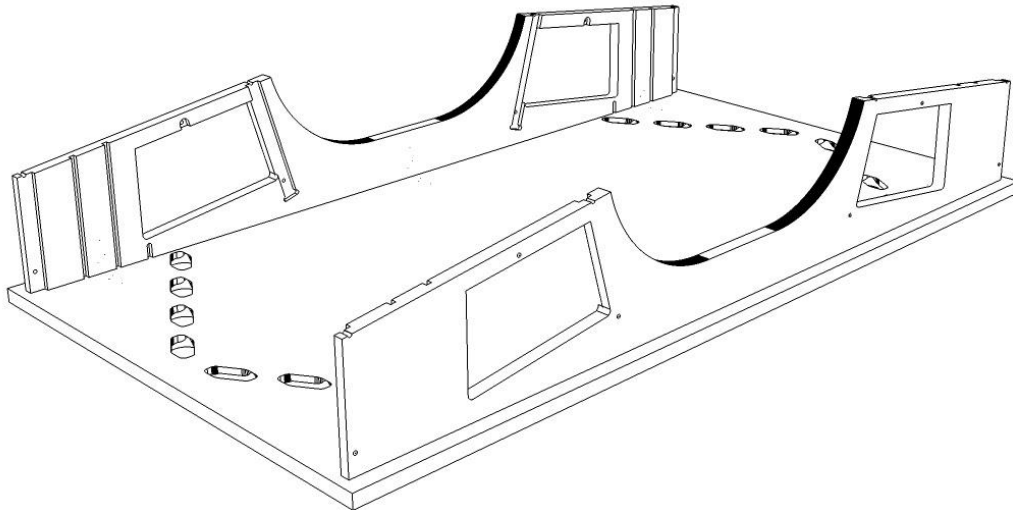



Step 3: Install small baffle pieces into slots in hinged faces.

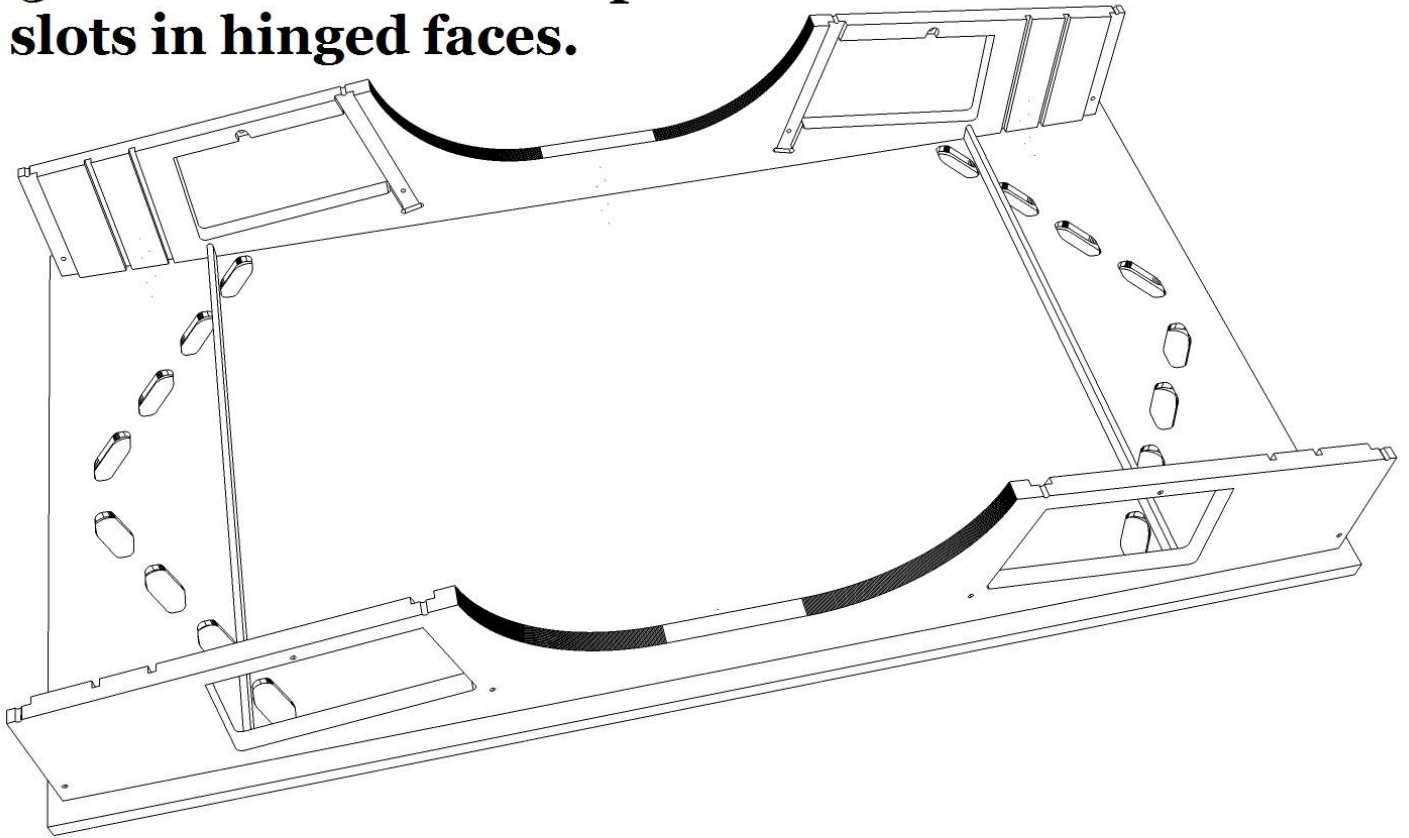


Step 4: Install medium baffle pieces into middle slots in hinged faces.

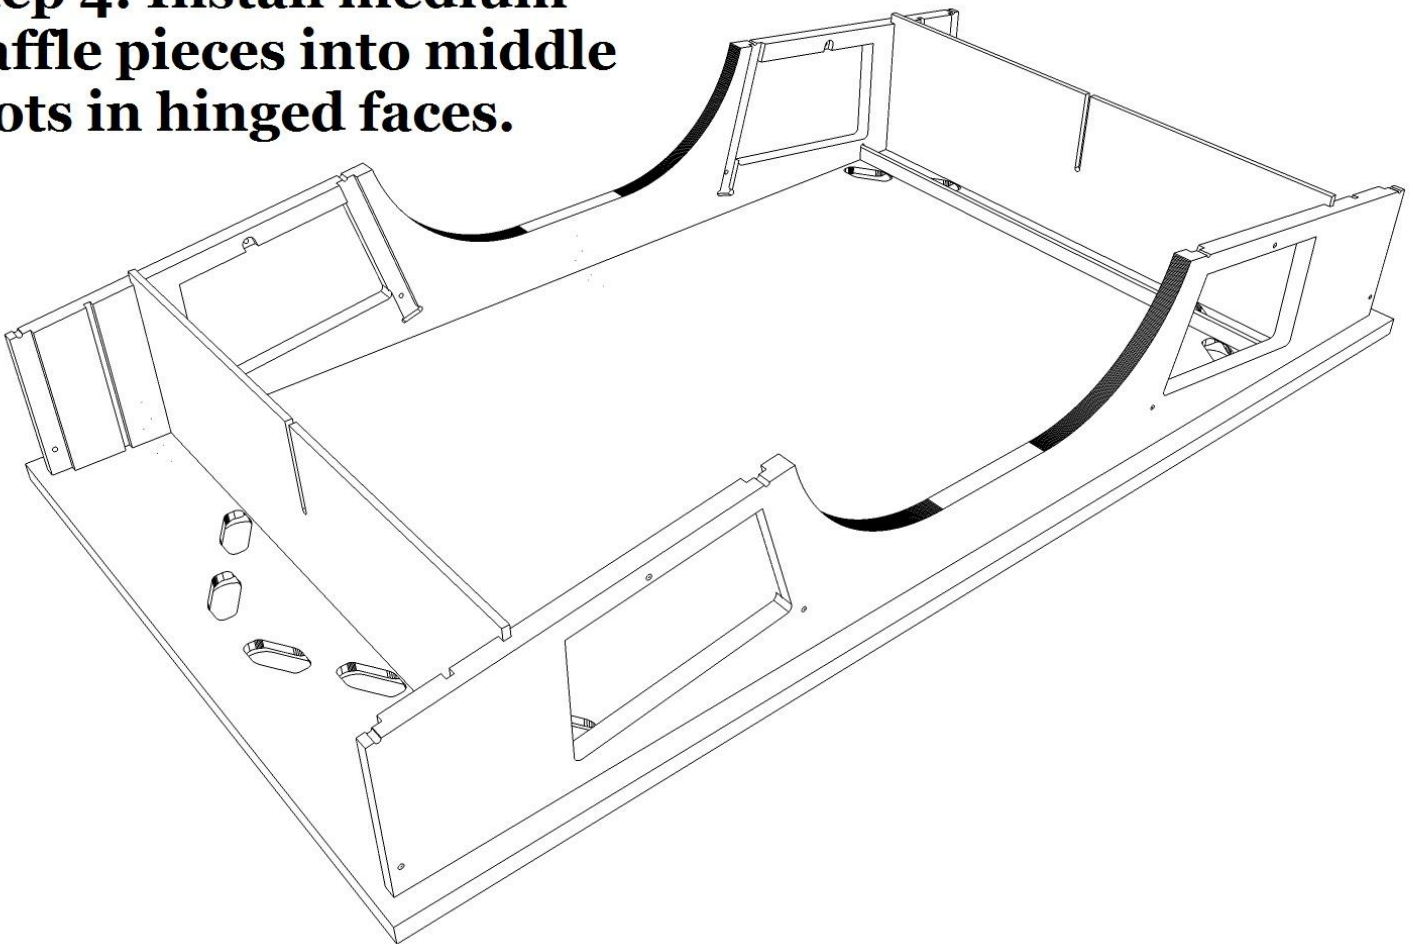


**Step 5: Install large
baffle pieces into last
slots in hinged faces.**

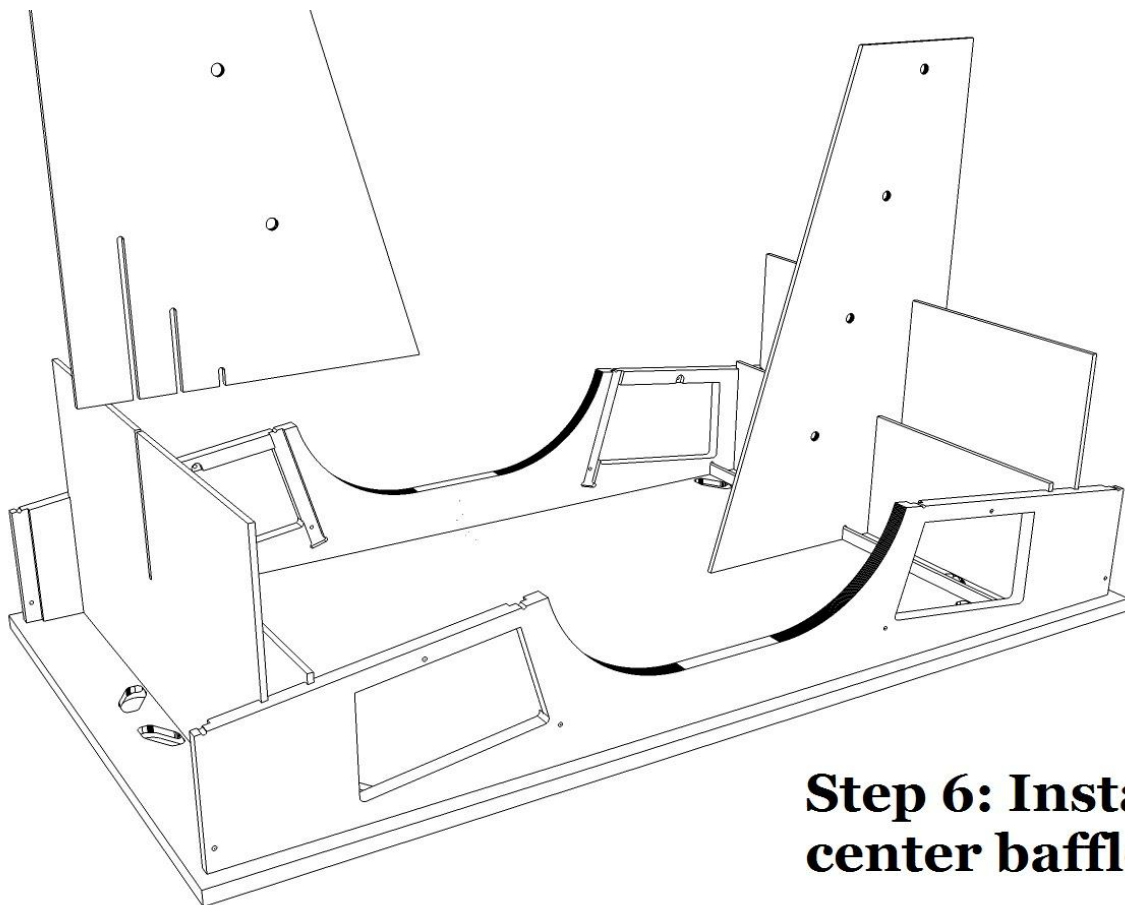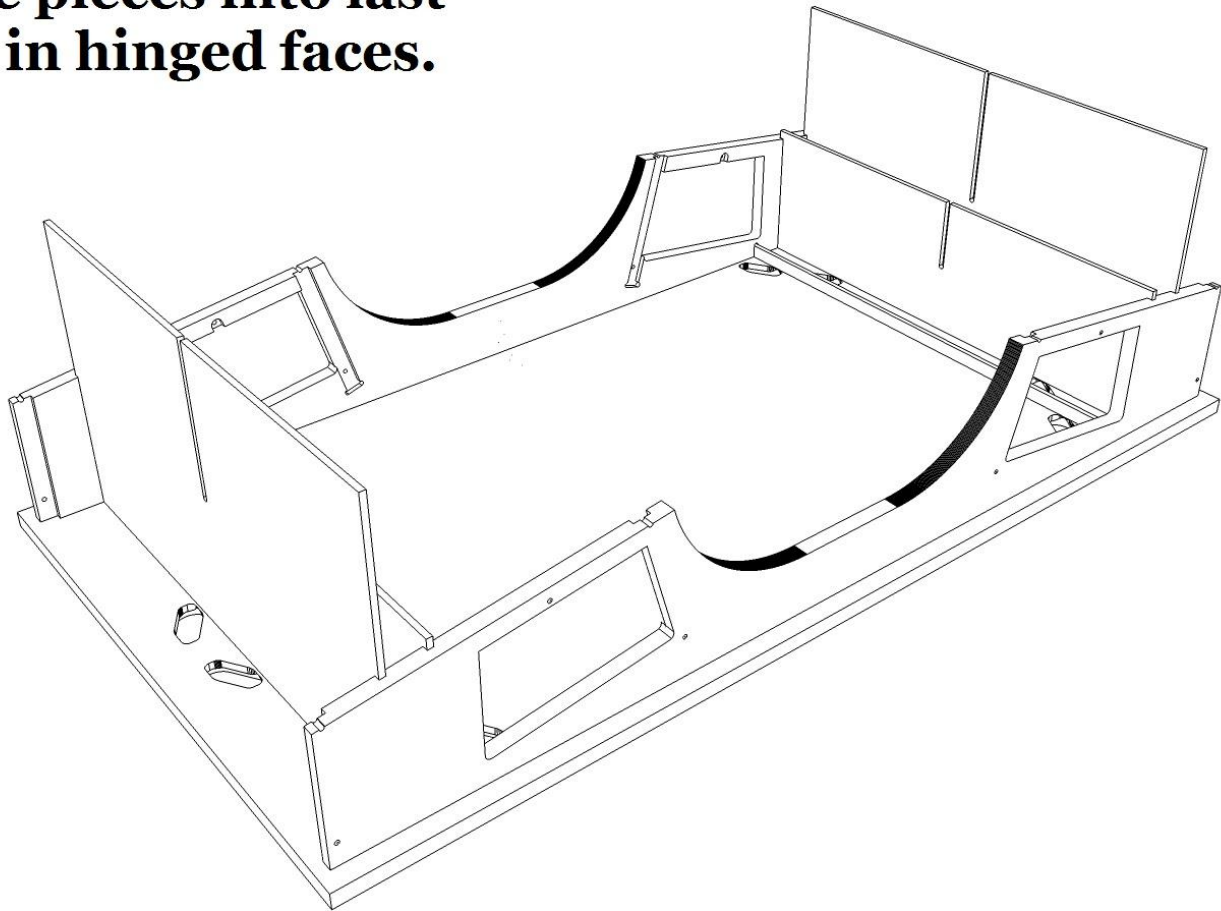


**Step 6: Install
center baffles.**

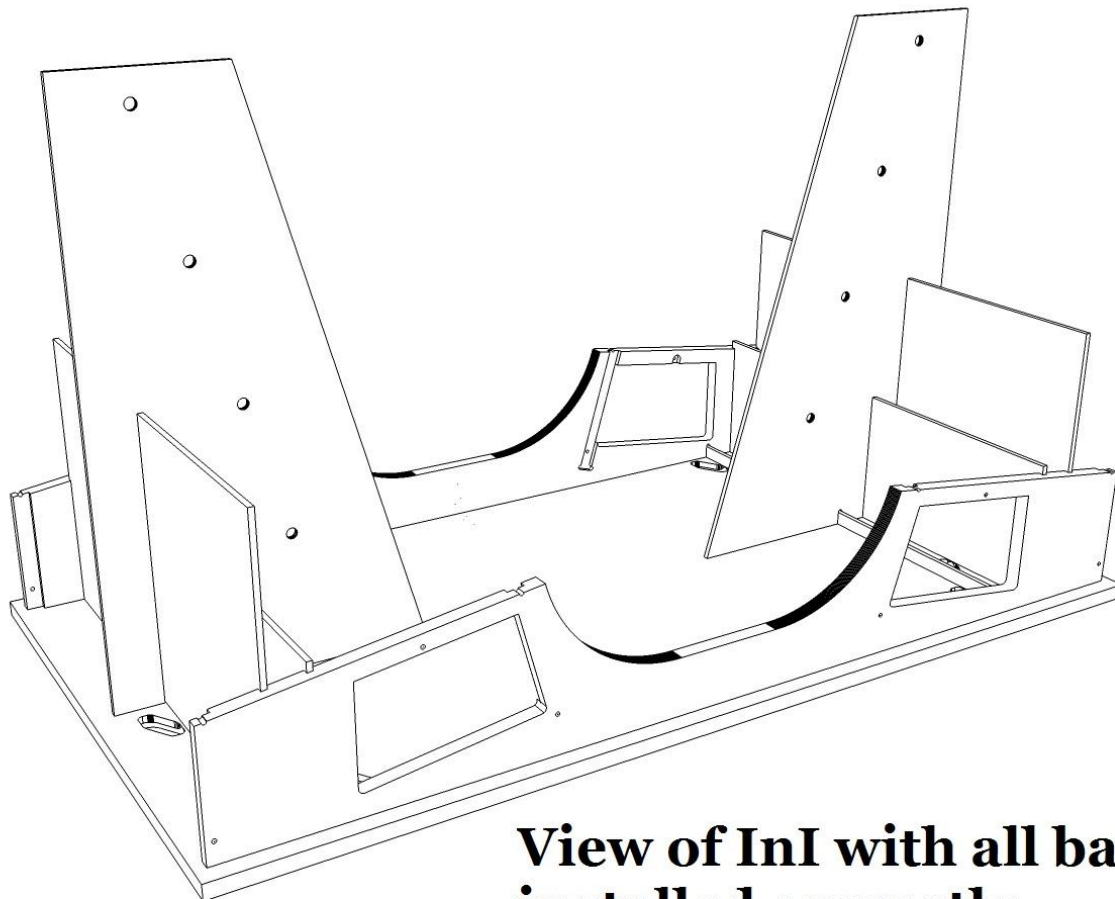


View of InI with all baffles installed correctly.

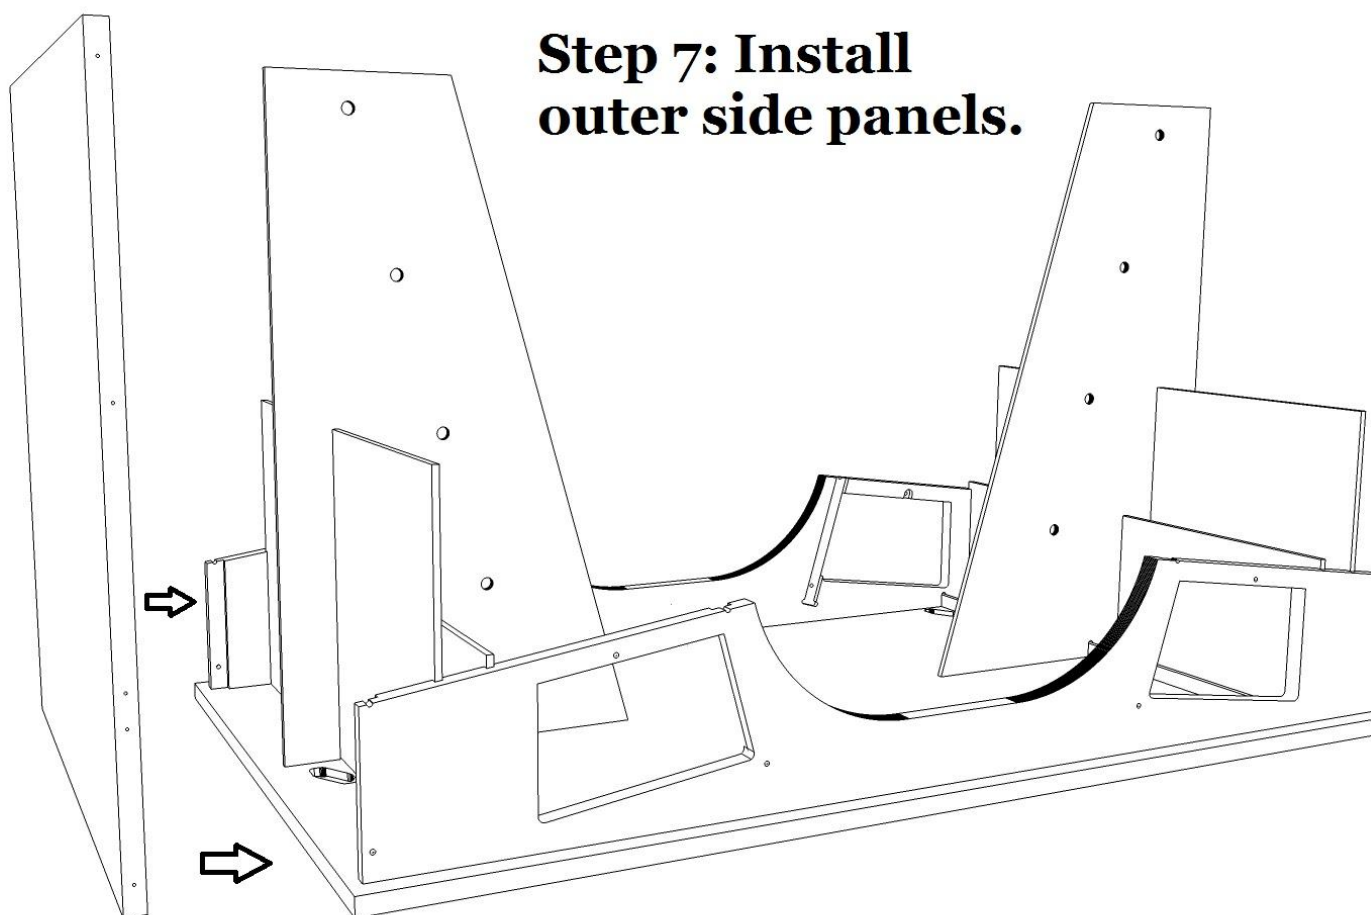


Step 7: Install outer side panels.

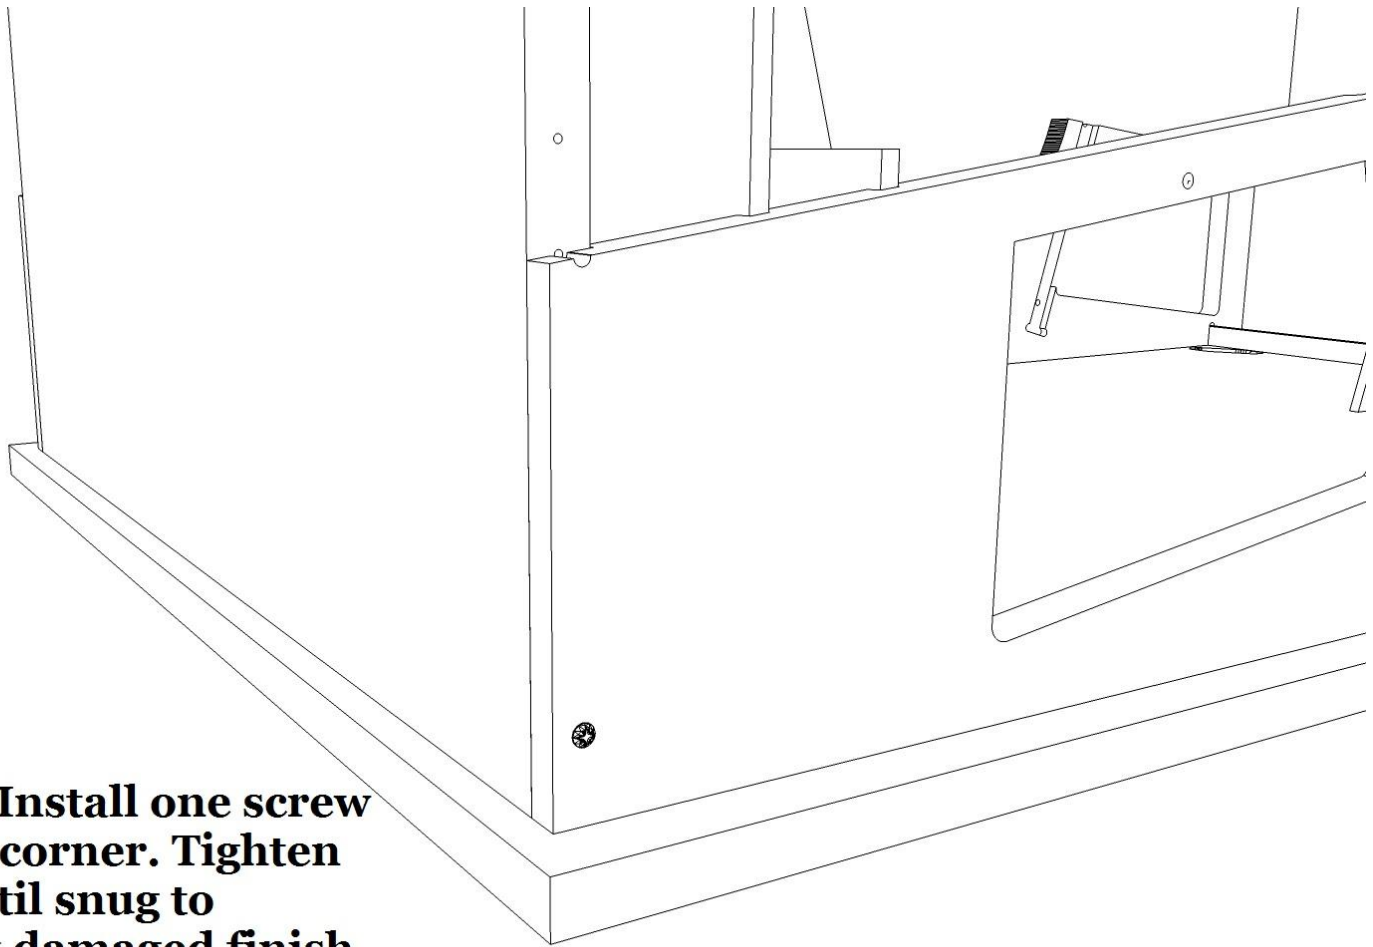


Step 8: Install one screw at each corner. Tighten only until snug to prevent damaged finish.

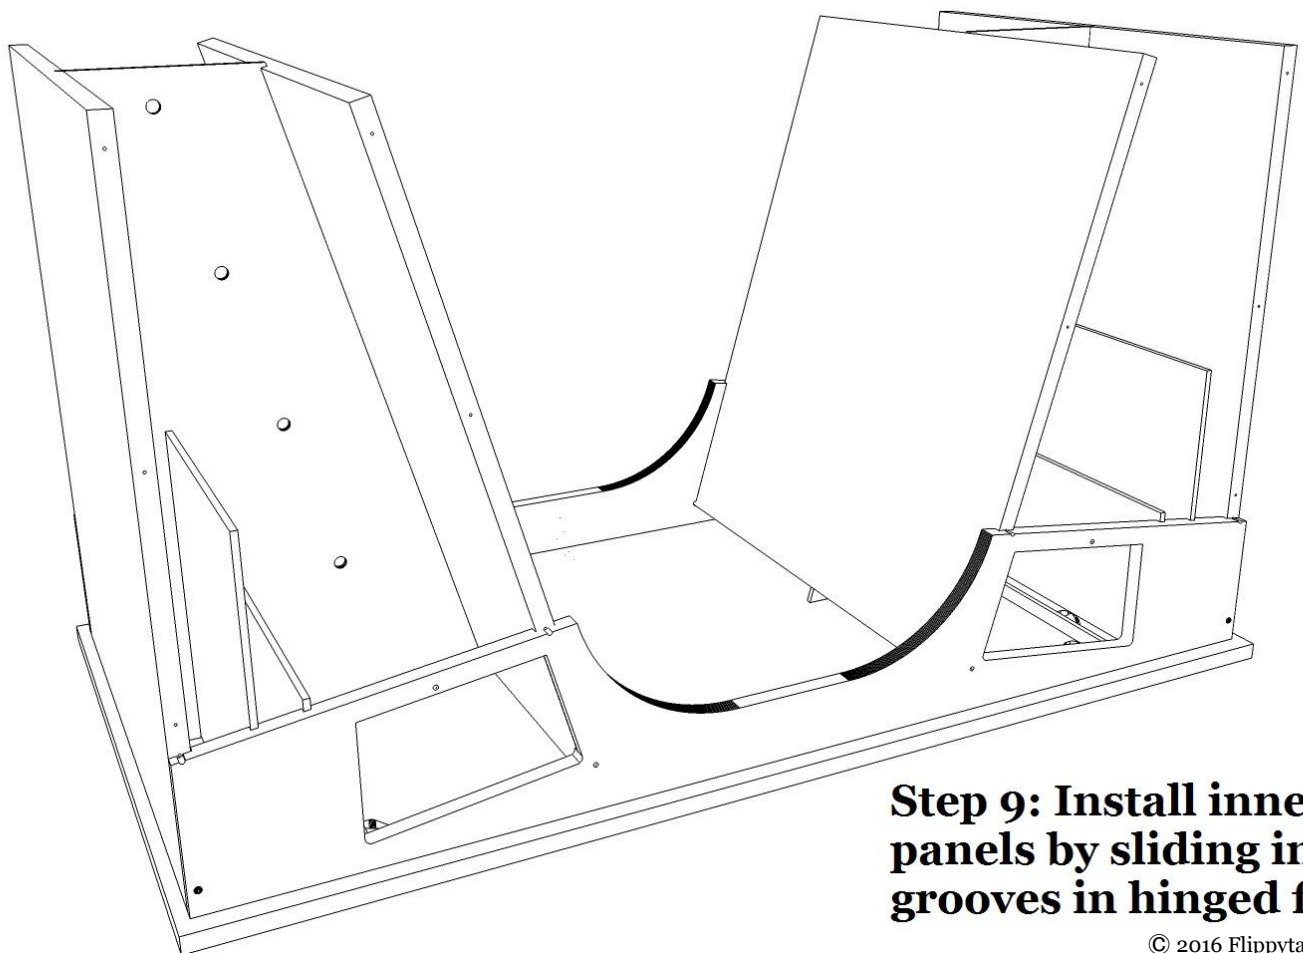

Step 9: Install inner side panels by sliding into grooves in hinged faces.

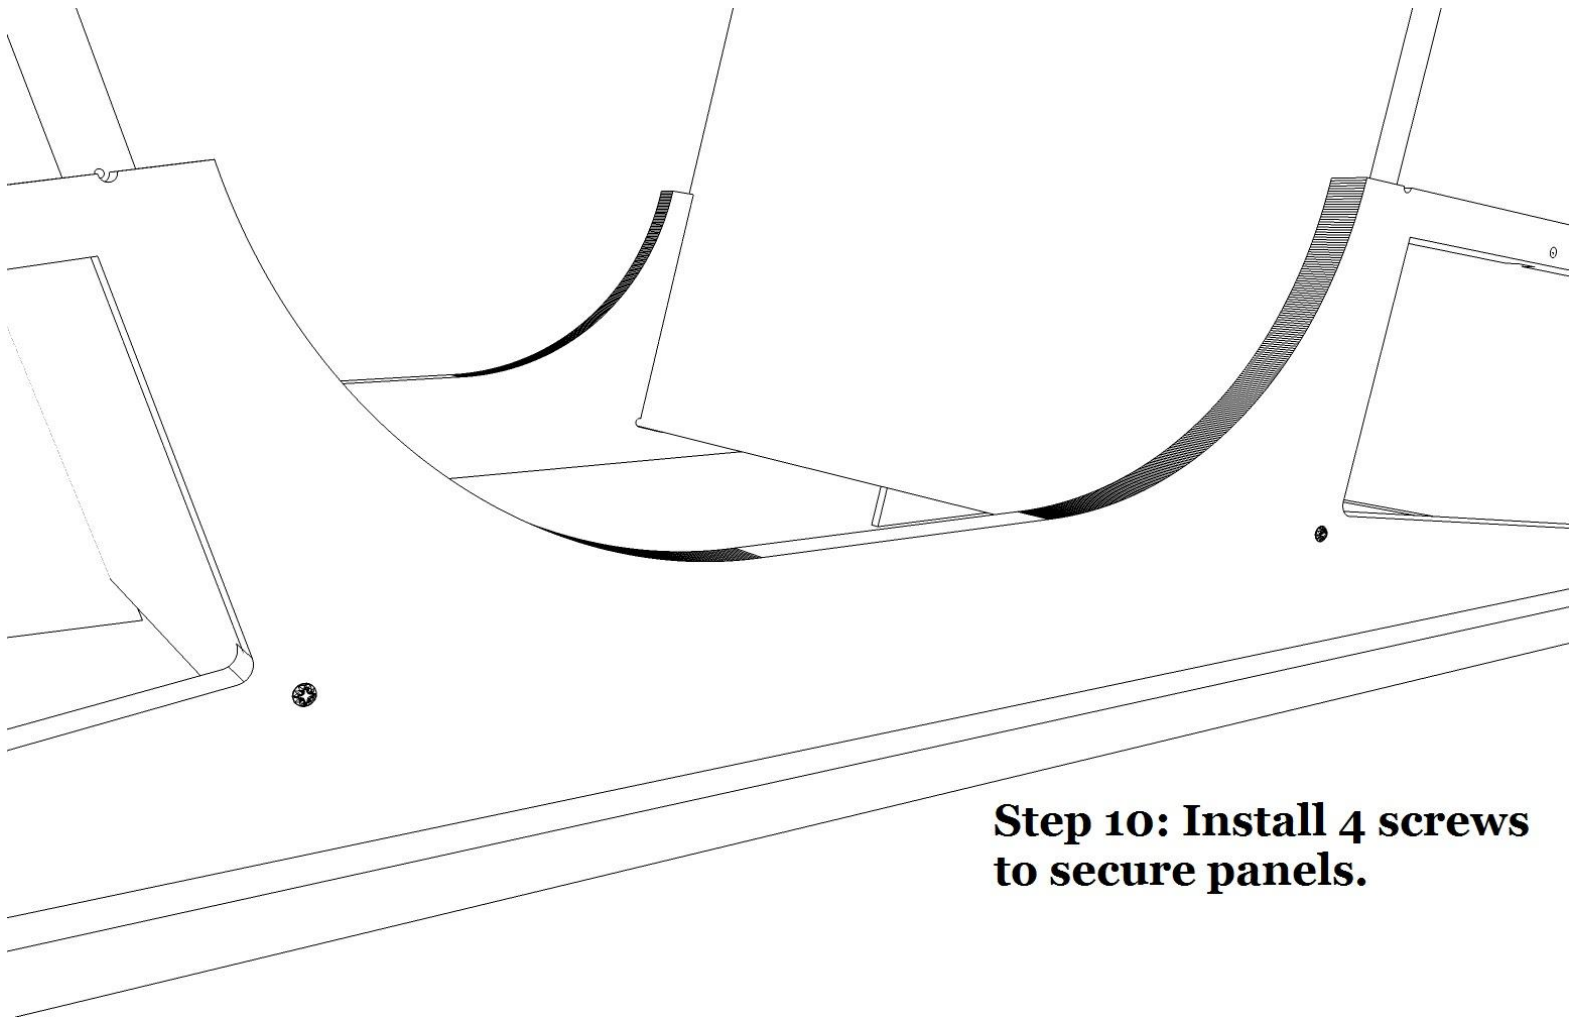


**Step 10: Install 4 screws
to secure panels.**

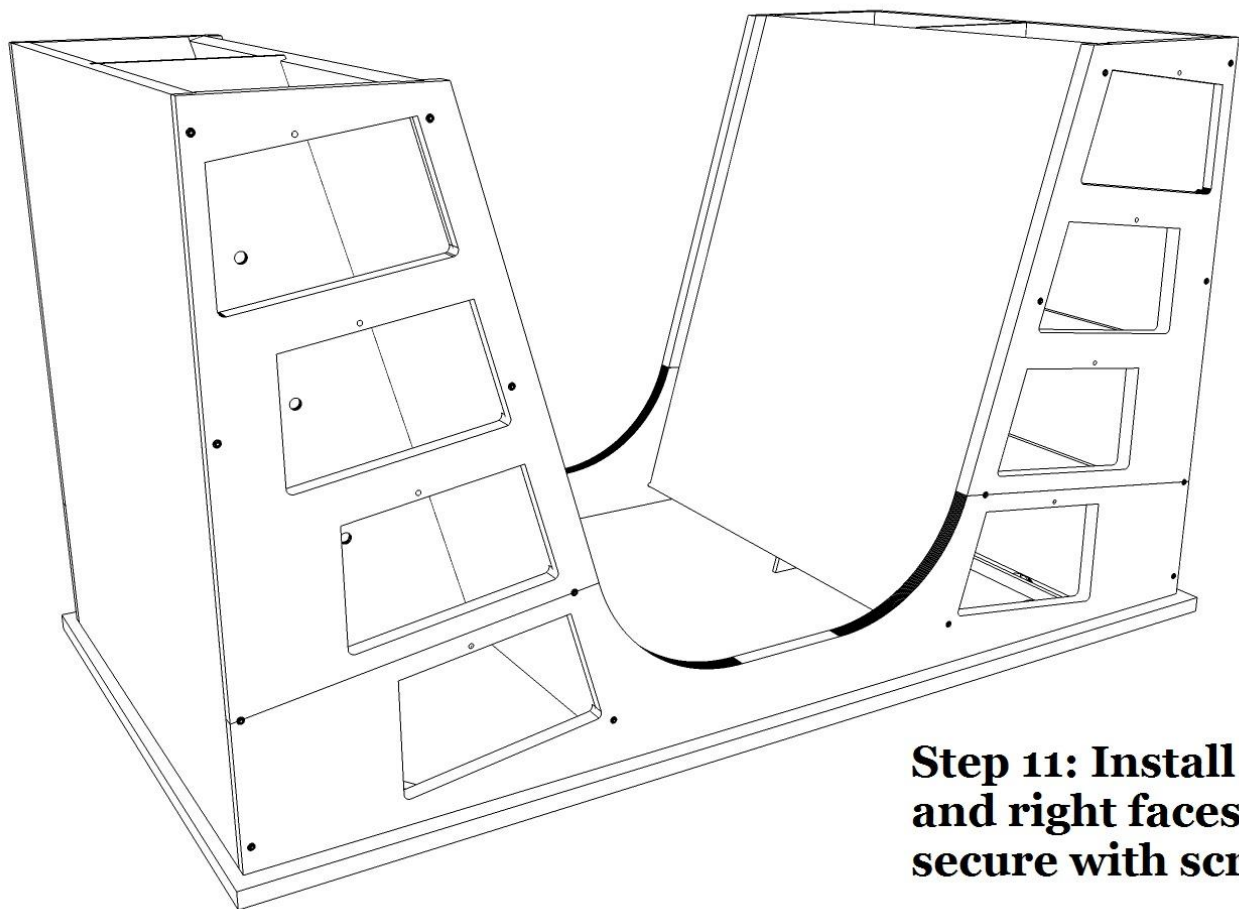

**Step 11: Install left
and right faces and
secure with screws.**

Step 12: Flip InI upright. Push tray support dowels through corresponding holes in center baffles. Ensure the ends are seated in grooves at bottom of tray openings. Install screws to secure.

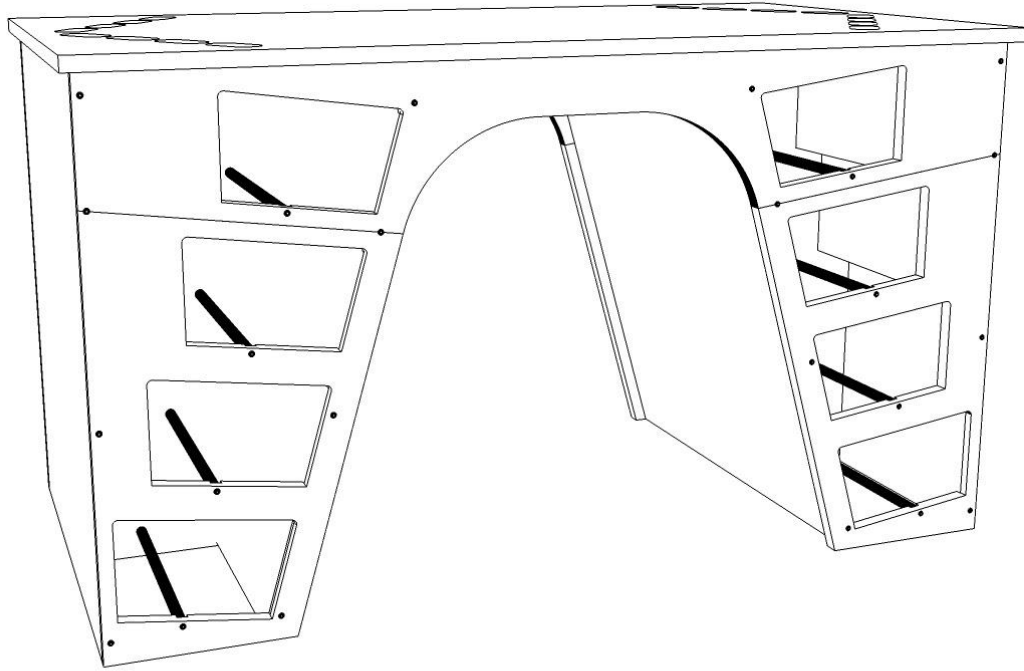

Final Step: Insert plastic trays fully into openings. Your InI is now completely assembled. We recommend labeling the sorting slots in the top with removable labels to assist with sorting.

