

ROKLIN STEP-BY-STEP ASPHALT REPAIR

Roklin Systems Inc. introduces FloMix, the rapid asphalt repair. With no saw-cut or demolition required, prep is quick and easy, usually just blown air. Damaged areas can be returned to traffic in a fraction of the time required for traditional repair methods. The polymer-based repair works in areas where there is a lot of movement, damaged base, where heavy rolling equipment is not available or where other asphalt repair materials have failed.



To begin, use a wire brush and compressor to sweep and blow the dirt out of the hole.



Put on Nitrile gloves and safety goggles. Also, make sure you have on long sleeves and pants to protect from any possible splatter.



Pour the bottle marked "A" into the bucket. Pour slowly so as not to splash.



Mix the FloMix in bucket with egg-beater style mixer or pail mixer.



Shake "B" bottle for 30 seconds. Pour into bucket. Mix for 2 minutes.




Flow material into damaged area to just-blow grade.



Use a screed to spread the material evenly.



Broadcast topping sand over entire surface until you cannot see liquid.

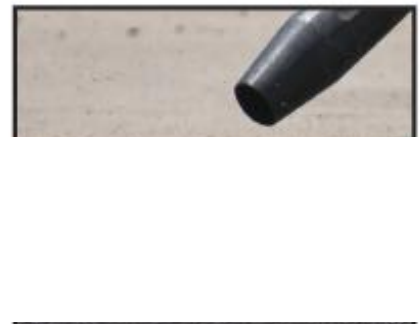

When set, sweep or blow away excess sand and your repair is ready for traffic.

ROKLIN
SYSTEMS INCORPORATED

Distributor
Brewer Cote of Arizona
The Pavement Maintenance Specialists
5226 West Missouri Avenue, Glendale, Arizona 85301
Tel. 623-931-3728 Toll 888-931-3728 Fax 623-842-0714
www.brewercoteaz.com sales@brewercoteaz.com