


Fiat 500 upgraded boot handle installation

www.gavgetsbores.com


1. Remove the tape backing on the template **orange piece** and place the template in the recessed area



2. cut on the inside edge and along the front as shown in **green** and remove the piece you have cut out

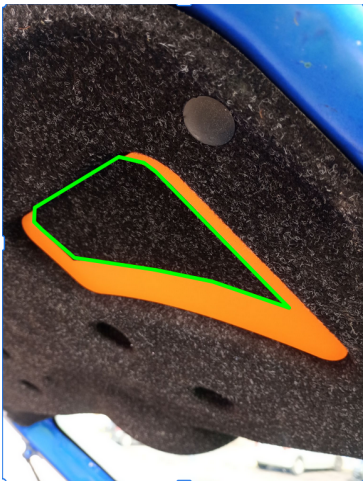

3. Remove the template by slowly peeling it off

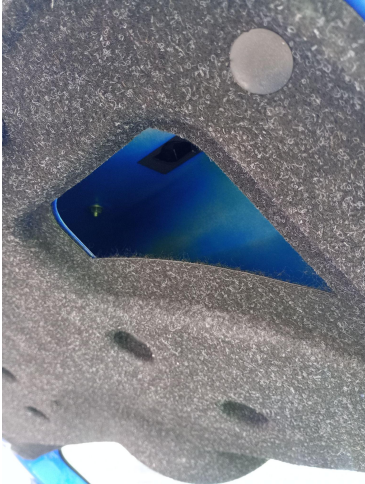

4. Make sure the tabs on the new handle are in the position as indicated in **red** in the below picture. If they are not positioned correctly it will make fitting the handle through the hole impossible.



5. Insert the handle into the hole you have cut pushing the front in first then the back. This is a tight fit so take your time and only push on areas (shown in **red** dots) shown in the picture.



6. While applying pressure to keep the new handle fully seated tighten the tabs using a 3mm allen key **(do not over tighten)**
7. Remove the original handle using a 5mm allen key
8. Remove the bolt and washer from the original handle that you have just removed and use them to fit the cover over the hole from the original handle

