



**Supplies Needed: 1" hole saw, drill, tape measure, marker, exacto knife**



#### **Sven's Sleeve hole sleeve:**


Measure 3/4" down from the underside of the exterior rim between mark your measurement. This will be the center of your hole. Drill slowly with a small amount of pressure through the plastic. You may use sandpaper to smooth the rough edges after drilling. Your sleeve is now ready to install your UnderCover Guide. Place the clip into the hole and firmly press down. It will be a snug fit.



#### **Fish Hole Buddy hole sleeve:**


Measure 3/4" down from the underside of the exterior rim and mark your measurement. This will be the center of your hole. Drill slowly with a small amount of pressure through the plastic. You may use sandpaper to smooth the rough edges after drilling. Your sleeve is now ready to install your UnderCover Guide. Place the clip into the hole and firmly press down. It will be a snug fit.

#### **Catch Cover Hole Sleeve**

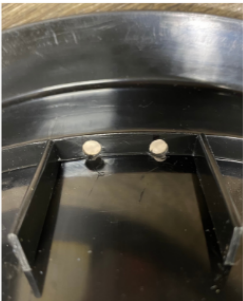

Underneath the flat part of the hole sleeve lip, place two marks 3/4" apart from each other while keeping the two marks between the ribs. Drill two holes on each of those mark locations. This will be the outside points of your slot. Use a utility knife or a small cutting utensil/saw to connect the points making a slot for the UnderCover Guide. Your sleeve is now ready to install your UnderCover Guide. Place the clip into the slot and firmly press down. It will be a snug fit.

#### **How to mount your rattle wheel to the UnderCover Guide:**

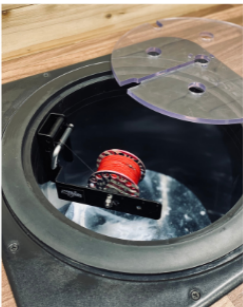

Use the holes provided in the guide for the type of rattle wheel you're using and the hole sleeve you're using to keep the line as centered as possible in your hole. Use the mounting hardware that was provided with your rattle wheel.

\*Find the new style (sensor in the reel) northern light install instructions on [UnderCover-Guide.com](http://UnderCover-Guide.com)

#### **How to mount the LineAlarm to the UnderCover Guide**



#### **The two small screws that were provided are for the LineAlarm**

Locate the small holes on the top edge of the UnderCover Guide arm. Depending on the size of your hole sleeve diameter, locate the appropriate holes:

Sven Sleeve and catch cover sleeve use the **inner** holes

Fish Hole buddy use the **outer** holes.

Remove the screws on the back side of the line alarm. Use the two longer screws provided to fasten the LineAlarm to the guide.