

Major Havoc Gen 1 Conversion Deck

1. Loosen all of the screws on both sides of the cabinet.



2. Remove the old monitor, control board, and front J Panel



3. Install the Gen 1 monitor and PCB (exact same size as the one that came out of the cabinet, also same screw pattern). Then install the new j panel, after this tighten all of the side screws



4. Make sure the wiring for the J Panel switch is as follows (right side coming in from power into cabinet, left side out of switch to Marquee and control panel LED Y Cable)



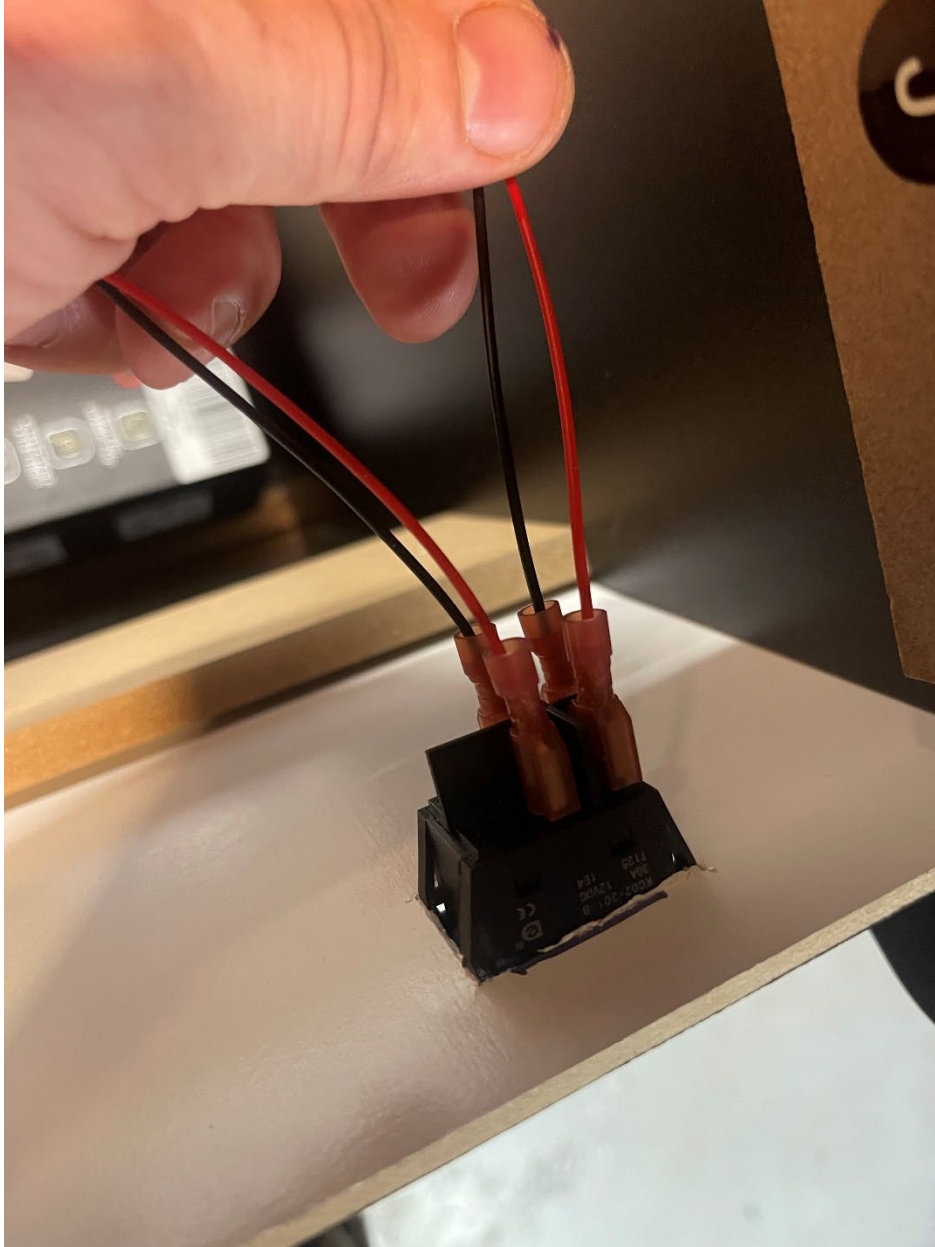


Image of double Y Cable setup from rear (need 2 Y cables and a double barrel as seen on the left)

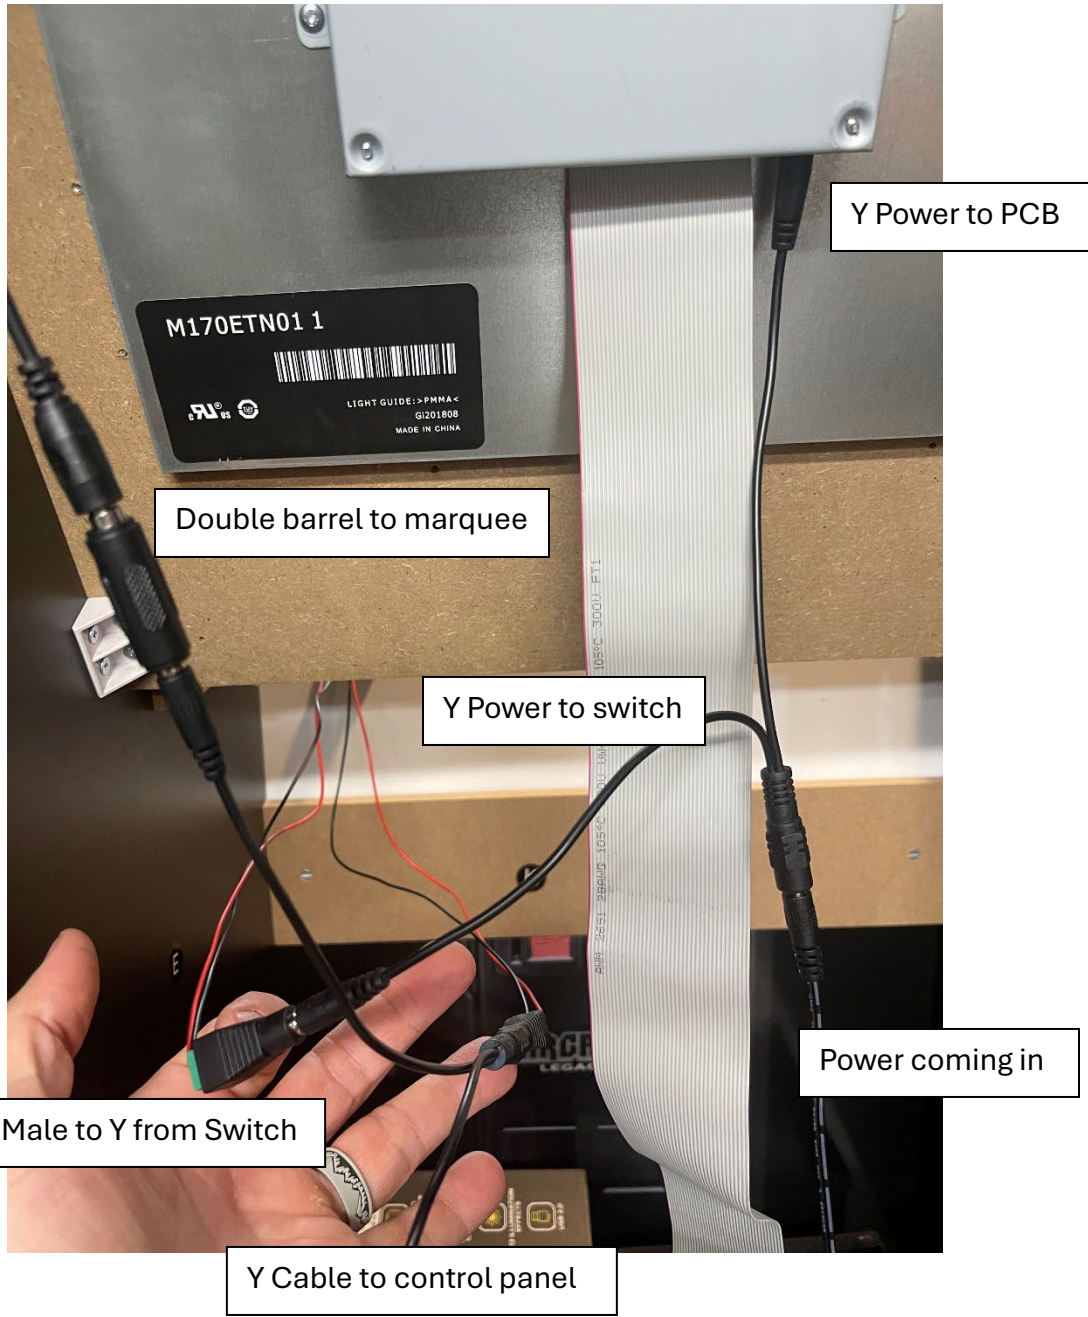

5. Connect power from Y cable to LED cable on control panel, then connect PCB ribbon cable

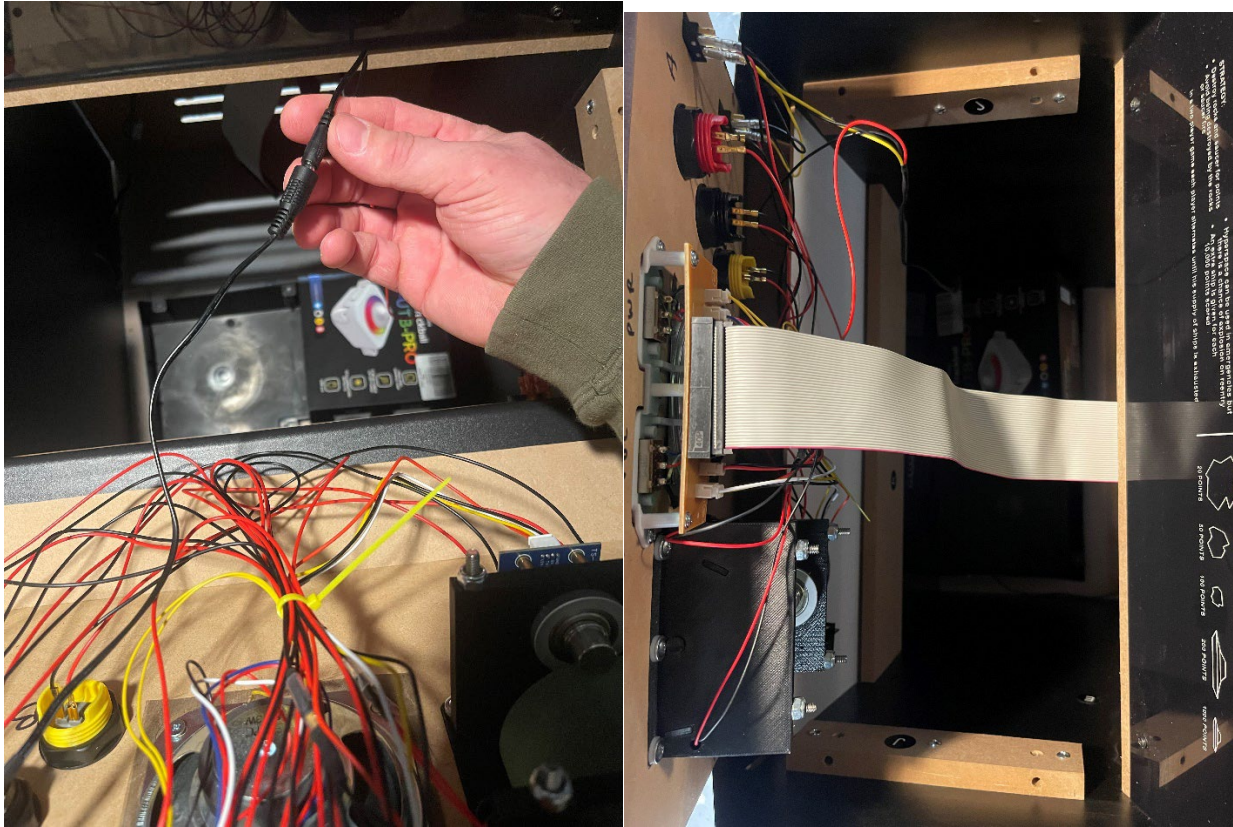

6. Make sure all screws are tight and screw control panel to cabinet

7. Check all connections to be tight, then power up and play!

