

Dragons Lair Installation Instructions

Follow these directions **VERY CAREFULLY** for best results. Email us if you have questions at Info@modoneup.com

Tools you will need:

#2 Phillips Head Screwdriver, Needle Nose Pliers, Small Flat Head Screwdriver


Step 1- Loosen the cabinet outside screws and remove the stock deck.



Step 2- Remove the track hall and dust cover.



Step 3- Review stock deck wire color locations (Deck is pre-mapped to help with this step) polarity does not matter on the switches either side could be connected.

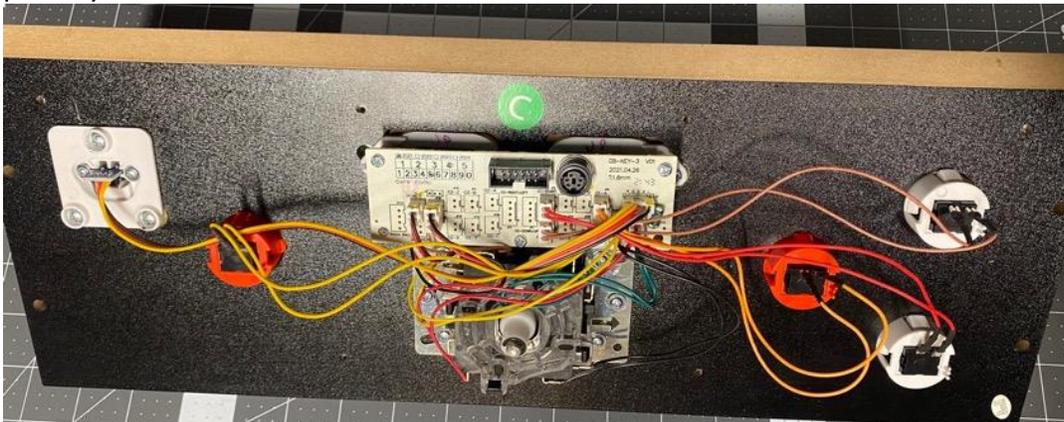


Dragons Lair Installation Instructions

Step 4- Remove wires carefully prying them from the stock buttons (needle nose pliers help)



Step 5- Remove all button wires and move out of the way.

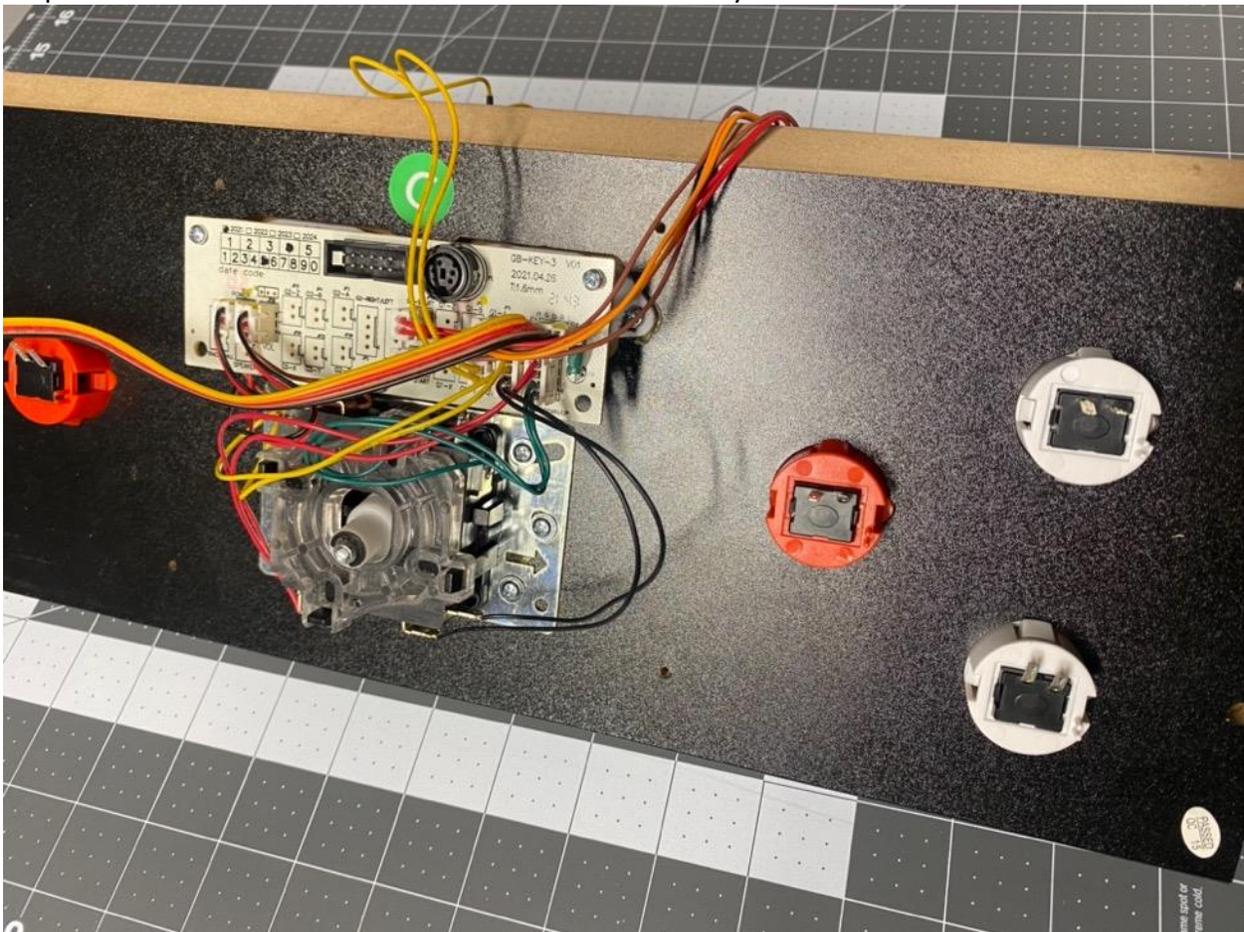

Dragons Lair Installation Instructions

Step 6- Remove the screws from the headphone jack surround



Step 7- Lightly pry up the headphone jack surround with a small flat head screwdriver





Step 8- Remove headphone jack surround



Dragons Lair Installation Instructions


The remaining steps are much easier by laying the deck on your knees in your lap.

Step 9- Next use a #2 Phillips Head Screwdriver to move the 6 screws from the joystick (then pry up with a small flat head, also a light strike on the joystick from the topside can help)

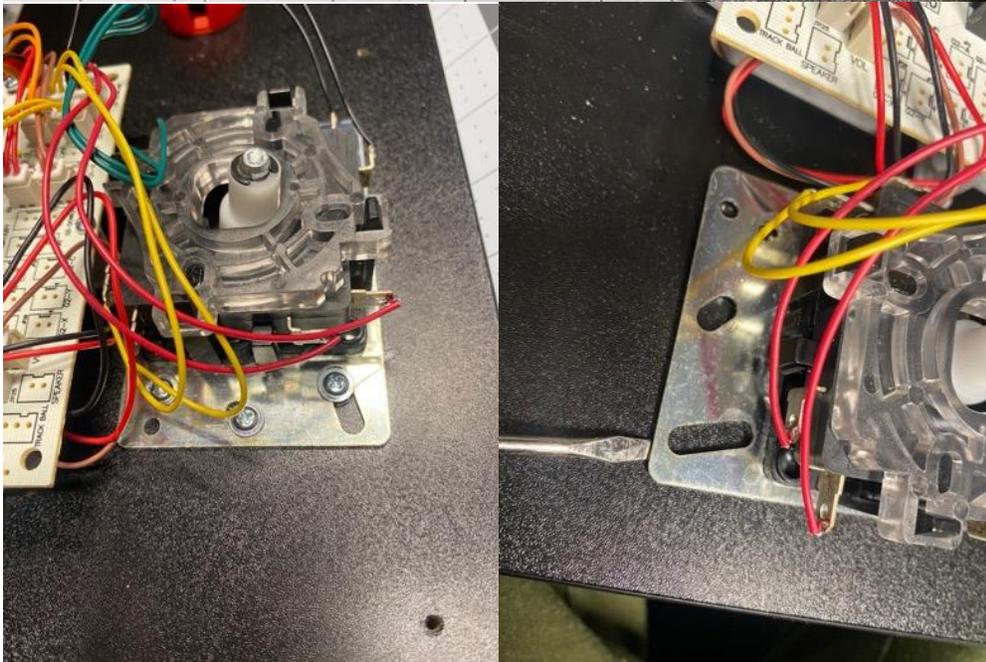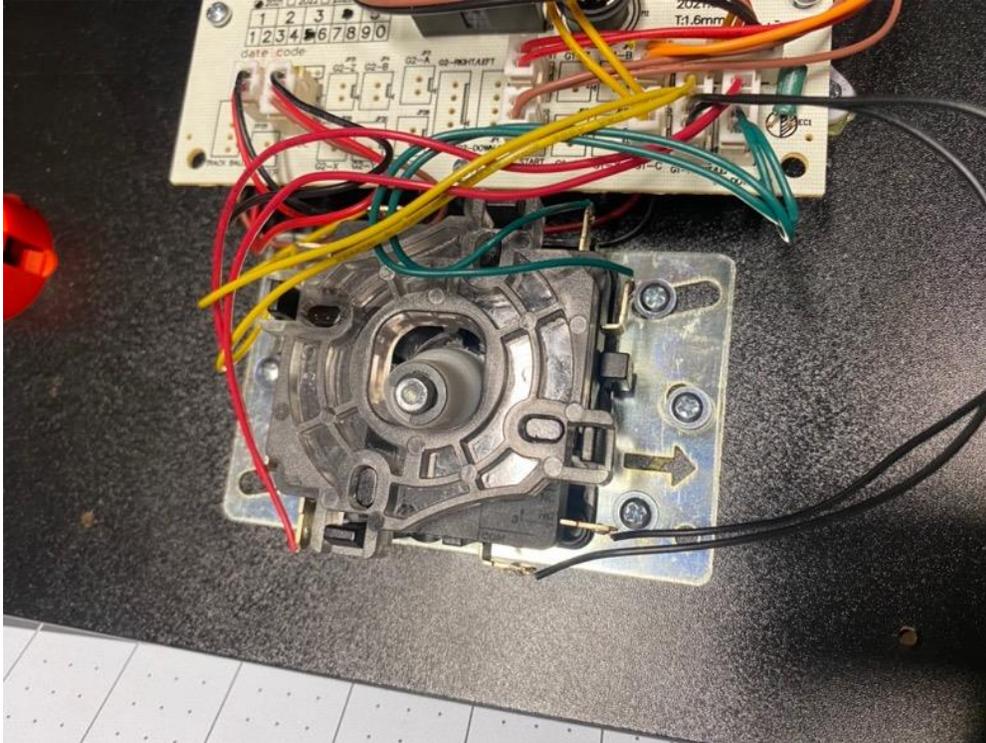


Dragons Lair Installation Instructions

Step 10- Leave joystick loose in holw with you remove remaining components

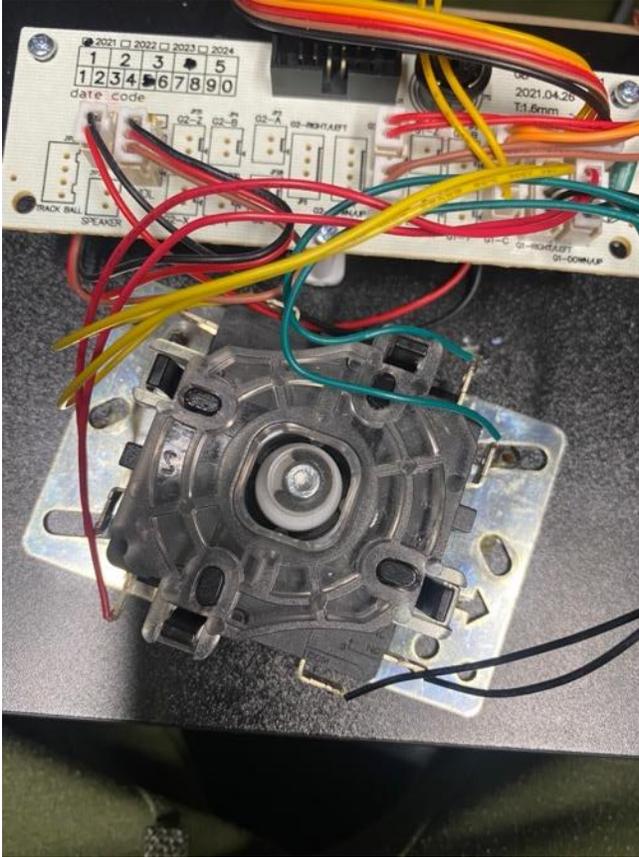


Dragons Lair Installation Instructions

Step 11- Remove the three screws in the top of the circuit control board

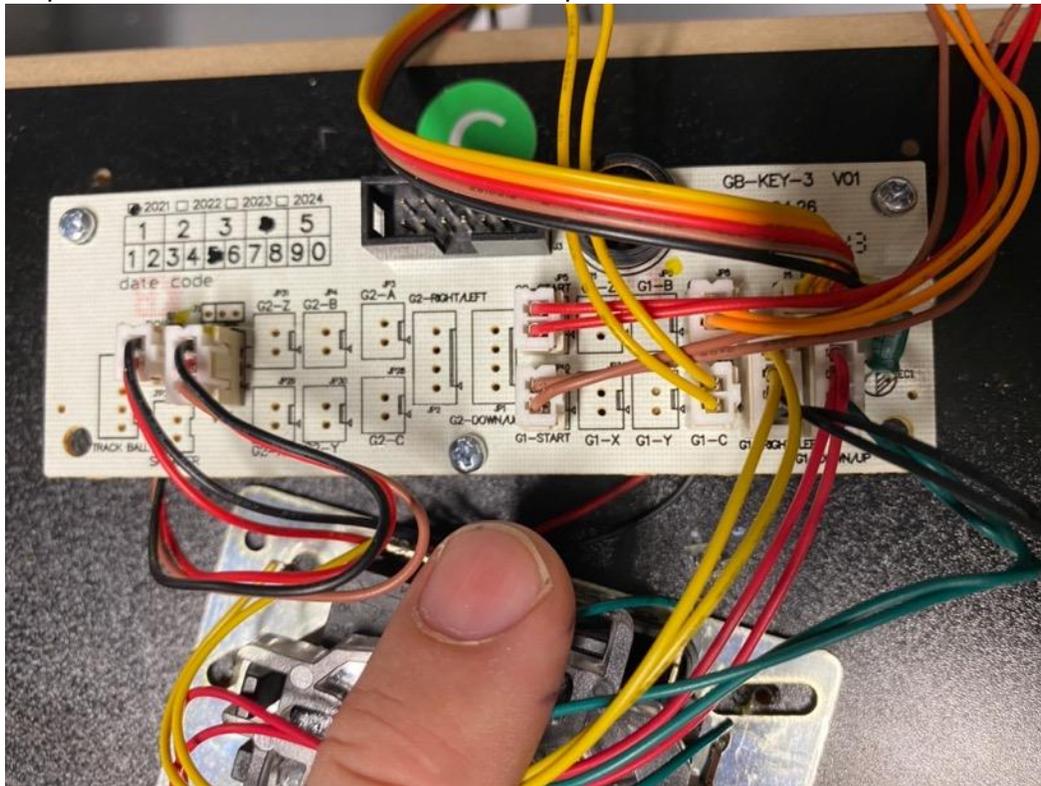


Step 12- Remove the three screws from the Volume/ Power bracket

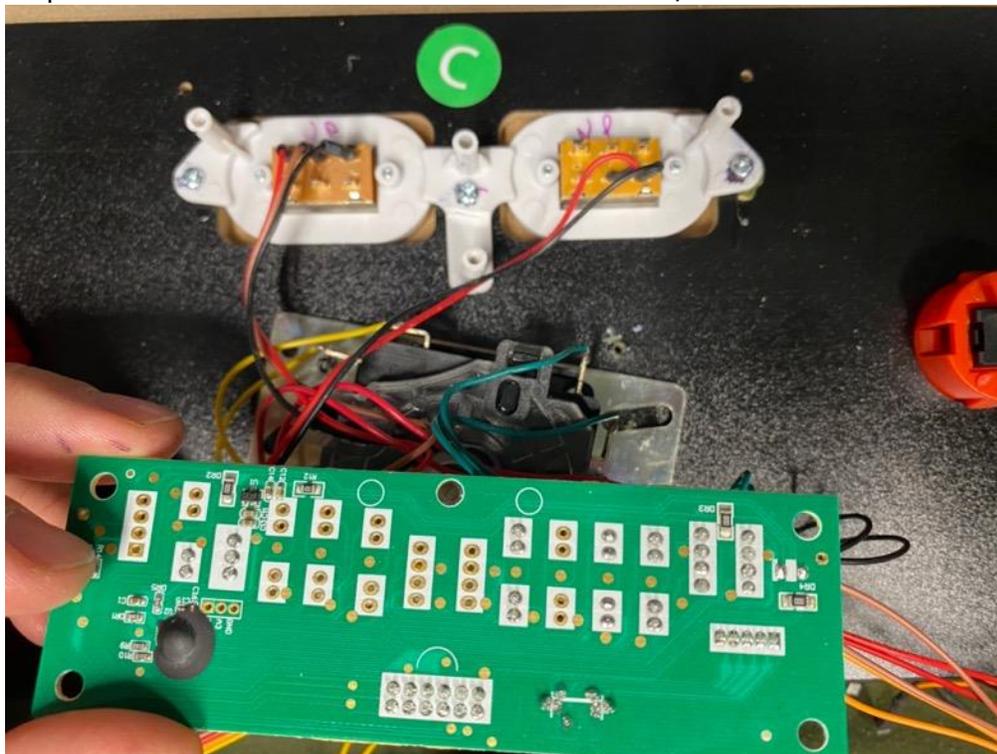


Dragons Lair Installation Instructions

Step 13- Lightly pry up the Volume/ Power bracket with a small flat head screwdriver

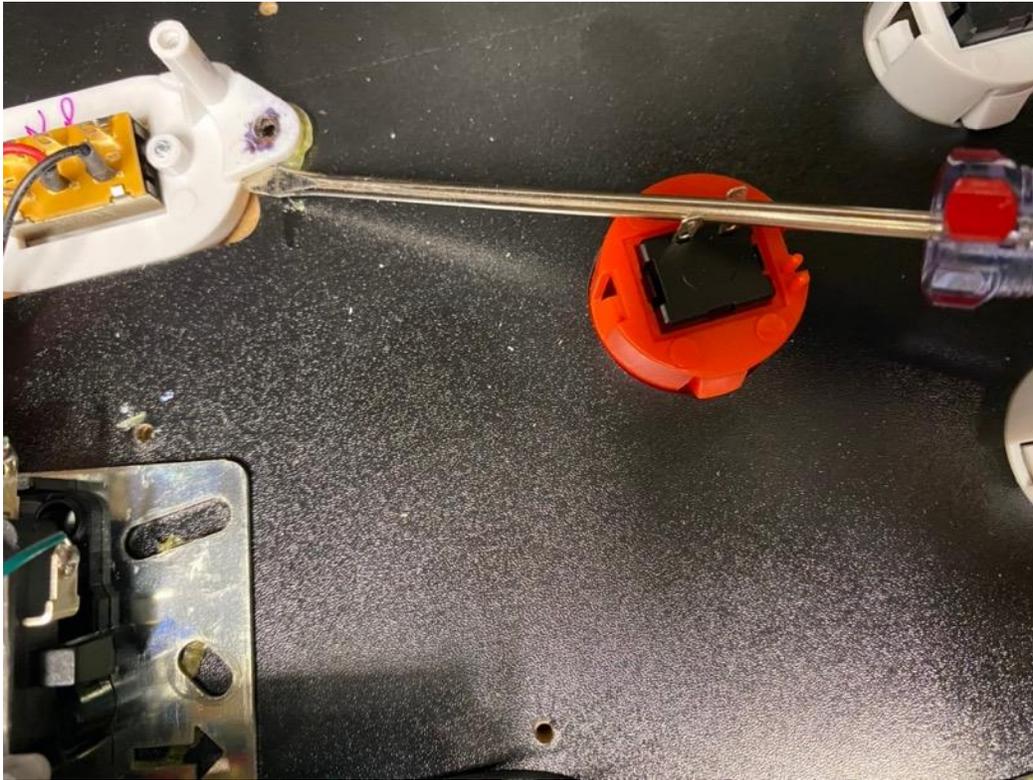


Step 14- Remove all connected components from the deck and place aside

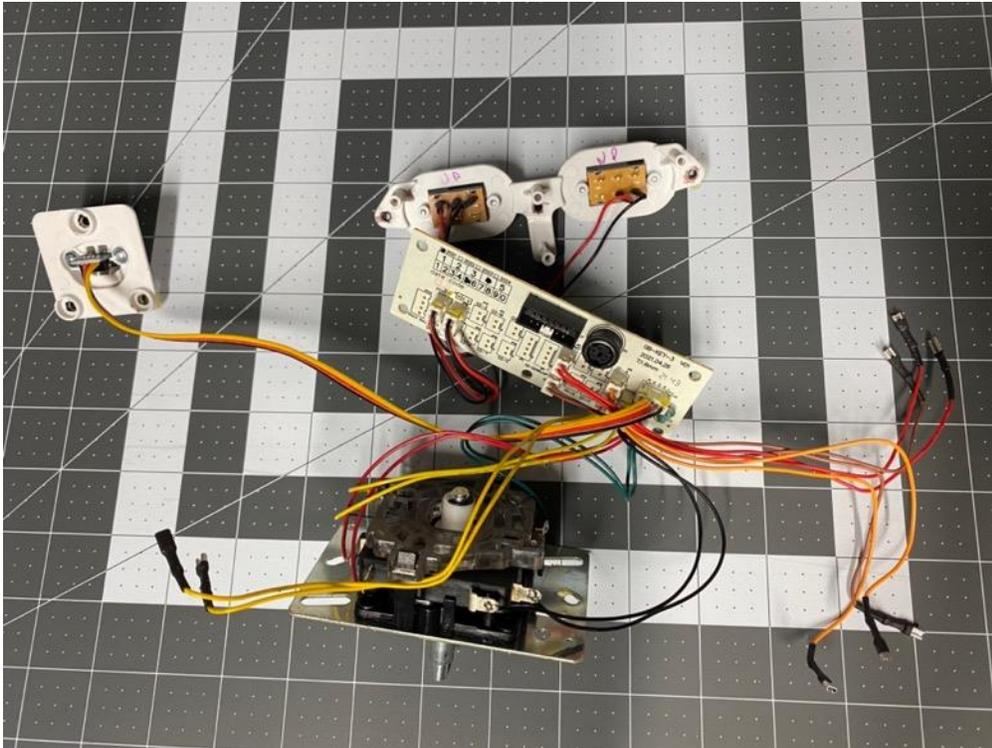

Dragons Lair Installation Instructions

Step 15- Using a cotton swab and Goof Off or something product and swab the area around the Volume/ Power/ Headphone surrounds (let this sit for a minute or two)

*****BE VERY CAREFUL WHEN REMOVING THESE AS A1UP HAS PUT A SIGNIFICANT AMOUNT OF GLUE ON THEM AND THEY COULD BREAK.**

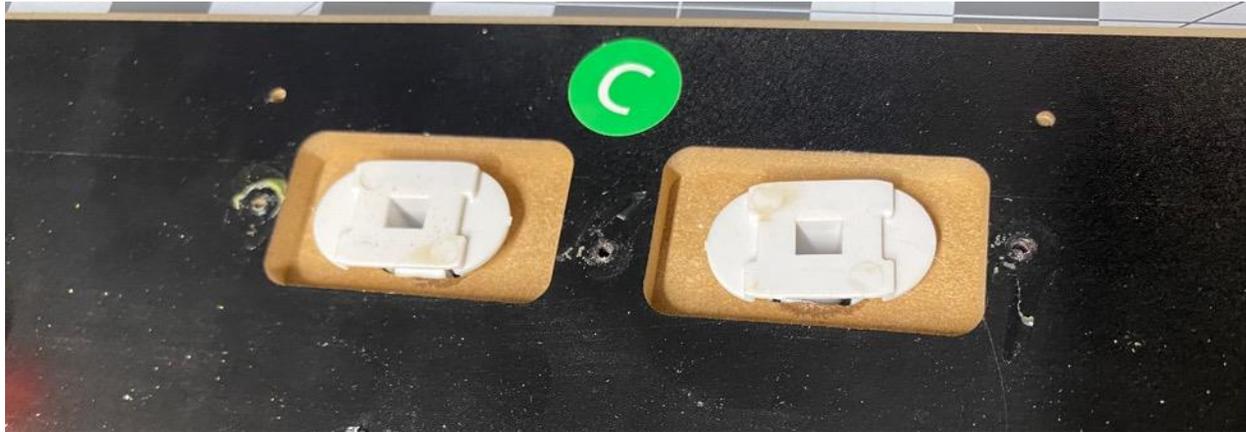

Dragons Lair Installation Instructions



Dragons Lair Installation Instructions




Dragons Lair Installation Instructions

Step 16- Reinstall all items follow the steps in reverse on your new Mod1Up deck.


*****If your comfortable with all of the steps, skip to the end the document to install the New J Panels (VERY IMPORTANT THAT YOU FOLLOW THOSE INSTRUCTIONS CAREFULLY)**




Dragons Lair Installation Instructions

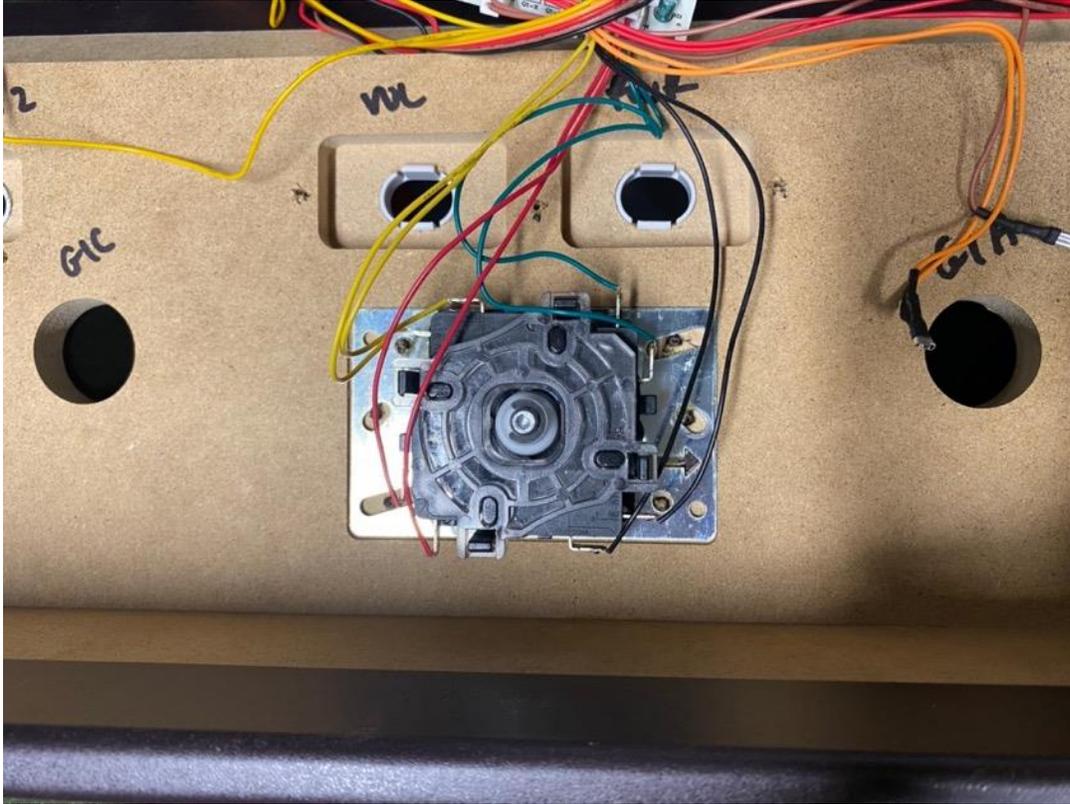


Dragons Lair Installation Instructions

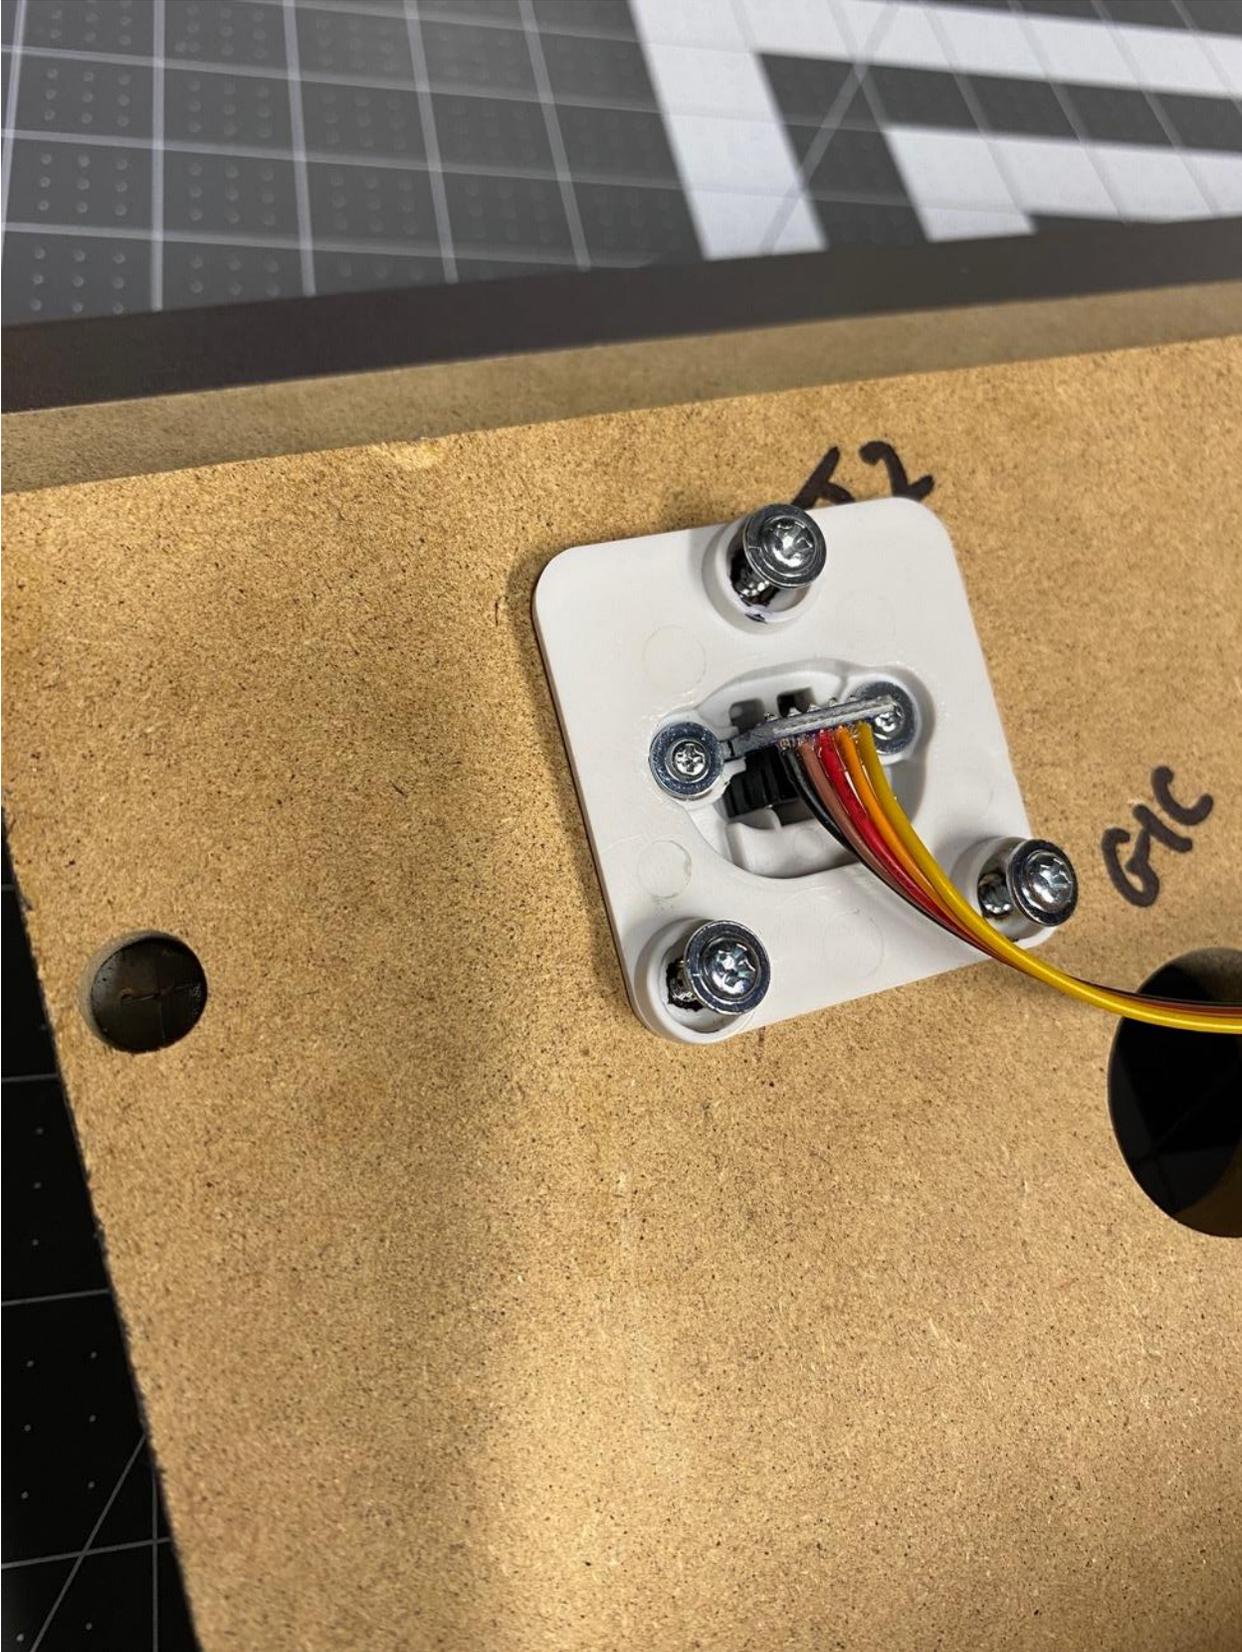


Dragons Lair Installation Instructions

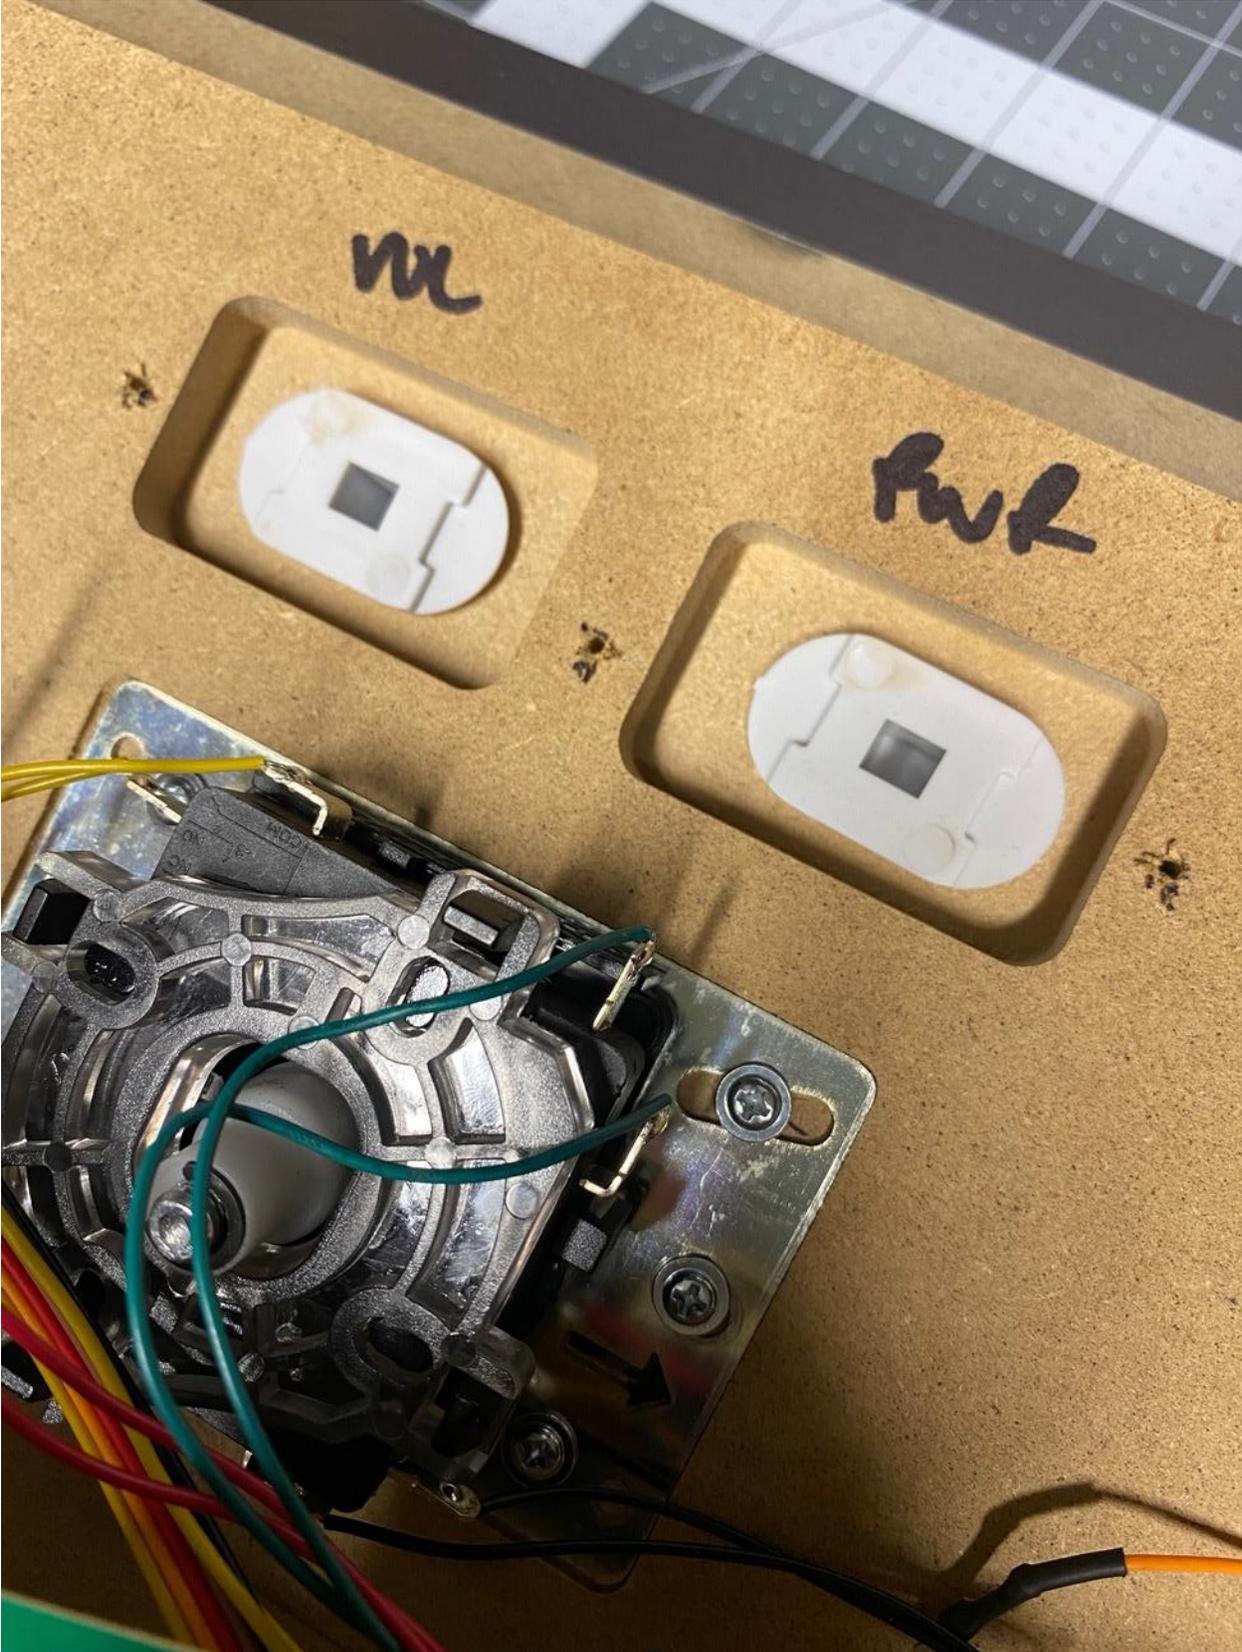


Dragons Lair Installation Instructions

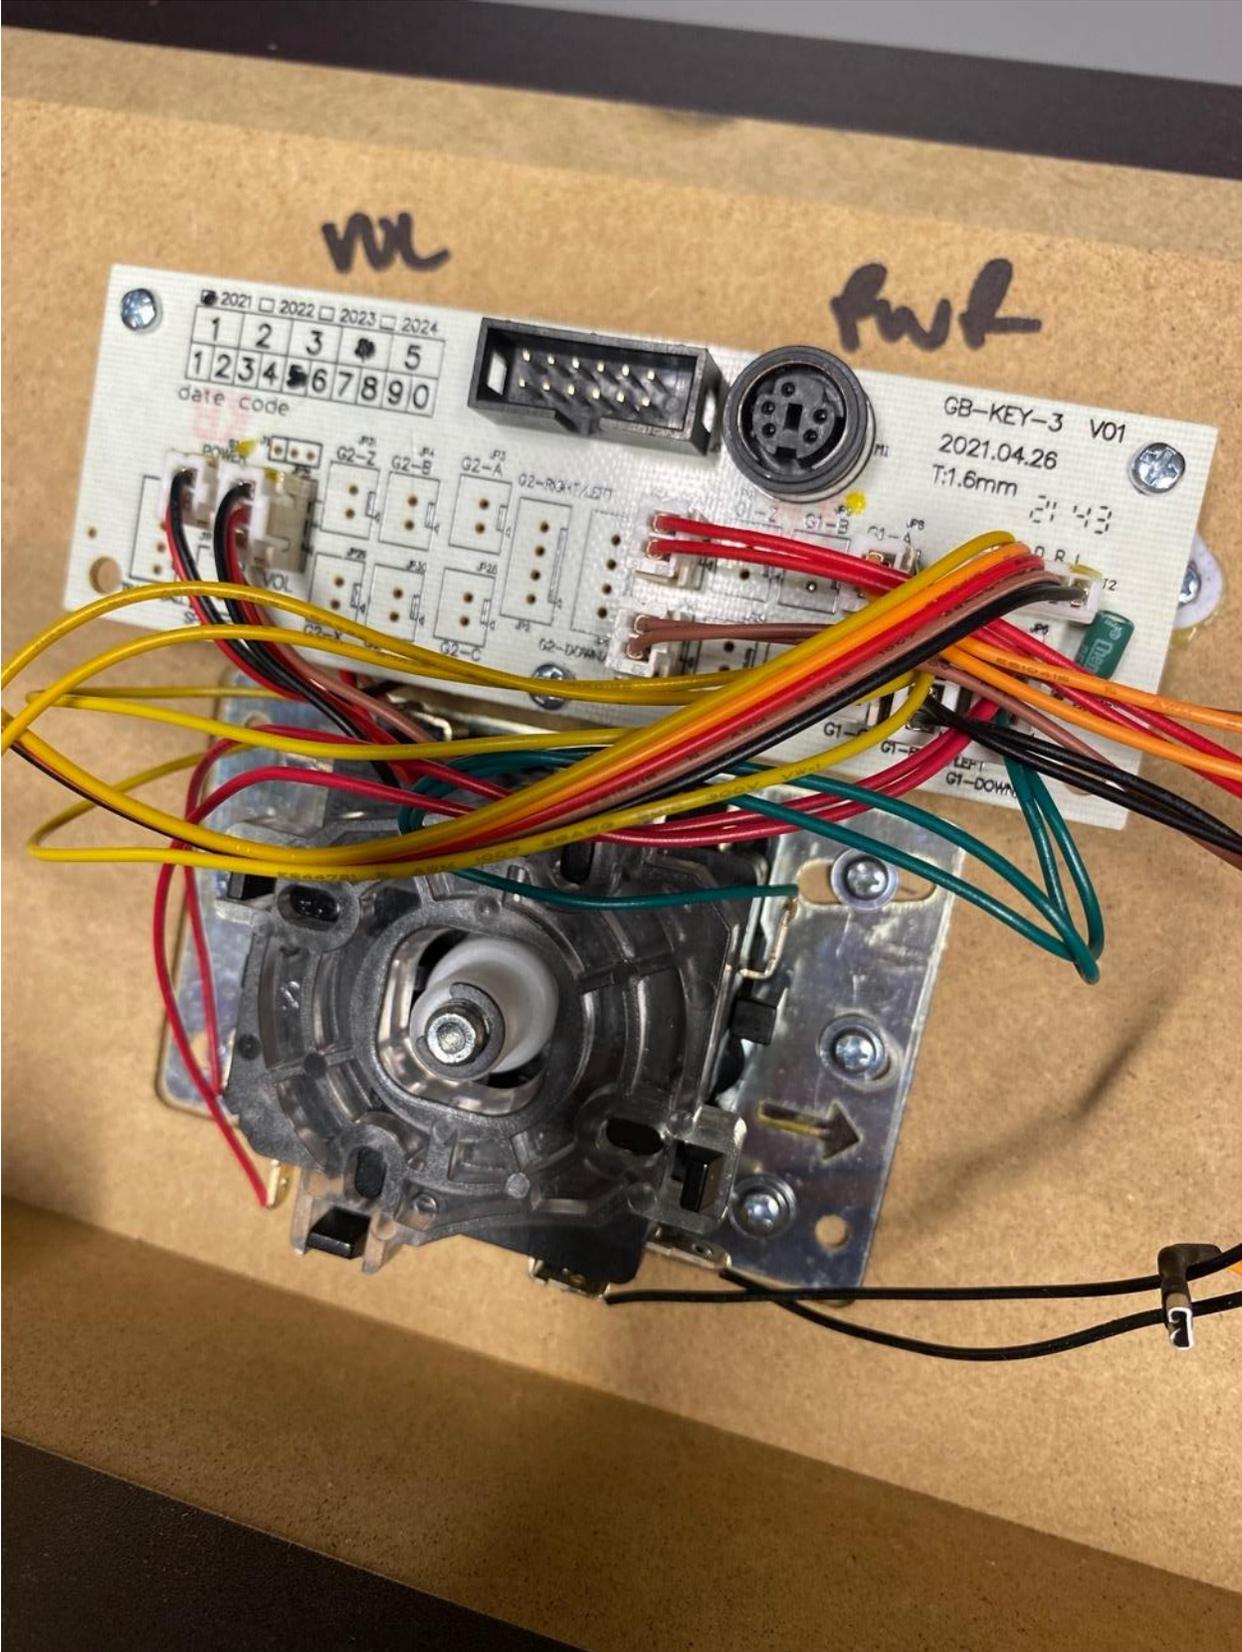

Dragons Lair Installation Instructions

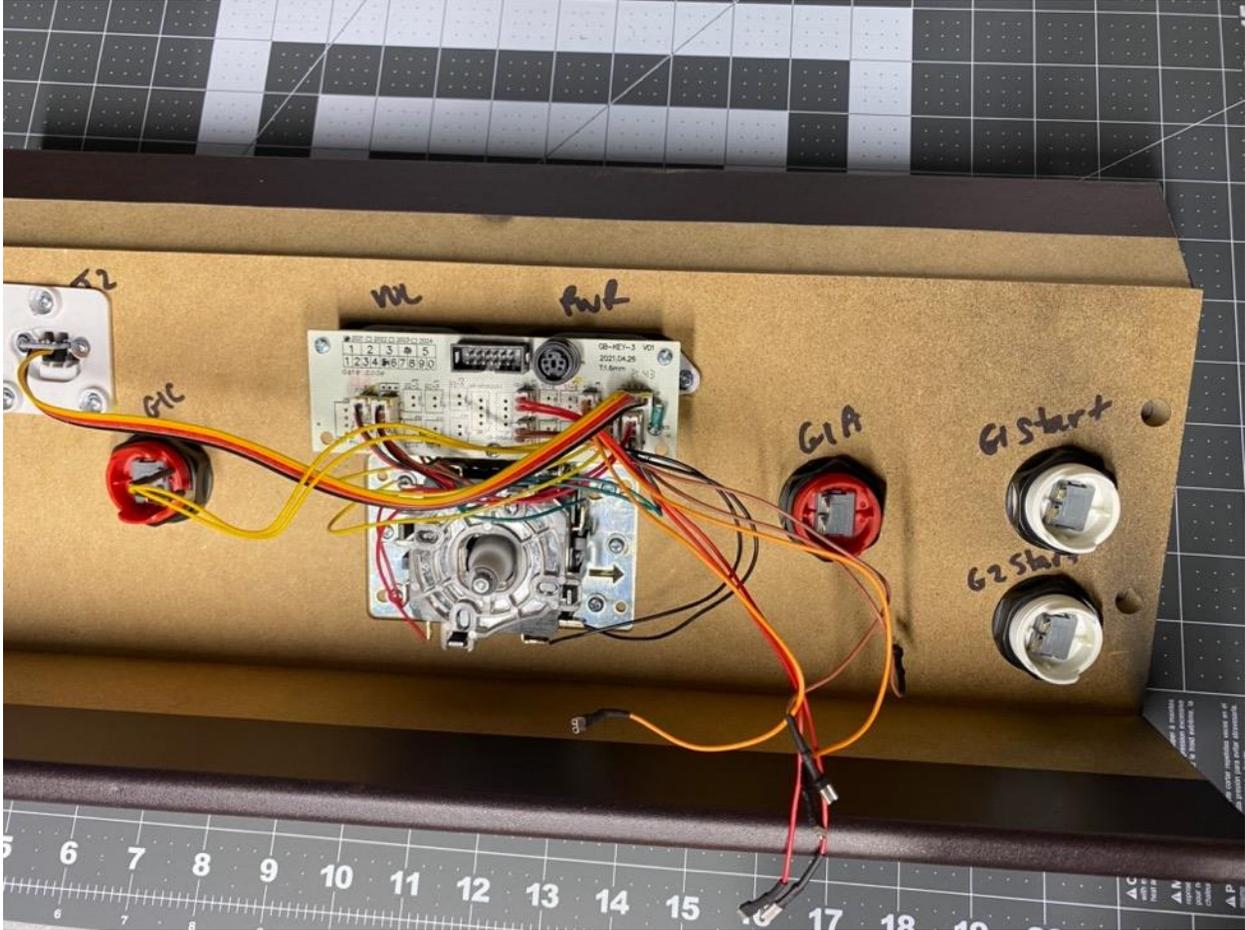


Dragons Lair Installation Instructions

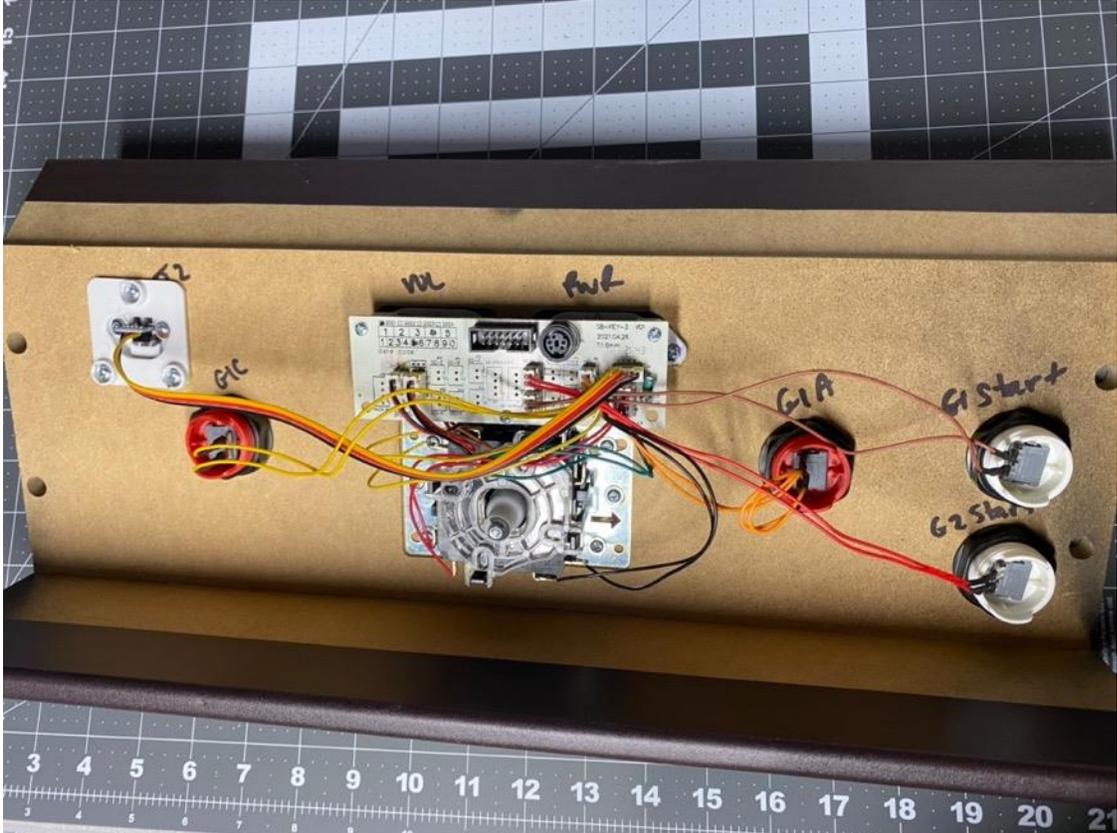

Dragons Lair Installation Instructions

Final Steps- The J Panels are marked Left (L) and Right (R) and must be installed as such.

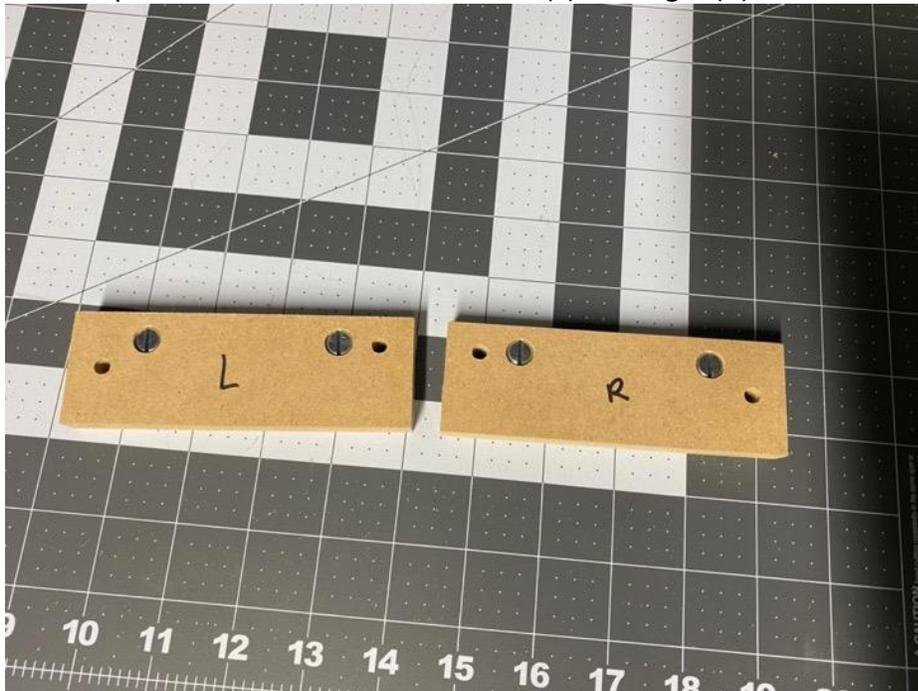

Install the Cross Barrel Insets into the deck with the Flathead screw slot facing vertical

******MOST IMPORTANT STEP, WHEN INSTALLING THE SCREWS YOU MUST NOT OVER TIGHTEN THEM. THEY NEED TO JUST BARELY CONTACT THE NEW J PANEL OR YOU CAN RISK THEM GOING THROUGH THE SIDE OF THE CABINET!******

