#### Directions to Install Class of '81 & Galaga Deck

Follow these directions VERY CAREFULLY for best results. Email us if you have questions at

Info@modoneup.com


Tools Needed for Installation: #2 Phillip Screwdriver #1 Flathead Screwdriver Optional: Small Pick Goof Off (similar adhesive dissolvent) Q-Tip

Step 1- Loosen the cabinet outside screws, the deck screws, and remove the stock deck and remove the N Panel, below the deck.





Step 2- Remove rear black plastic cover (This will not be reused and can be discarded, recycled, store in the base of the cabinet).

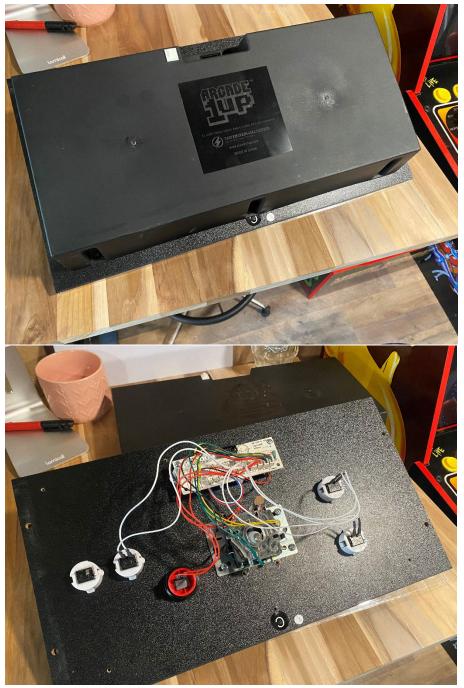



\*Note this image is of my modded Galaga cabinet, your joystick will be vertical and have G1X Connected on the far left.




Step 3- Remove the Ball and Dust Cover

Step 4- Remove the joystick and wires (do not disconnect from encoder board)

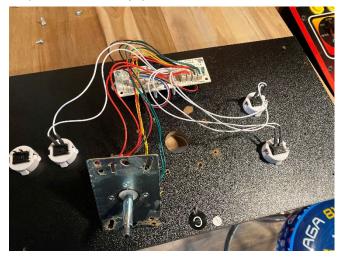


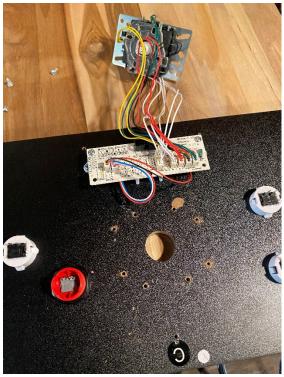

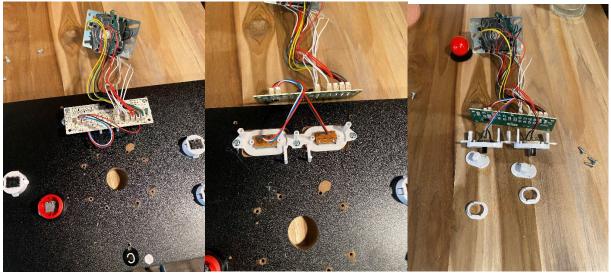


Step 5- Remove encoder board, encoder board support, VOL/PWR buttons, and surrounds

Step 6- Install surrounds in new deck and reinstall encoder board support and board

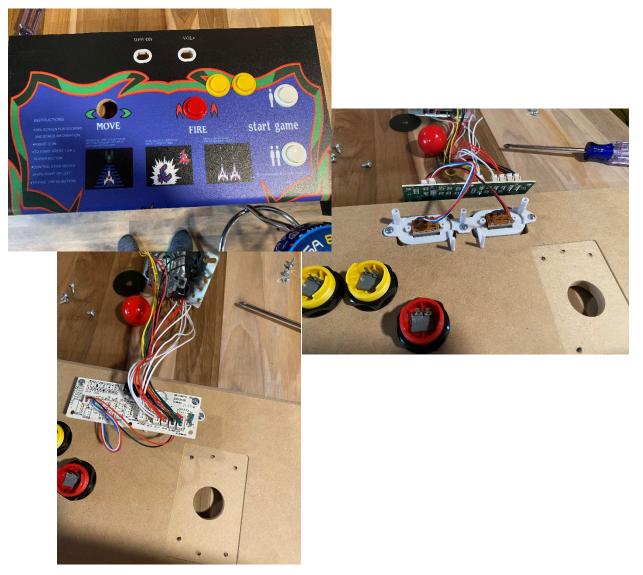

Step 7- Reinstall Joystick and connect buttons

(Looking at the back of the deck) Buttons: Red- G1C Yellow- G1Y Yellow- G1X Top White- G1Start

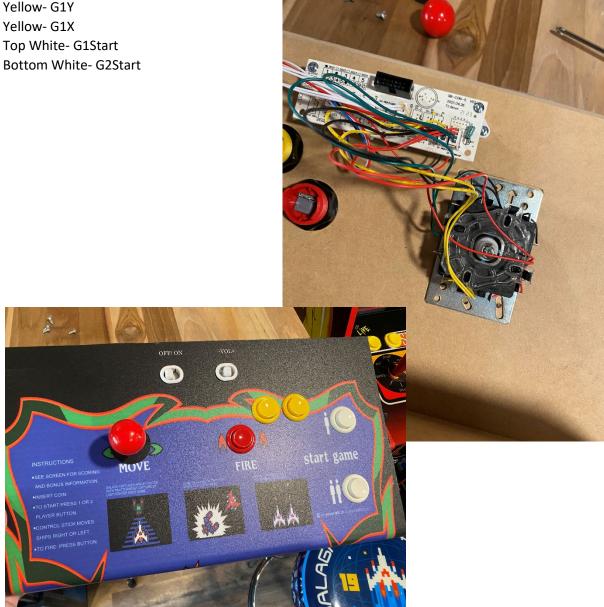

\*Graphics may look slightly different from this prototype deck.



Step 8- Reinstall deck and tighten side cabinet screws.

ENJOY YOUR NEW GALAGA CONTROL PANEL AND REMEMBER TO LET THE GALAGA CAPTURE YOUR SHIP FOR THE DOUBLE SHIP BONUS!!!

Please let us know if you have any questions, concerns, etc. at Info@modoneup.com