

Installation instructions for Star Wars Replacement Deck

Directions to install Star Wars Replacement Deck

Follow these directions **VERY CAREFULLY** for best results. Email us if you have questions at Info@modoneup.com

*****CAUTION:** While the entire aluminum support panel has been sanded, there is the potential for a sharp corner or cutout to exist, please use **EXTREME CAUTION** when working with the aluminum panel***

Tools Needed for Installation:

#2 Phillip Screwdriver

#1 Flathead Screwdriver

Optional:

Small Pick

Goof Off (similar adhesive dissolvent)

Q-Tip

Step 1- Loosen the cabinet outside screws, the deck screws, and remove the stock deck.





Installation instructions for Star Wars Replacement Deck

Step 2- Remove rear black plastic cover (This will not be reused and can be discarded, recycled, store in the base of the cabinet).



Step 3- Remove the encoder board and support (it is NOT necessary to remove any wiring).

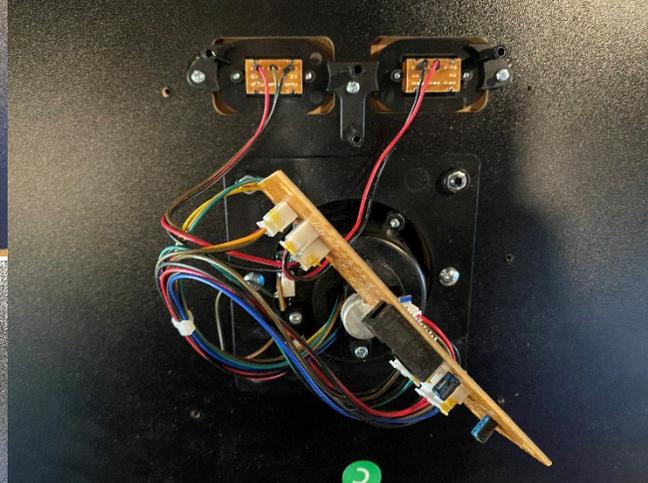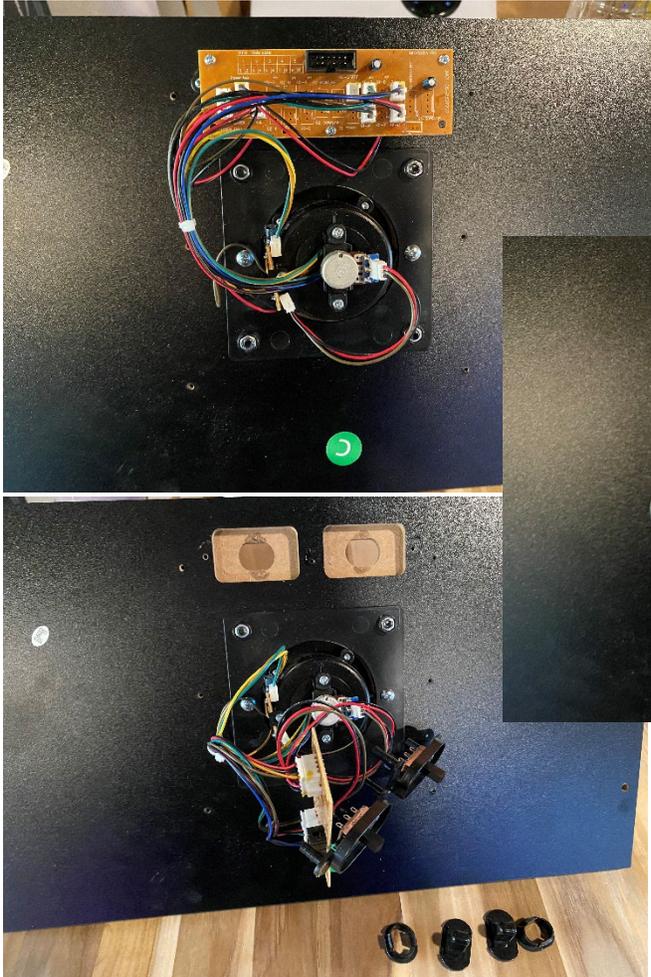

Installation instructions for Star Wars Replacement Deck


Step 4- Remove the 4 black screws from the front of the control panel (this can be tricky to hold the yoke and remove the screws, easier with a second person, or let the nuts fall out from the back)




Step 5- Remove 2 silver screws from the back of the control panel and remove screw collar while removing the power and volume surrounds (use Goof Off and a Q Tip to dissolve any glue for easier removal)



Installation instructions for Star Wars Replacement Deck

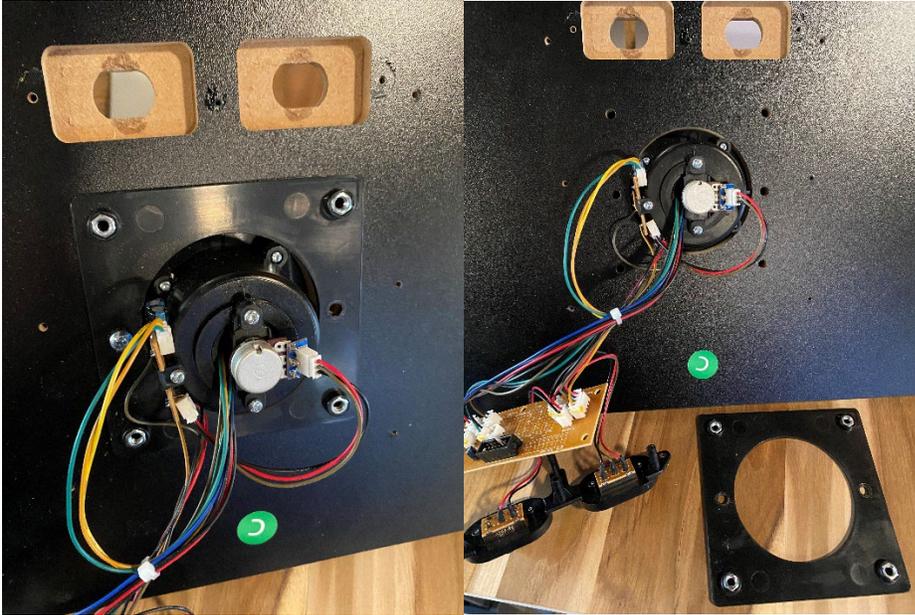


Step 6- Carefully pull out the yoke and the encoder board with the wires attached

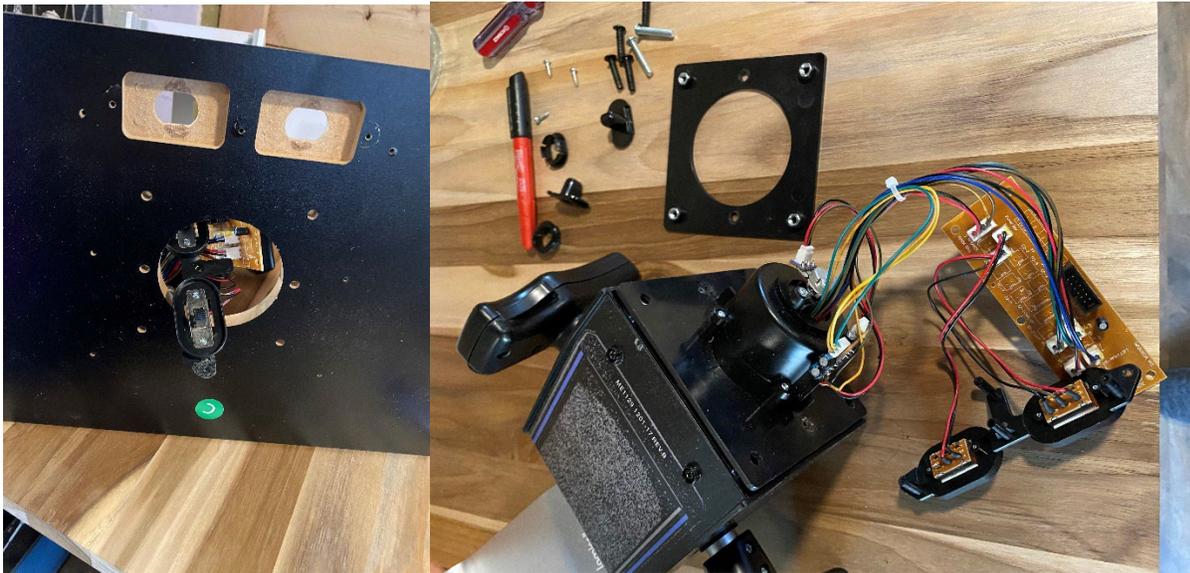


Installation instructions for Star Wars Replacement Deck

Step 7- Prepare replacement panel by install the surrounds and button sliders the carefully pull the encoder board and yoke through the panel, and install screw plate and the two silver screws (LEAVE THESE SCREWS A FEW TURNS LOOSE TILL THE VERY END TO MAKE INSTALL EASIER)

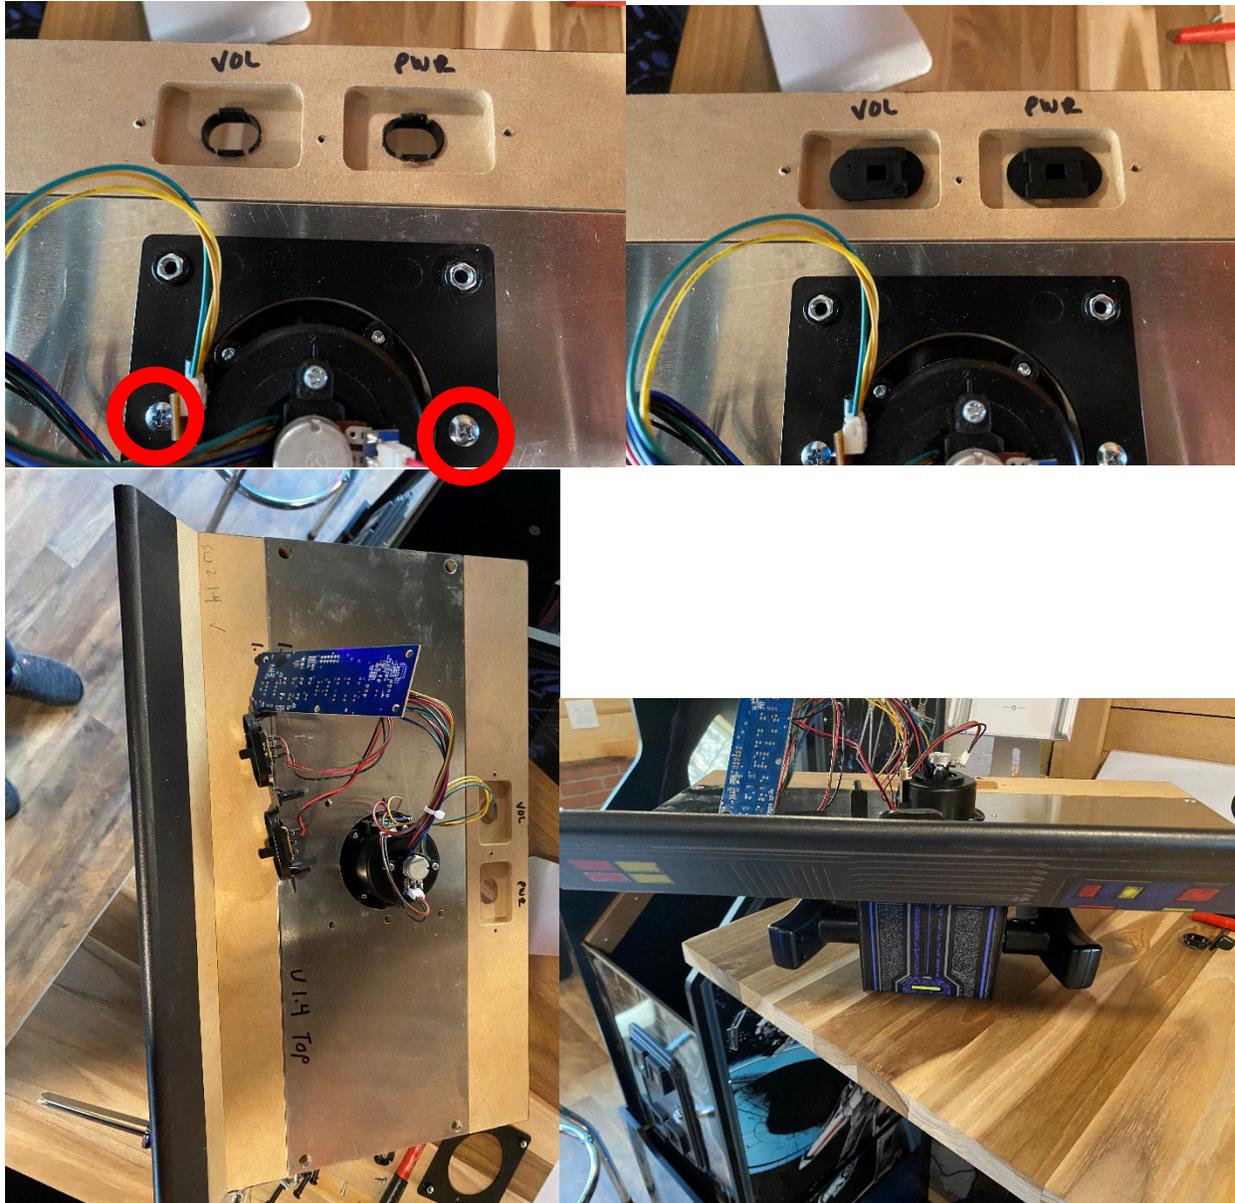

Installation instructions for Star Wars Replacement Deck

Step 8- Reinstall encoder board support and encoder board

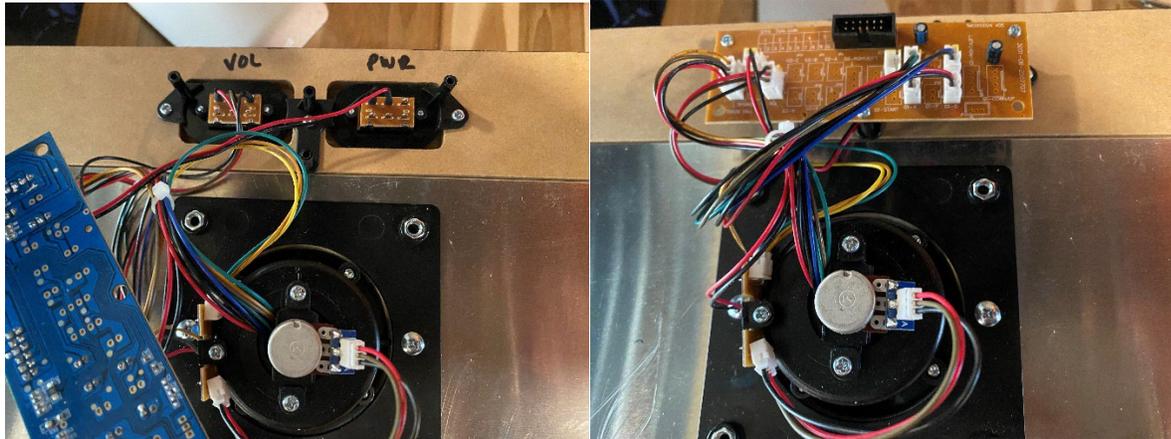

Step 9- Reinstall the 4 black screws through the front of the panel (this is the trickiest part of the install, leave all screws just loose until all 4 are seated and then tighten in a cross pattern, turn the deck over and final tighten the two silver screws)




Installation instructions for Star Wars Replacement Deck

Step 10- Connect the encoder board and install the entire control panel (hold control panel up against the monitor and install top two screws first, then bottom two, do not tighten till all 4 are in, then do NOT OVERTIGHTEN, screws should be just snug to the control panel).



Installation instructions for Star Wars Replacement Deck

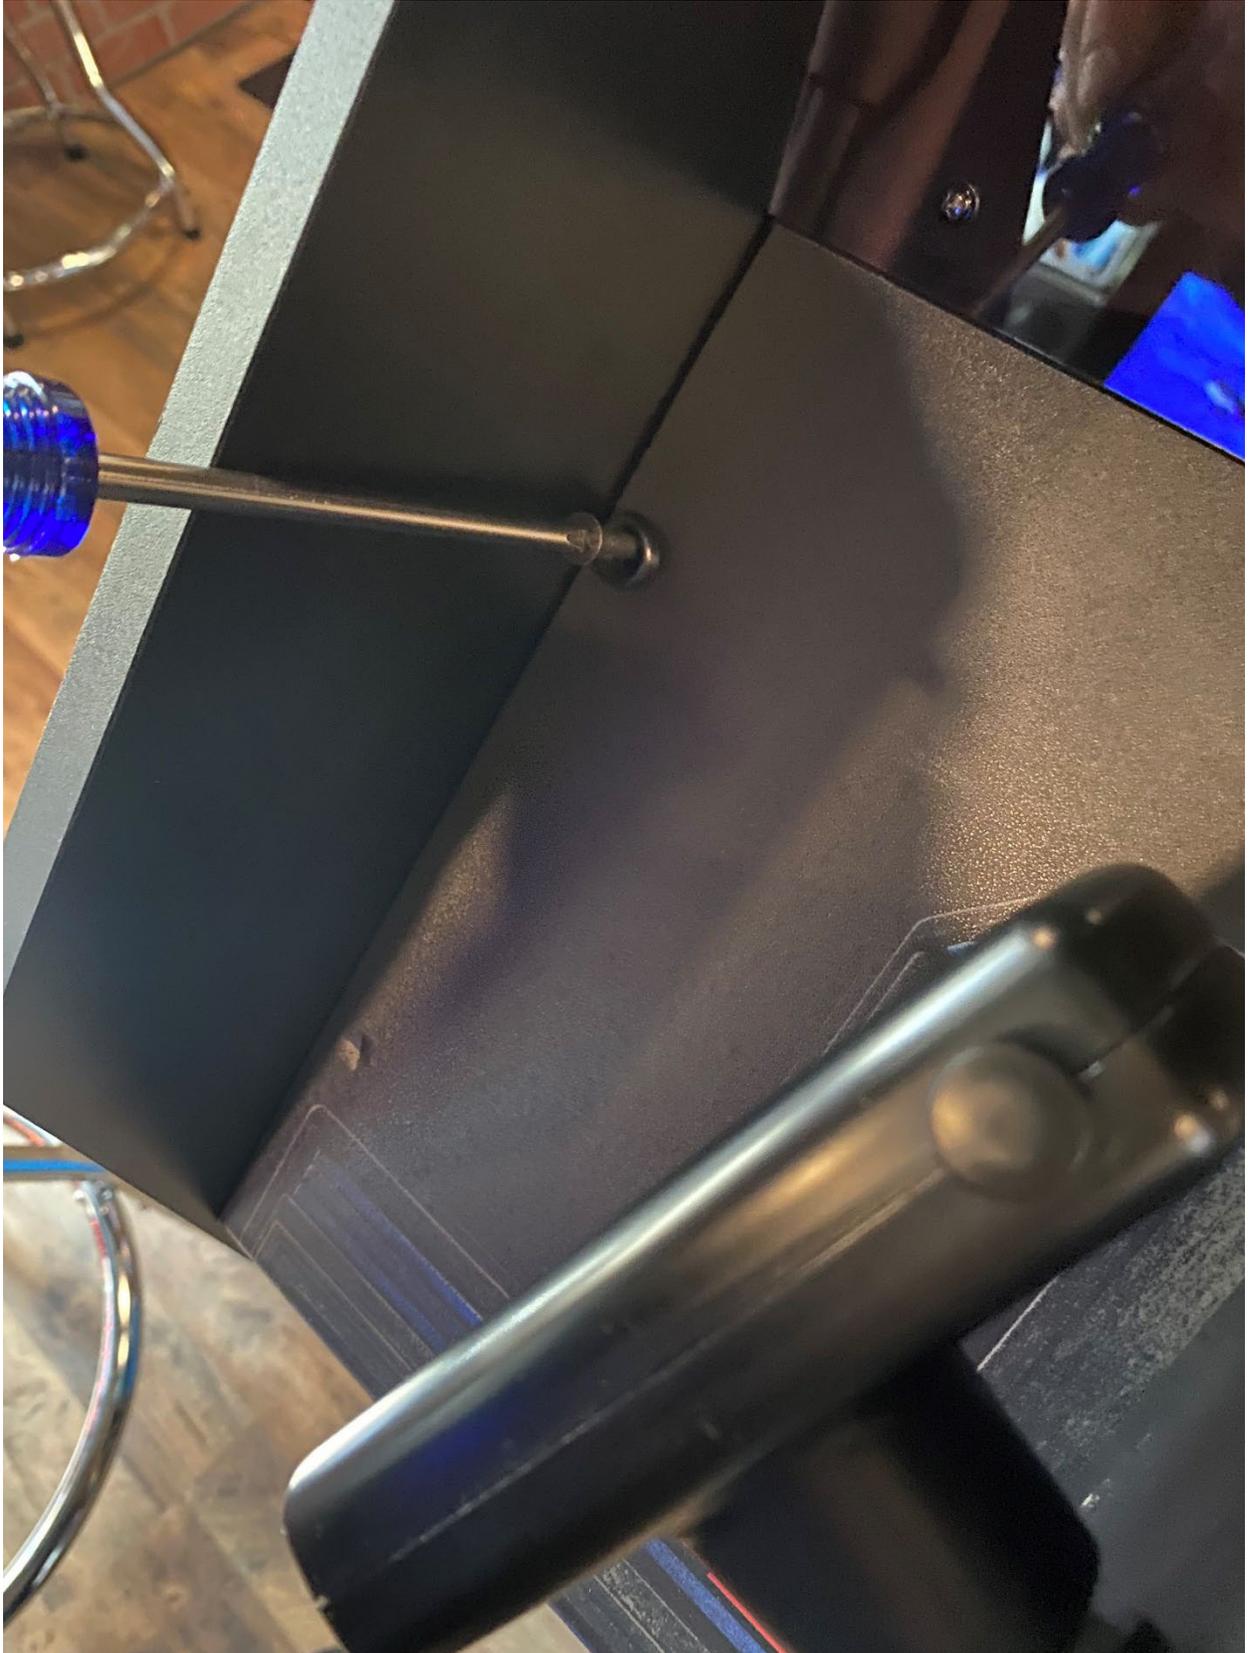

Installation instructions for Star Wars Replacement Deck



ENJOY YOUR NEW STAR WARS CONTROL PANEL AND TAKE OUT THE DEATH STAR!!!

Please let us know if you have any questions, concerns, etc. at Info@modoneup.com