


Directions to install Tempest Mod Deck (Volcano Button Version)

Step 1- Remove the spinner cap, a little bit of pressure to lift it will suffice.




Step Two- Remove cable from spinner and remove spinner, some light prying on the edges of the spinner should remove it.

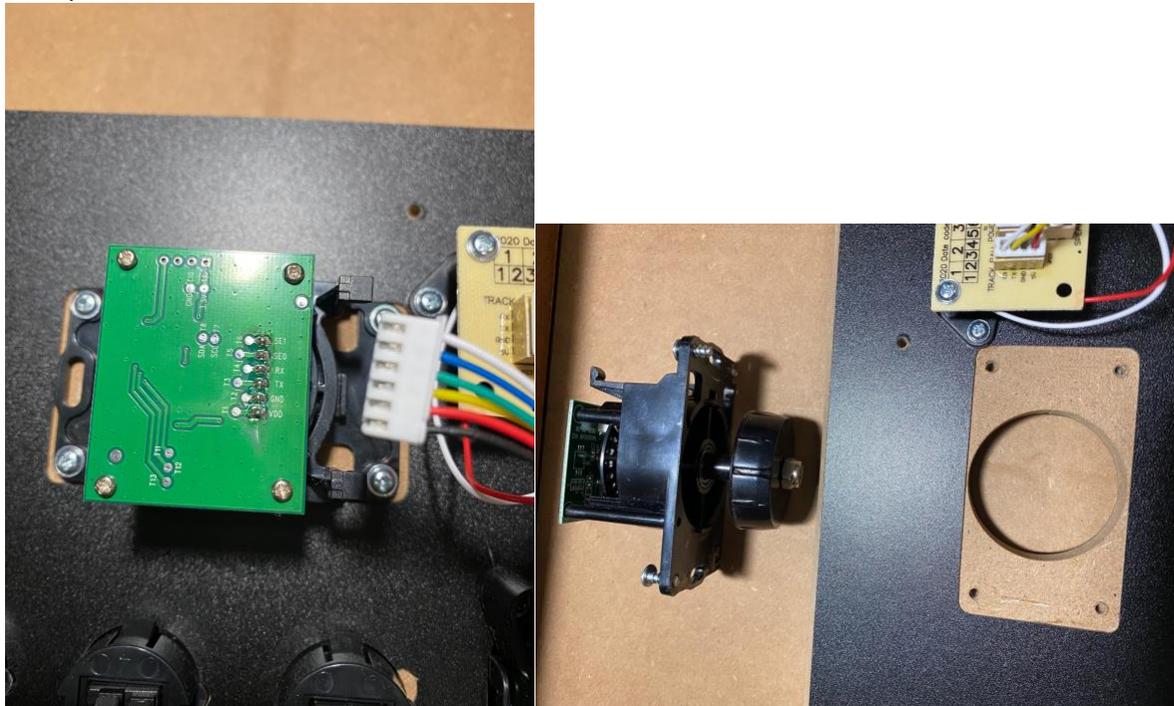

Step 3- Remove cables from buttons and pinch sides to remove, all button locations are already mapped on your deck so no need to label. Polarity on the cables does not matter, either side can be connected.




Step 4- Remove trackball cable from control board.

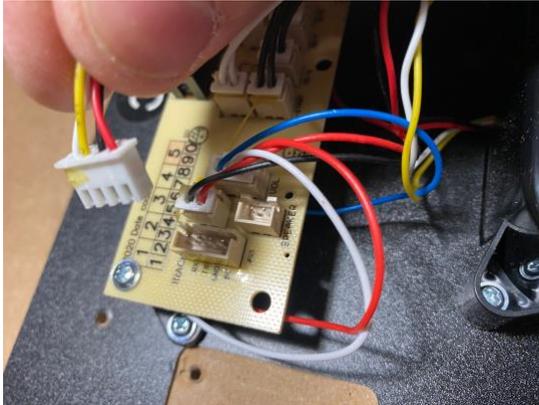

Step 5- Remove trackball from deck, when reinstalled cord must be facing north as indicated on the deck otherwise trackball orientation will be incorrect.



Step 6- Remove top screws from control board, then remove lower screws from VOL/ POWER mount.

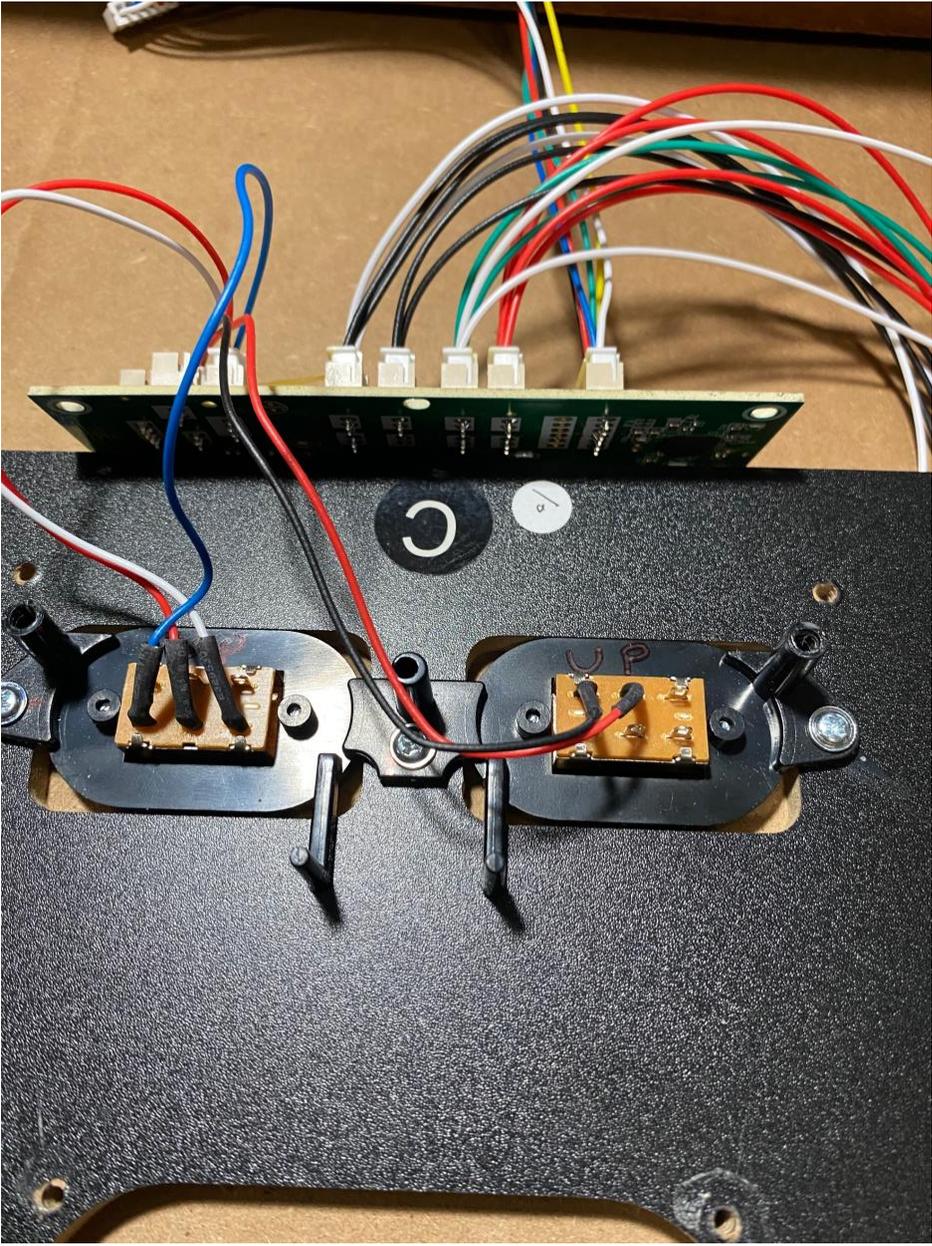

Step 7- Remember to remove button surrounds and move to new board.




Step 8- Reverse all the steps and enjoy your new deck!

Additional Volcano Button Steps

Step 9- Install Volcano Buttons




Step 9- Connect LED harness to Volcano LEDs

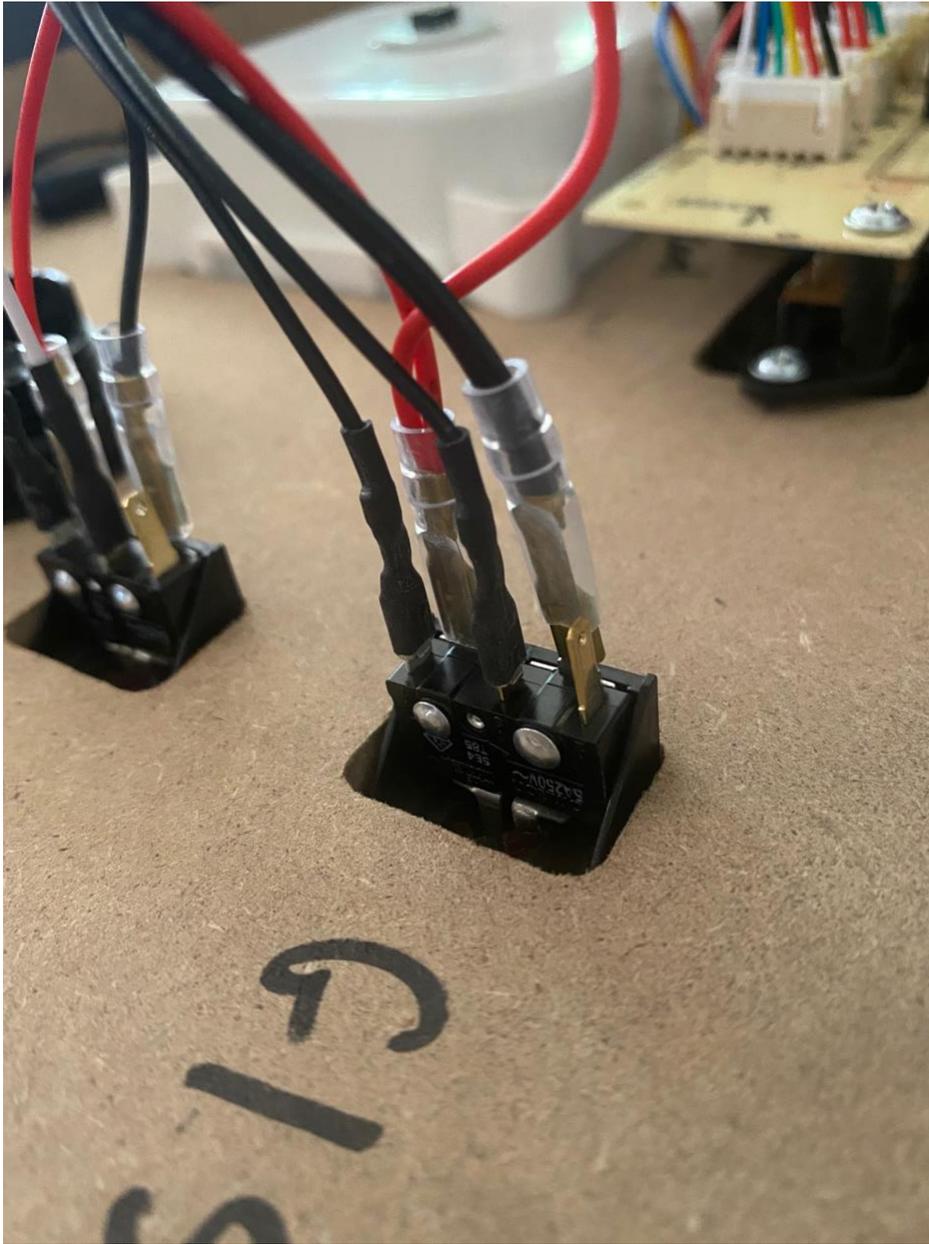

Step 10- Connect buttons as show in image above

Step 11- Connect Harness to Marquee and PCB

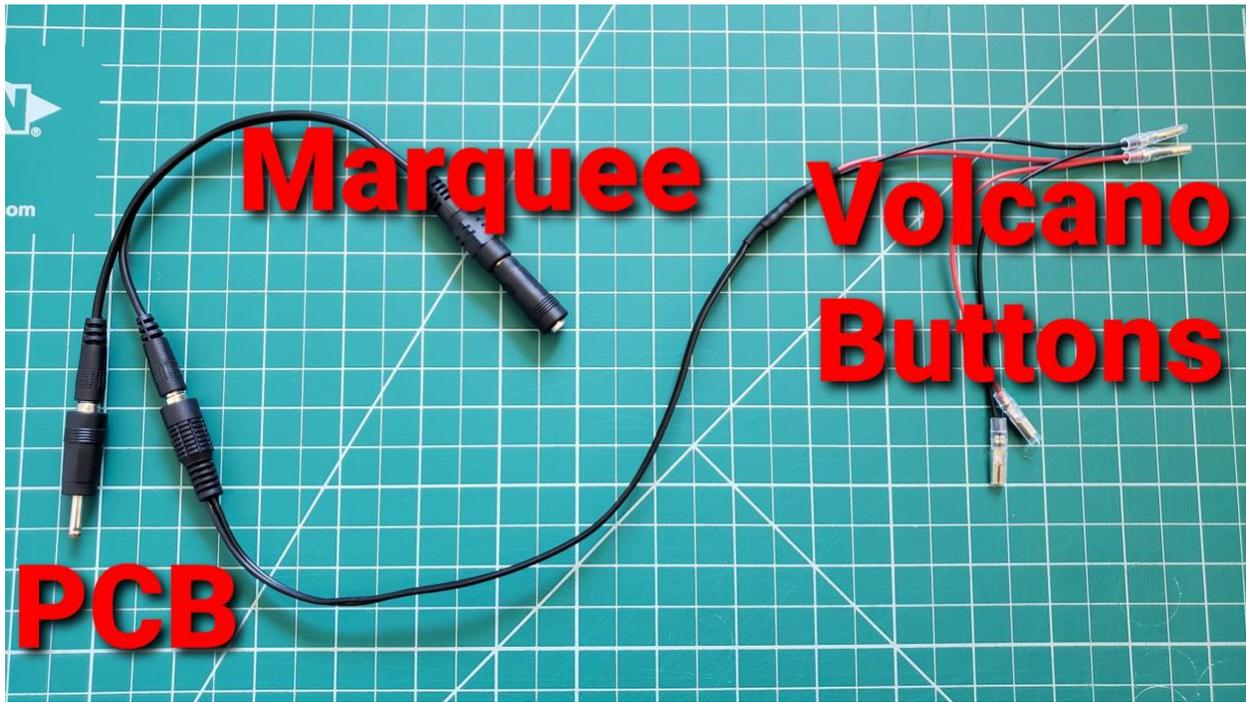

Step 12- Put deck back together and Zap away!

Please email us with any questions at: info@modoneup.com