

## INNER WHEEL GUARDS

### 01 - Toyota Prado 150/FJ Cruiser

#### Installation Instructions

Set of four (4) heavy duty Neoprene guards. Replacement guards for driver and passenger side, to protect the engine from mud and debris penetrating and damaging the engine.



Our guards are made of a premium grade 3mm Reinforced Neoprene Rubber. Included are:

#### **8mm x 18 Clips**

Insert into the guard and then find the correlating chassis holes, before locking all clips securely into place.

#### **7mm x 2 Clips into shock covers**

Secure through the guard to the shock cover as shown below.

#### **Maintenance**

The rubber guards are anti-abrasion, tear and crack resistant and grease, fuels, oil and saltwater resistant. For long term protection from natural drying conditions and maintaining the hydrophobic qualities, an application of sealant can be applied.


Remove the existing guards with a clip remover tool or a wide flat screwdriver, if they haven't torn off already, don't worry about saving the old clips as we've provided the new clips. Using the diagram below select the correct guard for the driver/passenger side position, select the appropriate guard in the correct position and use the correct clips provided.

The guards are not designed to fit tightly as the guard is attached to the body on top and the chassis at the bottom, this allows for vehicle movement.


The following diagram indicates the position for each clip type:

8mm x 18 and 7mm x 2 ☆

Driver Side - Rear

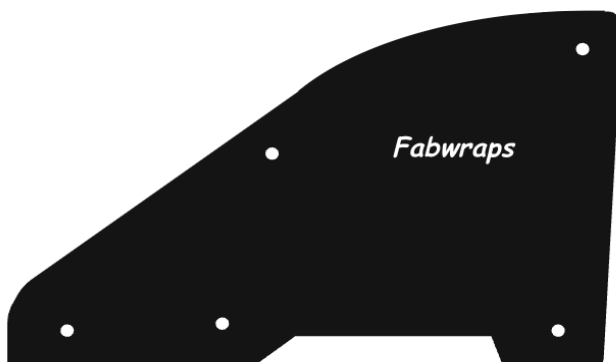


Front

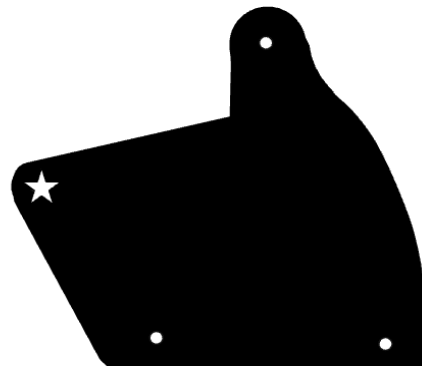

Passenger Side - Front



Rear

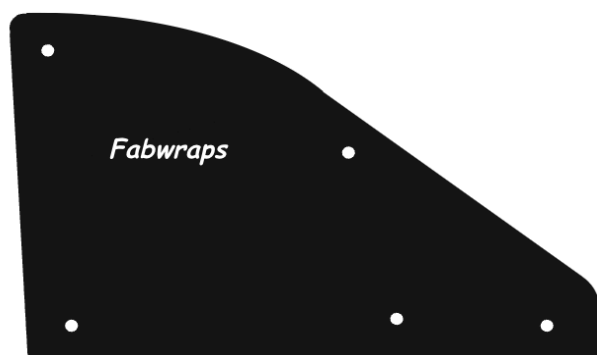

*Clip Tip: Pull the 8mm clip apart, place the back piece into the guard, fit guard to the car and then push the clip top into place to secure.*

*A quality design, proudly made in Melbourne.*