


TOYOTA

PRADO 150/FJ CRUISER (LH/RH)

TOYOTA Prado 150 (2009 - 2024)
TOYOTA FJ Cruiser (2006 - 2017)

Installation Instructions

Set of four (4) Inner Wheel Guards (LH/RH) replacement for driver and passenger front wheel arch, to protect the engine from mud and debris penetrating and damaging engine components. Our guards are made of a premium grade 3mm Reinforced Neoprene Rubber.

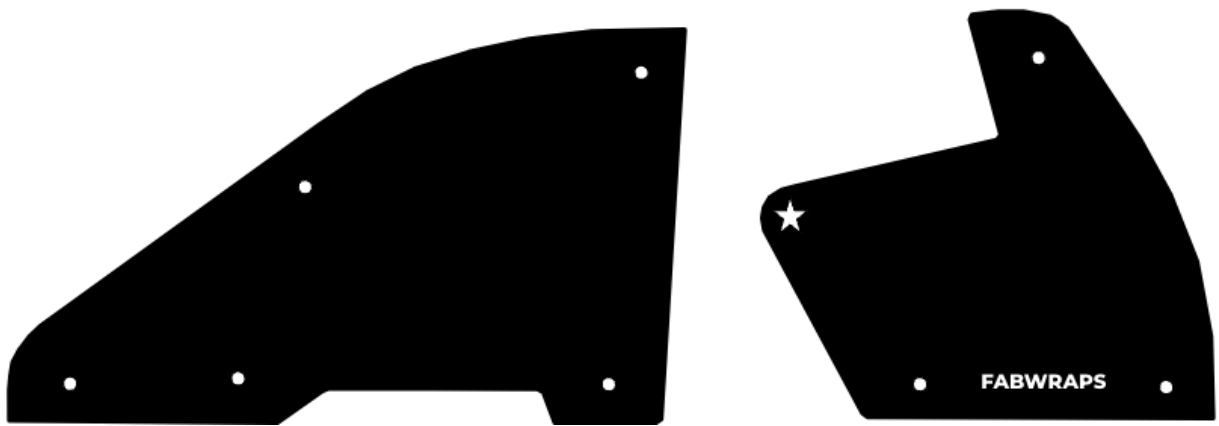

Maintenance

The rubber is crack, grease, fuels, oil and saltwater resistant. An application of rubber sealant should be applied for long term protection from natural drying conditions and to maintain the hydrophobic qualities.

Fitment

The guards are not designed to fit tightly, they are secured to the body and chassis and should allow for movement and flex as the vehicle navigates rough or uneven ground.

To install, you will need a clip removal tool or wide flathead screwdriver, small hammer to gently encourage the clips into place and gloves, some edges may be sharp.

Occasionally a hole may be a bit tricky to fit the clip into place, a previous owner may have drilled out the hole to enlarge it, in this instance you may need to install a clip to suit.

You will require only moderate force to push the clips home, if they need a little more persuasion please use a small hammer with a gentle tap, excessive force will break the clip.

Using the diagram below, insert the appropriate clips to the guard, and start to fit from the centre top working down each side.

Clips

8mm Body/Chassis Clip (18) ○

Insert the clips into the guard, position the guard into place before locking each clip securely into place. Lift the lower part of the guard slightly to locate the corresponding chassis hole.

7mm Shock Cover Clip (2) ☆

Insert the clip into the guard and press securely into the shock tower.


Passenger Side (LH) - Rear



Front



Driver Side (RH) - Front

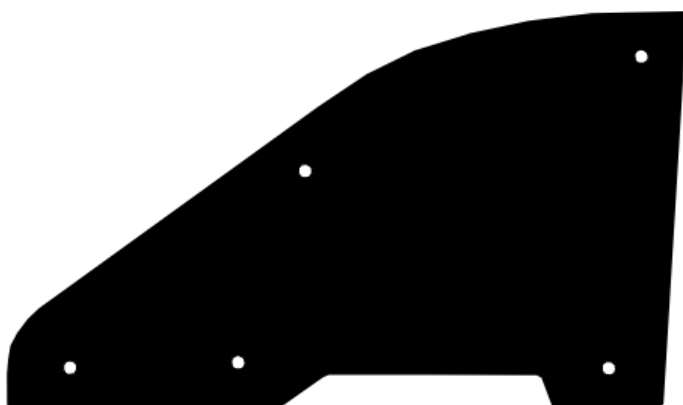

Rear

