


NISSAN

PATROL GU Y61 (LH/RH)

Installation Instructions

Set of three (3) Inner Wheel Guards (LH/RH) replacement for driver and passenger front wheel arch, to protect the engine from mud and debris penetrating and damaging engine components. Our guards are made of a premium grade 3mm Reinforced Neoprene Rubber.

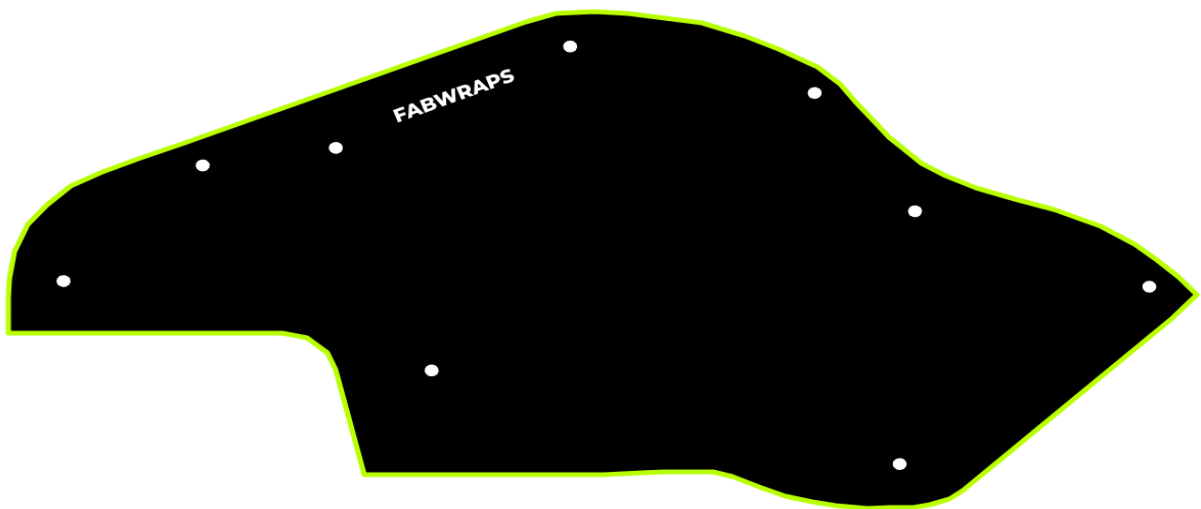

Maintenance

The rubber is crack, grease, fuels, oil and saltwater resistant. An application of rubber sealant should be applied for long term protection from natural drying conditions and to maintain the hydrophobic qualities.

Fitment

The guards are not designed to fit tightly, they are secured to the body and chassis and should allow for movement and flex as the vehicle navigates rough or uneven ground.

To install, you will need a clip removal tool or wide flathead screwdriver, small hammer to gently encourage the clips into place and gloves, some edges may be sharp.

Occasionally a hole may be a bit tricky to fit the clip or the hole is too big (a previous owner may have drilled it out), you may need to install a smaller/bigger clip to suit that hole.

You will require only moderate force to push the clips home, if they need a little more persuasion please use a small hammer with a gentle tap, too much force will break the clip.

Using the diagram below, first insert the appropriate clips to the guard, and start to fit from the centre top working down each side.

Clips

5mm Body Clip (12) ○

Insert the body clips into the guard, find the corresponding body holes starting at the top and work down each side to securely lock into place.


8mm Chassis Clip (6) ☆

Separate the two-part clips and insert the back part into the guard, lift slightly to find the corresponding chassis hole before locking the clip securely into place.

5mm Body Screwclip (2) ○

Insert into the LH rear guard.

Driver Side (RH)

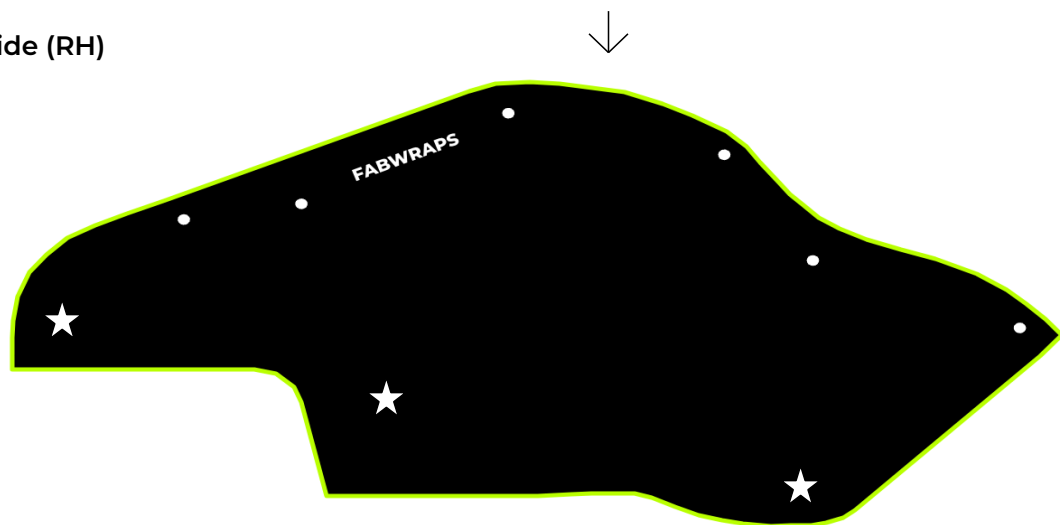

Passenger Side (LH)



5mm Screw Clips (2)