




On the pin header provided with kit, snip the odd pins out, leaving the plastic retainer spacers intact.

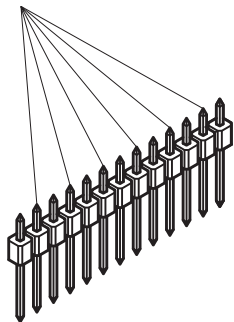


Once you've snipped out the odd pins your part should look like this:

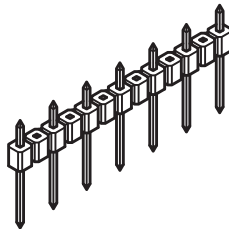


Insert the pin header through corresponding holes on the edge of the PCB and solder them in.

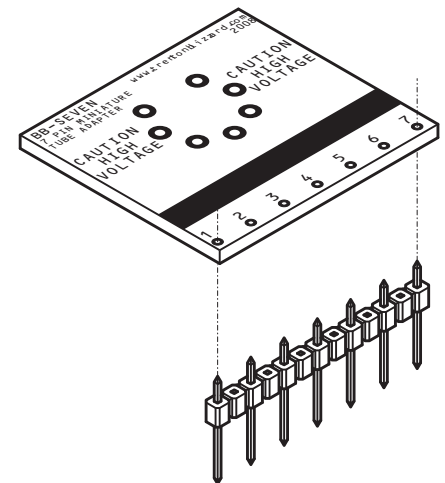

Align the seven pin socket (provided with the kit) with the hole pattern on the top of the board, insert pins through holes and solder.

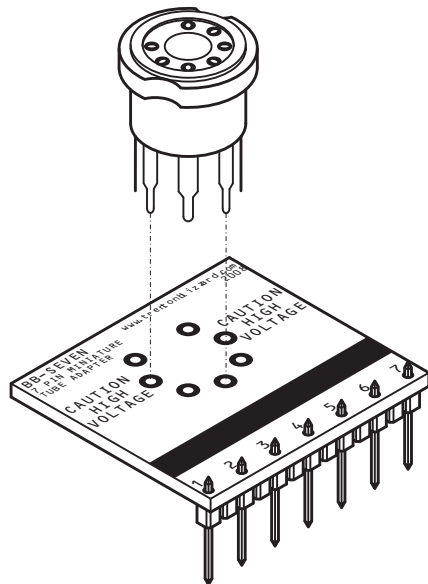

If your finished assembly looks like this, pat yourself on the back for a job well done.

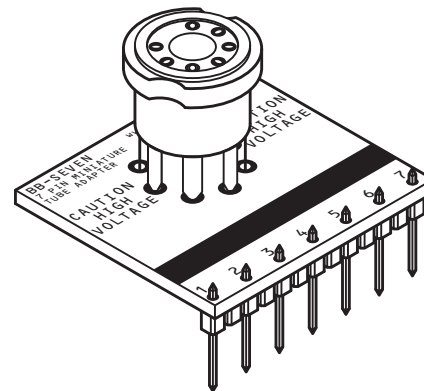

TRENTON
BLIZZARD

BB-SEVEN ASSEMBLY INSTRUCTIONS

© Copyright 2008 Trenton Blizzard Designs