



Exterior


PG 7

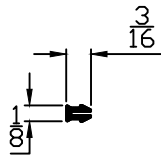


5924
Groove Filler




5940
3.5' Backset Windbreak

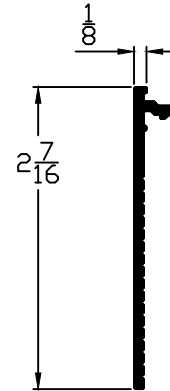


5927
Masonry Flange

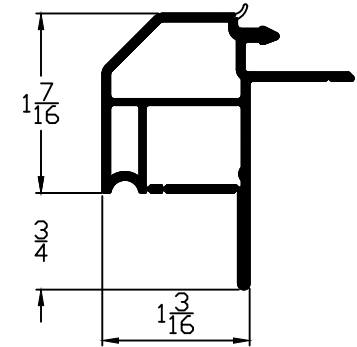

5907
Brick Mould w/Windbreak
& J-Channel

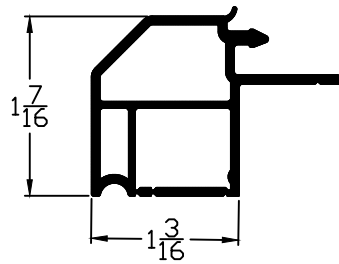


5917
Brick Mould w/ J-Channel

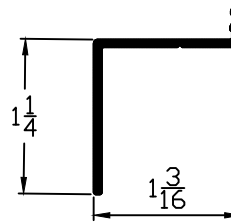


5945
4-9/16' Backset Windbreak


Interior

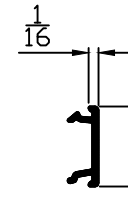


5839
1/2' Groove Filler

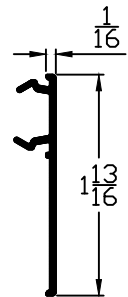

5892
Groove Filler w/Trim

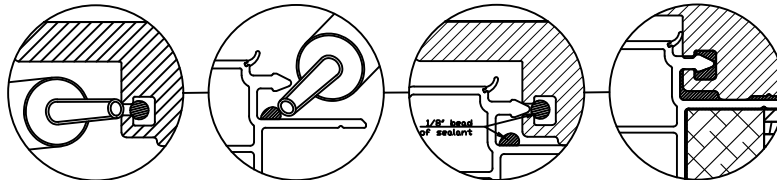

- 1st.: Place a small bead of sealant in the exterior accessory track.
- 2nd.: Place another bead as shown on the accessory part.
- 3rd.: Align the 2 parts as shown.
- 4th.: With firm taps apply the accessory part with a deadblow hammer.

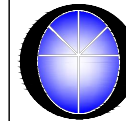

Wincore
Windows & Doors
250 Staunton Avenue
Parkersburg, WV 26104

DRAWN: TLD	DATE: 04/17/2020	SCALE: NTS
SERIES: 5400 / 7700 / 8800		
Title: Slide Patio - Accessories		DRAWING LOCATOR: Tlo 005-Win Acc App Dwg