

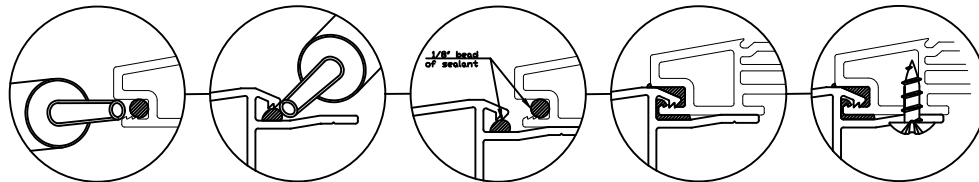


Exterior

PG 4

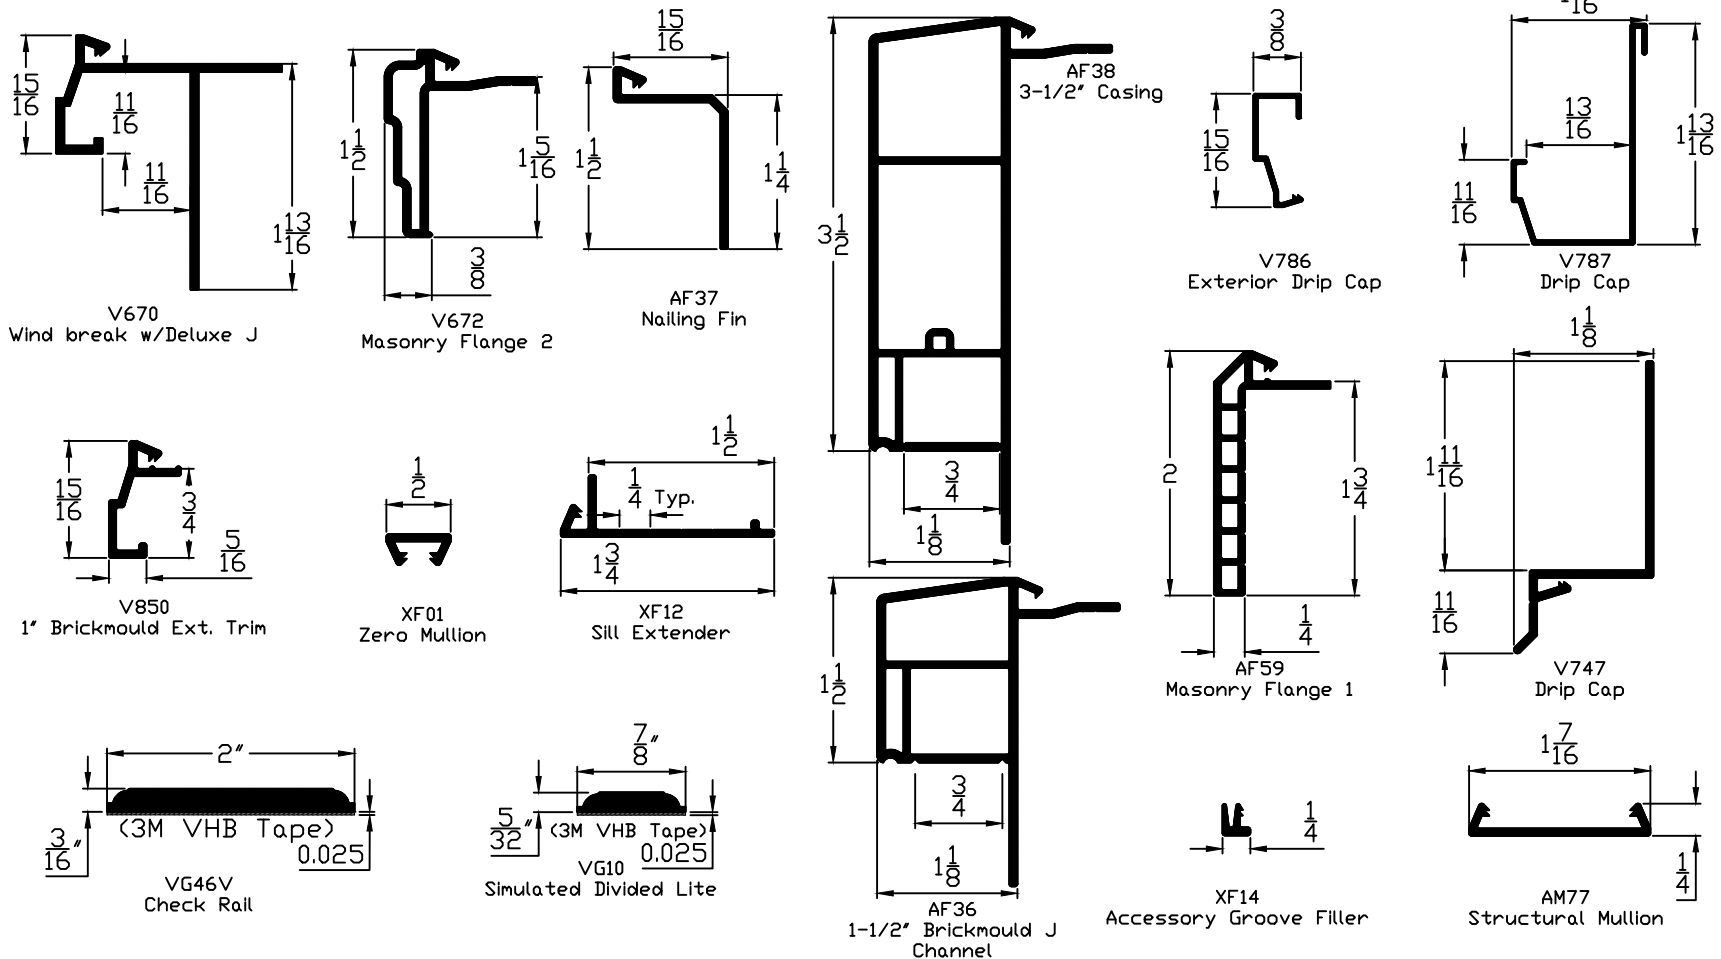

- 1st.: Place a small bead of sealant in the exterior accessory track.
- 2nd.: Place another bead as shown on the accessory part.
- 3rd.: Align the 2 parts as shown.
- 4th.: With firm taps apply the accessory part with a deadblow hammer.
- 5th.: For the following profiles (AF36, AF38, V670, V672) Screws are added as shown on a 10" to 12" spacing.

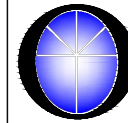

Wincore
Windows & Doors
 250 Staunton Avenue
 Parkersburg, WV 26104

DRAWN: TLD	DATE: 04/17/2020	SCALE: NTS
SERIES: All		
TITLE: Exterior Window Accessories		DRAWING LOCATOR: Tlo 005-Win Acc App Dwg