




7611 208th Street North
 Forest Lake, MN 55025
 sales@waveproshock.com
 612.834.4959

INSTALLATION HD PRO SLIDER AND PEDESTAL

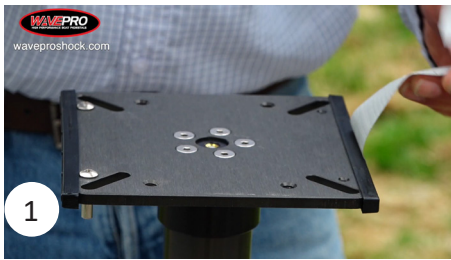

1. Remove tape from top plate black sleeves.




2. Insert slider with locking rail bolts on the same side as guide pins.



3. Slide pedestal to center of slider as shown. Note: guide pins and locking rail bolt are on same side.



4. Insert locking rail into tab on back of slider.

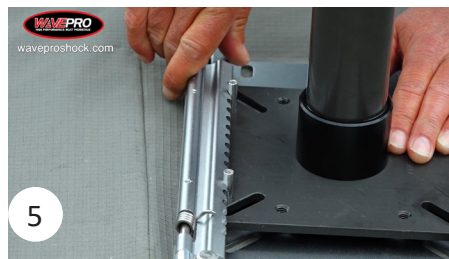


5. Keep locking rail low to engage rail spring, align guide pin with locking rail.



6. Thread in 2nd locking rail bolt.



7. Tighten both locking rail bolts. Locking Rail should be able to move without sticking.

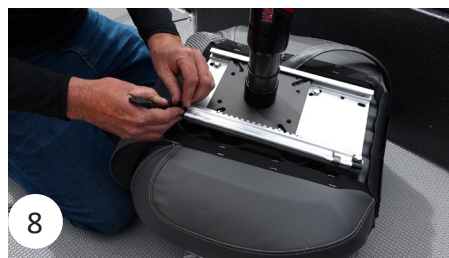

8. Install seat on pedestal.



9. Install pedestal using original bolts.



10. Add air to the WAVEPRO with supplied pump until the WAVEPRO fully extend, this will be about 45 Lbs.



11. Adjust o-ring travel indicator to 1" to 1 1/2" above Air Sleeve as shown.



12. Have rider sit on seat and let air out by depressing button on pump until o-ring contacts air sleeve as shown.

Youtube video Link

<https://youtu.be/8gn6yuAQkT8>