


Half-length Centre Floor Console - Install Instructions

1. POSITIONING SEATS

Slide both front seats forward and tilt the back rest forward. This allows access to the two screws on each side of the factory console.


2. CENTRE CONSOLE REMOVAL

Remove the 5 screws from the base of the factory console (2 on each side & one at the front). These screws are not reused on the new console.

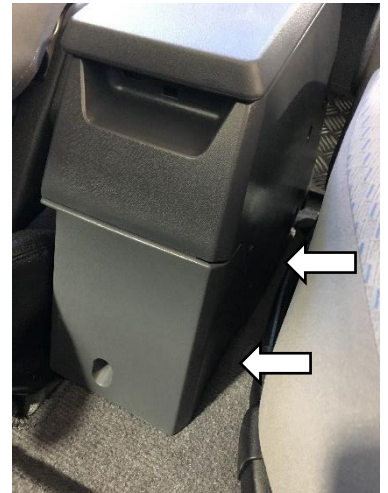

3. ALIGNING THE SCREWS

As pictured, there are three factory threads that will be used to attach the new console. The front 6mm bolt is the first thread to be assembled. Once this is in place it will help align the two rear screws.

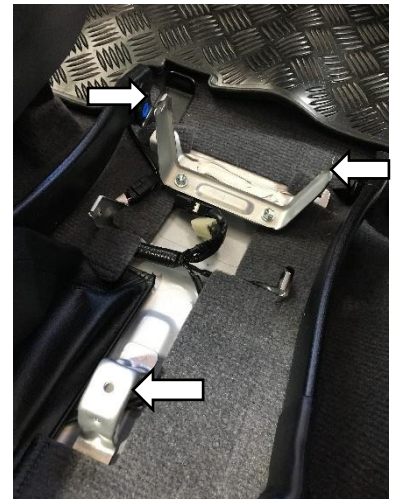

4. REAR SOCKETS


If you have purchased the rear socket option for your console, we have deliberately made the harness for the rear sockets too short to reach the front harness. This is to prevent over loading of the circuit. Instead, an auxiliary power box can be found under the bonnet in front of the brake booster which we suggest using as the power source, as it is the easiest to be wired too.



5. REAR SOCKETS POWER – FIRE WALL

Pictured, are the 2 grommets beside the brake booster that can be used to run the power through the fire wall for the console.

The wires can then be run down the kick panel and under the carpet to the handbrake where they can be connected to the console harness

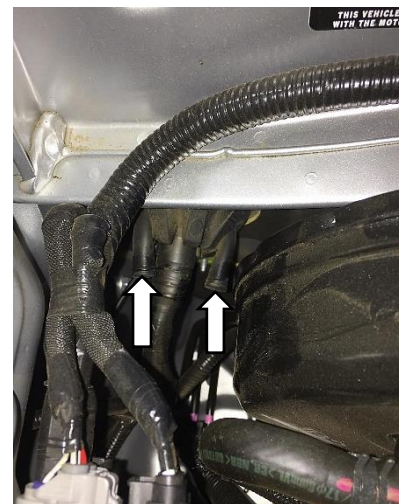

6. POWER & EARTH SELECTION

Pictured, are the fused terminals that provide the easiest power supply for the console. The wires can be brought up through the bottom of the power box and be connected to the (-neg) Earth terminal. You can choose to connect to constant power – 12V battery (BATT) or accessory power – 12V accessory (ACC). i.e. on with the key.




7. SECURING THE CONSOLE

Remove the rear cup holder from the console; this is just pressed into the top trim. Remove the 6mm bolt and loosen the 2 rear screws so they do not protrude on the inside of the console.

Put the console in place and make sure the seat belt stalks are folded forward. The silver brackets under the rear of the console must slide up inside the bottom of the console. Use a torch to shine down through the rear cup cavity to find the hole before dropping the screw into place to start the thread.

Tip: at this stage do not tighten the cup holder screw.

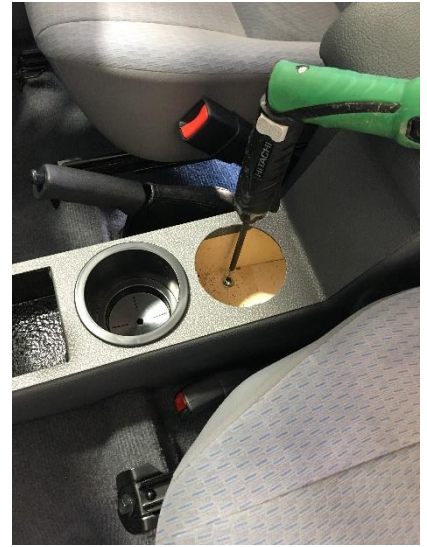

8. TIGHTENING OF SCREWS

Place one hand on the lid of the console to gently hold it down and make sure the floor mat is clear from under the console. Start and fully tighten each of the side screws. Once this is finished you may now tighten the 6mm bolt inside the rear cup cavity. After all screws are tightened and secured, place the rear cup holder back into the cavity.



CHECKLIST – OFFICE USE ONLY

- Console Matches Invoice
- Instructions Match Consoles
- 2x Side Screws
- 1x Rear Cup Bolt
- Correct Cup Holders - Stainless Steel or Black Plastic
- Signed _____ .