


SporeCount Agri™ Sampling Location Guide

Controlled Environment Agriculture Facility

© PBS Lab Services

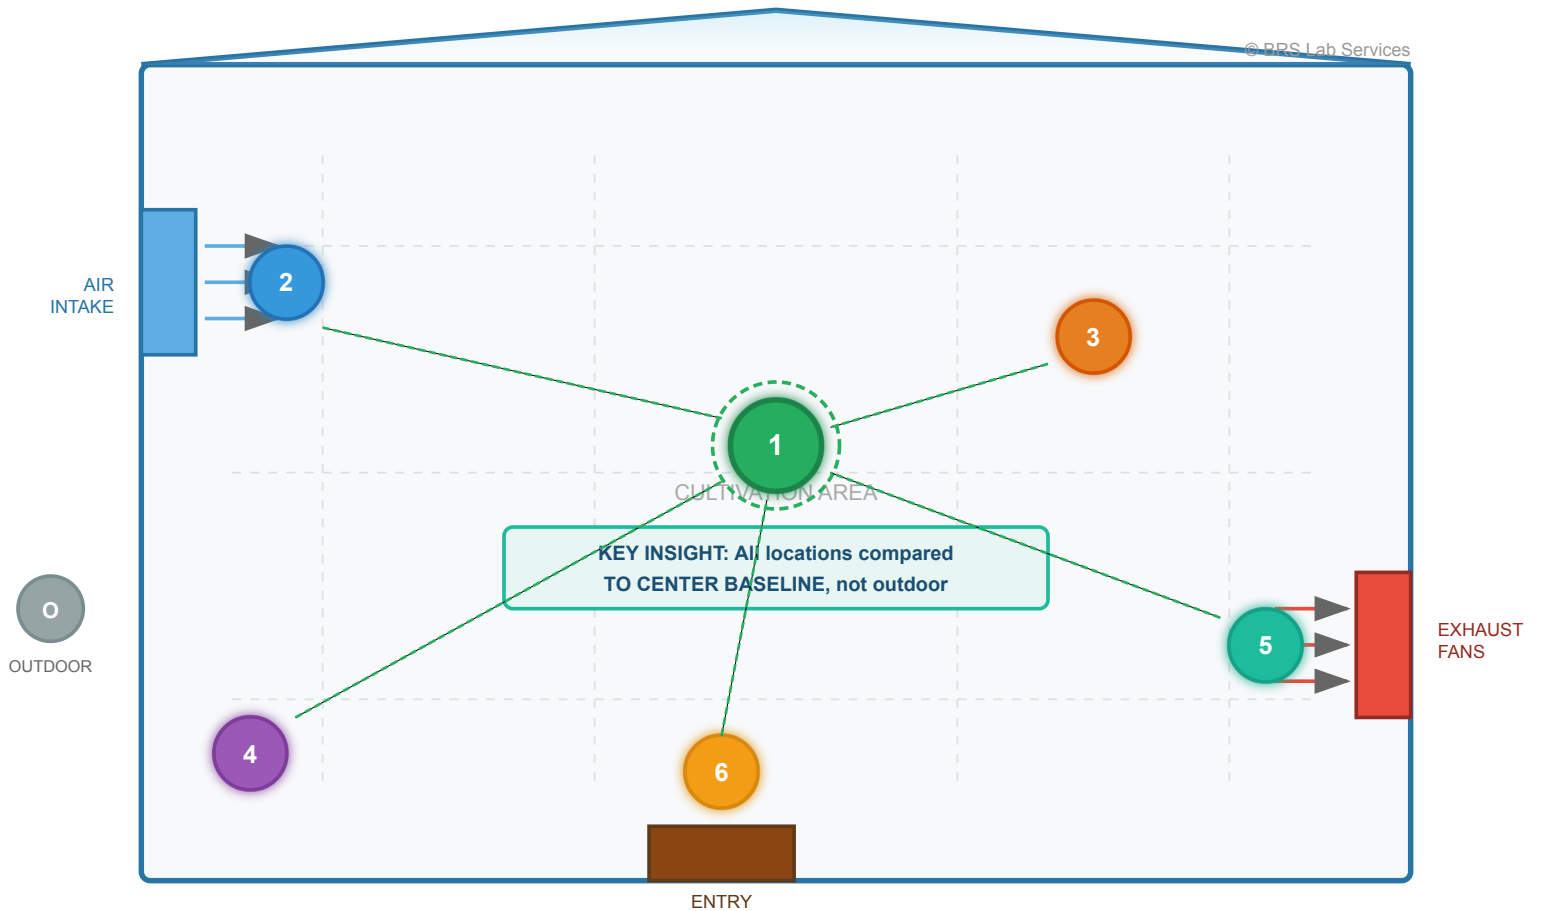

SAMPLING LOCATION LEGEND

- | | |
|--|--|
| 1 CENTER BASELINE — Your TRUE baseline (required) | 2 AIR INTAKE — Incoming contamination (required) |
| 3 PROBLEM ZONE — High-risk area (required) | 4 DEAD ZONE — Circulation check (recommended) |
| 5 EXHAUST — Well-mixed sample (recommended) | 6 ENTRY POINT — Human contamination (recommended) |