

26 x 48 Windbreak Assembly Instructions






Tools Needed

- 5/16 Drill
- 7/16 Wrench
- Pliers or Channel


Align front support using pre-drilled holes. The eyebolts and washers provided are intended for hand pull rope connection.



MADE IN U.S.A.

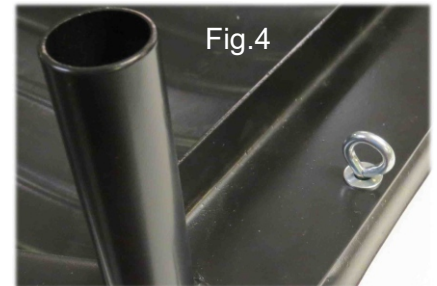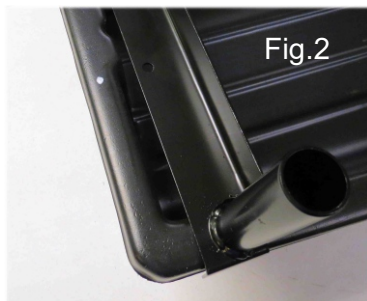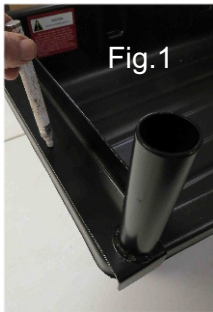

Align Rear support mark hole (fig. 1) Verify center of sled handrail (fig.2) Drill hole in sled (fig.3). Fasten with eyebolts and washers that are provided. (fig.4)

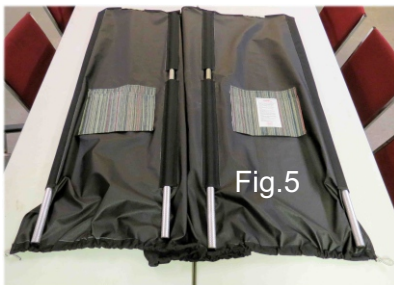

Very Important S-Hook is positioned at front of sled as shown in (fig.6)

(fig.5) Lay canvas on large flat area , and insert poles extended with large end at bottom near shock cord.
(fig. 6) With canvas in place insert poles into supports, leave canvas up as shown to aid in assembly.
(fig.(7) Pull canvas down around sled and pull shock cord together in front and hook with s-hook.

Care: Fabric may be washed with soap and water, hang up to dry completely. More detailed information can always be found at www.sportssled.com . Thank you for choosing Soroc Products.



4349 South Dort Hwy. Burton , MI 48439 - 810-233-0440 x1253