
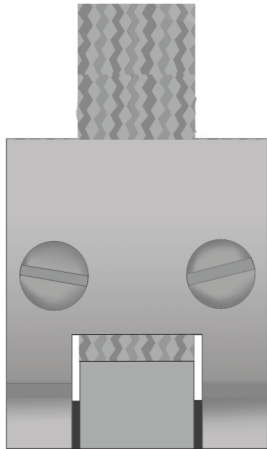


****SAFETY ALERT****

ALL TOKHEIM FLOATS
MUST HAVE A GROUND
BONDING STRAP
INSTALLED EFFECTIVE
SEPTEMBER 1, 2008.
PLEASE REVIEW ALL NEW
AND EXISTING PRODUCTS TO
ENSURE COMPLIANCE.

**TO ORDER RETRO-FIT STRAPS
PLEASE ORDER PART NUMBER
20 LVG-GROUND STRAP.**

FOR ADDITIONAL INFORMATION
PLEASE VISIT
WWW.TOKHEIMCO.COM



REMOVE THIS LABEL ONCE THE GROUND STRAP HAS BEEN INSTALLED