

Rahala Off-road Fire Extinguisher Bracket

For Nissan Patrol Y62 (with electric seats only)

Disclaimer:

Rahala off-road products are well-engineered, proudly manufactured in the UAE from quality materials using state of the art CNC machinery and quality coating.

Due to the unlimited driving challenges our customers are expected to take their cars to, Rahala Offroad does not offer any guarantee on this product once used, we are not liable for any concerns that may rise from improper fitment or use, or not performing periodic checks to this product or any accompanied changes to the vehicle.

For any feedback or suggestions please contact us at https://rahala-offroad.com/contact-us

We advise you to always drive safe, comply with regulations, and well maintain your vehicle.

Usage & Care Notes

For longer life, this bracket is powder coated, we highly advise against any drilling or changes in it, however if at any time the base metal at any area is exposed (intentionally or accidentally) we advise you to paint this area to minimize corrosion.

This bracket does allow you to fit extinguishers up to 35x11cm, many 2kg extinguishers are within these dimensions, physically check the extinguisher you will use, if it is too big try a different or smaller design.

Contents:

- Rahala Fire Extinguisher bracket
- 2 Velcro straps
- U-bolt (+2 washers + 2 nuts)
- 1x 10mm M6 Bolt (+2 washers + nut)

Tools Needed:

- 10 mm spanner from your vehicle tool kit
- Pliers from your vehicle tool kit (or a 10mm ratchet or spanner will be easier if you have one)





Installation:

Always wear proper personal protective equipment (Gloves, eye protection...etc) whenever using tools.

- 1. Remove the passenger seat lower center trim
 - a. Pull the outer side trim gently outwards to release the3 clips that connects the side and center trims



b. Squeeze the two clips on the inside of the center trim to release the trim from the seat metal frame




2. Put the U-bolt over the seat tube



- 3. Install the Rahala extinguisher bracket in place, as you do so, insert the U bolt threaded ends through the slot of the bracket
- 4. Thread in the two washers and nuts (By hand)



5. Partially remove the seat side trim by releasing the 4 clips in red circles

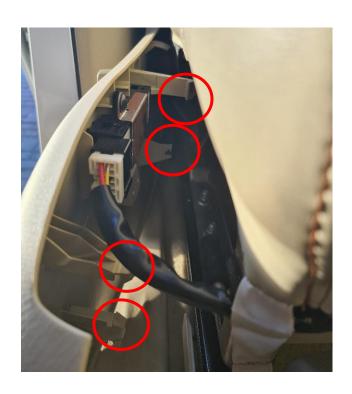

6. Attach the 10mm side bolt





7. Make sure that the bracket is resting properly on the two front sides of the seat frame
Tighten all 3 nuts, as soon as the U-bolt nuts get heavy stop tightening to avoid damage to the bracket



- 8. Reinstall the center trim, then the side trim, make sure all clips are in the right positions to avoid any damage
- 9. Use the Velcro straps to attach your fire extinguisher to the bracket, make sure it is as tight as possible,

If you are using a 1kg extinguisher you might need to trim the straps a little, use a sharp scissors to trim as little as possible of the soft side of the velcro. Please note that in this case it might be too short if you want to use to a bigger extinguisher in the future.



Stay safe