

Moon Flower Spirit Necklace



Moon Flower Spirit Necklace

Instructions by Joyce Trowbridge

Materials:

- 1 Lampwork Bead
- 1 TierraCast Charm/Pendant
- 1 TierraCast Bail
- 1 Crimp Cover
- 2 2mm Crimp Tubes
- 6 inches .019 Medium Soft Flex Beading Wire
- 3 feet 1.5mm Leather Coil

Tools:

- 1 Bead Mat
- 1 Crimper
- 1 Chain Nose Pliers
- 1 Wire Cutters



Step 1

Cut **6 inches of Medium Soft Flex Beading Wire**. String **1 Crimp Tube and Charm**, then go back through the Crimp. Use Crimping Pliers to secure the Crimp.



Step 2

String the **Lampwork Bead** onto both wires together. Let the Lampwork Bead cover the crimped crimp.



Step 3

String **1 Crimp** onto both wires together.




Step 4

String the **Bail** onto one wire, then bring the same wire back through the crimp. Pull wire to take up the slack and leave a nice loop at the bail.



Step 5

Use the Crimping Pliers to secure the crimp.

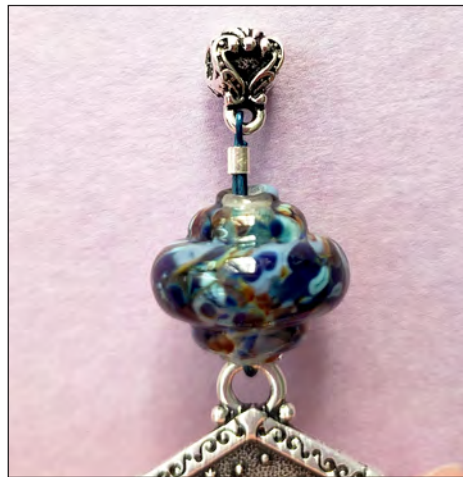

Step 6

Use Chain Nose Pliers to attach a **Crimp Cover** over the crimped crimp.




Step 7

String the **Leather Cord** through the Bail. Let the pendant slide to the *middle* of the Leather.




Step 8

Cross the two Leather ends over each other.

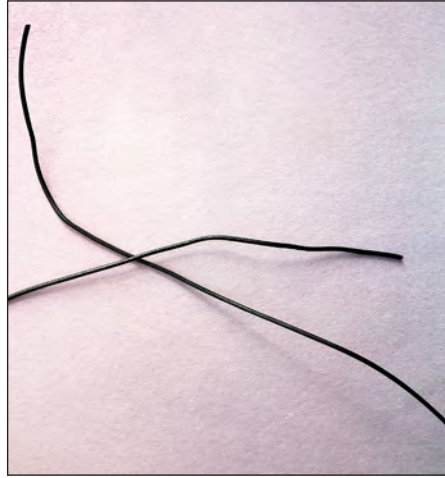


Step 9

With one hand, pinch the two leathers together where they cross. With the other hand, loop one end around and back behind the other cord.

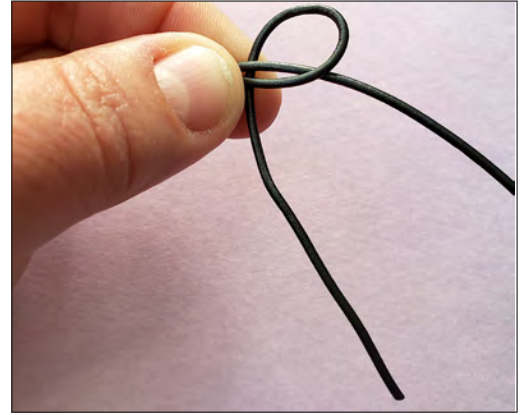


Step 10

Loop the same end once more around the other cord. The new loop should be on the left of the first loop.

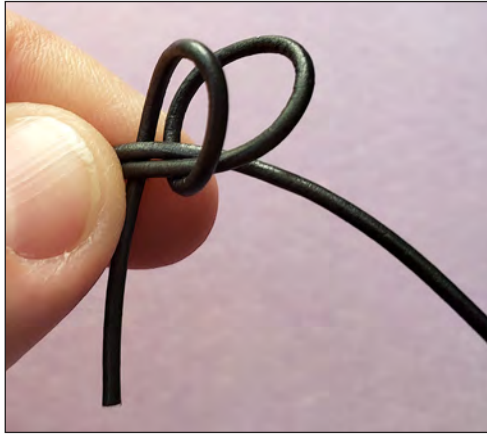


Step 11

Bring the same end through the two loops from left to right.

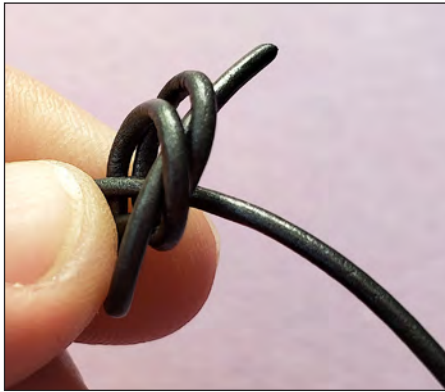

Step 12

Tighten the slide knot leaving a small tail. Knot should be able to slide over the other leather end.

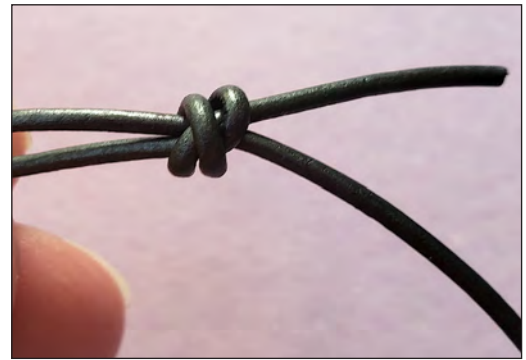

Step 13

Repeat Steps 9-12 to make a second slide knot with the other leather end.

