


## Screw Placement for PB-R Panel

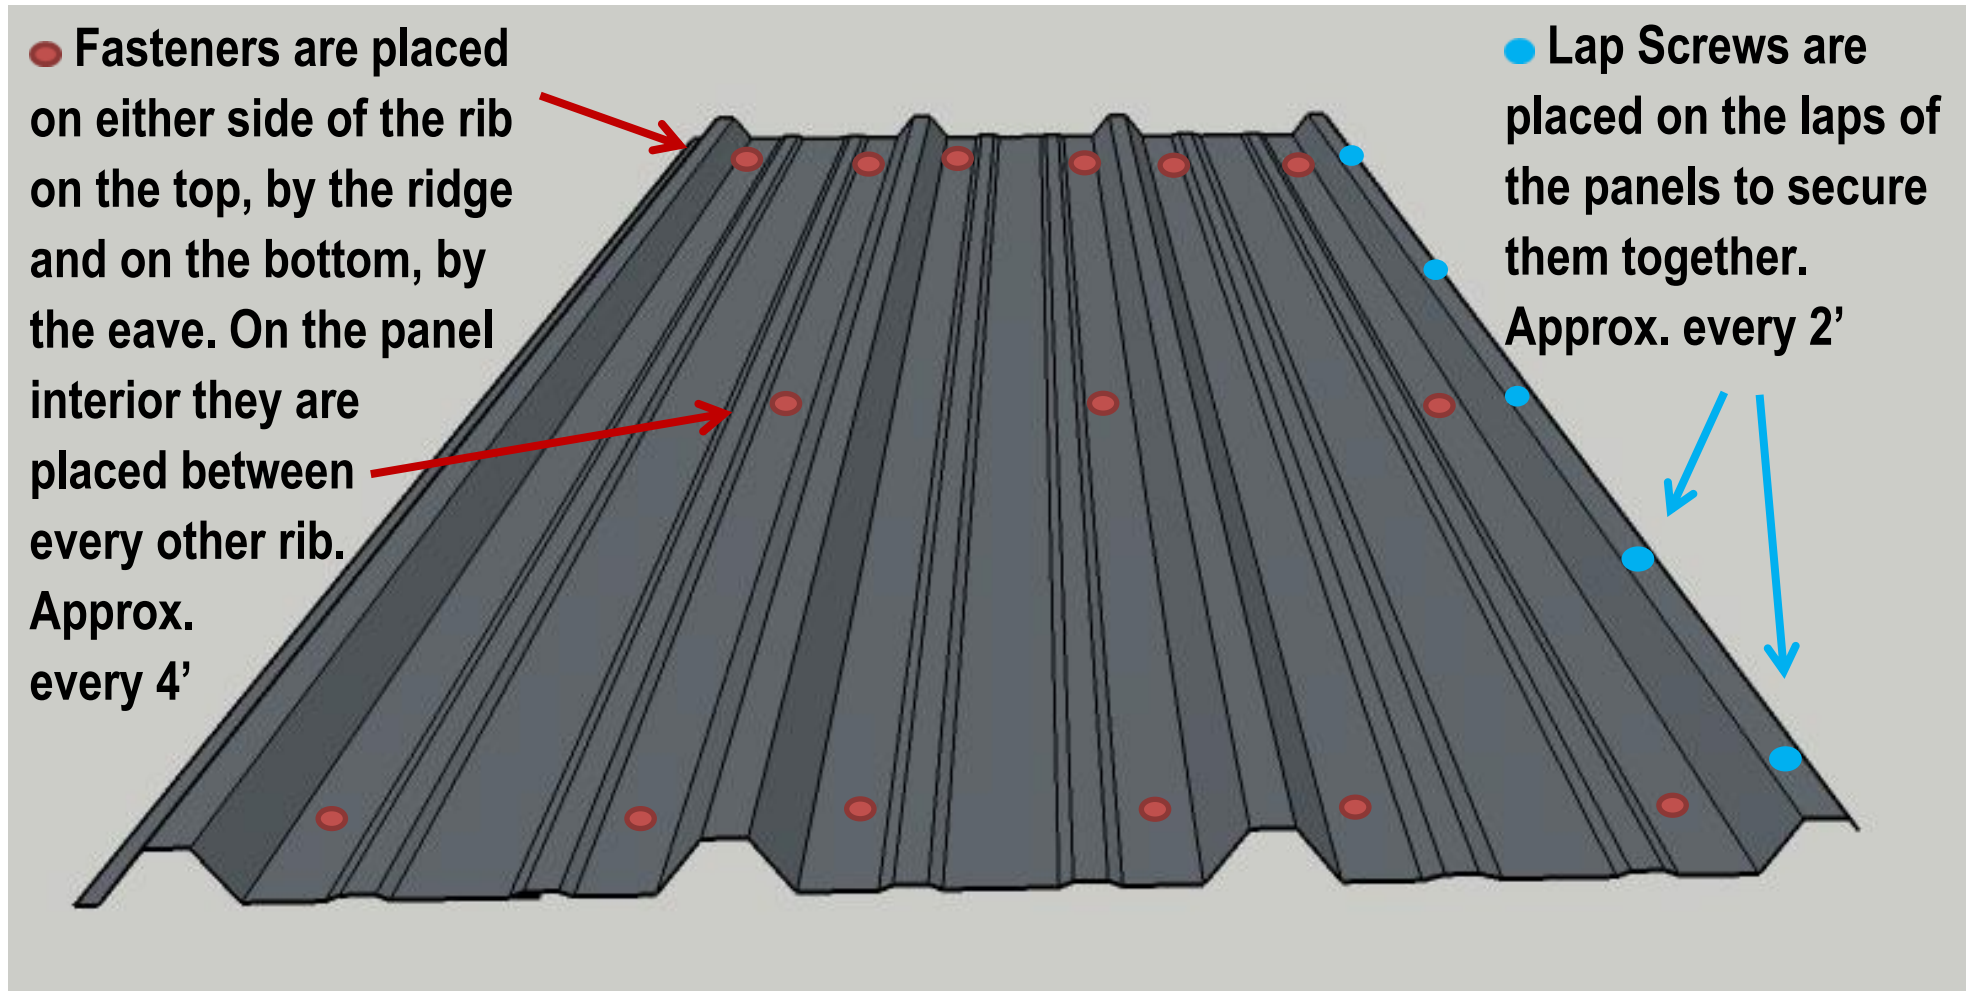

**Fastening:** If you want to pre-drill holes, use a cover sheet to prevent hot shavings to stick to your panels. Drive the fastener so that the washer is compressed securely against the metal. Do not overdrive the fastener as this may cause washer failure which can cause a leak.