


# Trim Locations

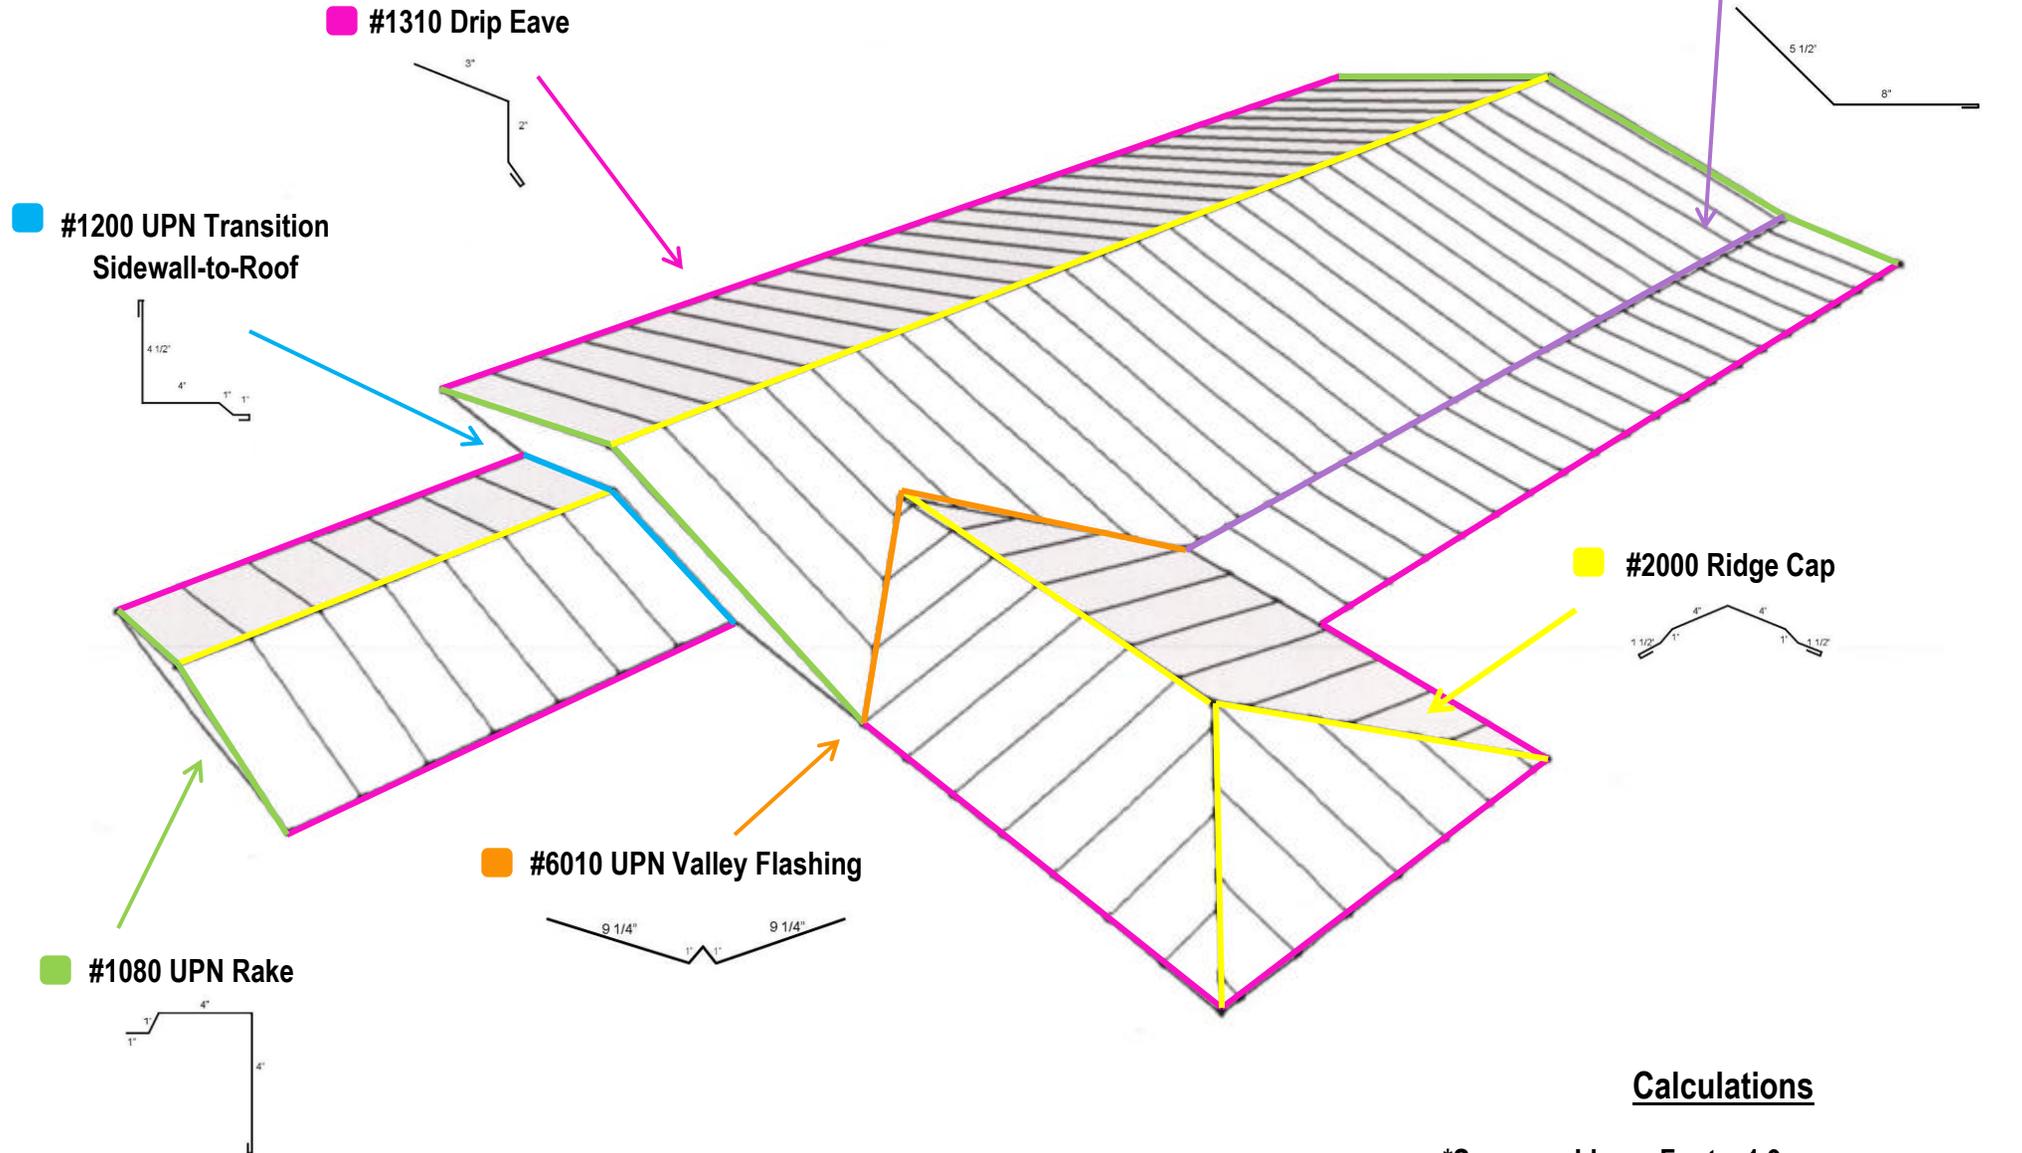

## Calculations

\*Screws = Linear Foot x 1.9

\*Laps = 1/2 the amount of your regular screws

\*Tacky Tape = Total Linear Foot /45