

STERNUM SLIDER REPLACEMENT

NEW GENERATION (1st Product SS19)

STEP 1

ALIGN NEW SLIDER AT THE BOTTOM EDGE OF THE PIPING WITH TAPERED END



STEP 2

START TOP EDGE OF CLIP AT AND ANGLE ONTO THE TAPERED PIPING AND SLIDE UP UNTIL IT IS FULLY ENGAGED ONTO THE PIPING



STERNUM SLIDER REPLACEMENT

OLD GENERATION

STEP 1

CRIMP THE BOTTOM EDGE OF THE PIPING TO CREATE A ~10 MM Flat SECTION ON THE PIPING



STEP 2


START TOP EDGE OF CLIP AT AN ANGLE ONTO THE TAPERED PIPING AND SLIDE UP UNTIL IT IS FULLY ENGAGED ONTO THE PIPING - **IF THIS DOES NOT WORK - TRY STEP 3**



STERNUM SLIDER REPLACEMENT OLD GENERATION

STEP 3

USE **4MM** FLAT-HEAD SCREWDRIVER TO OPEN THE PIPING CLIP AND STRETCH OUT THE OPENING

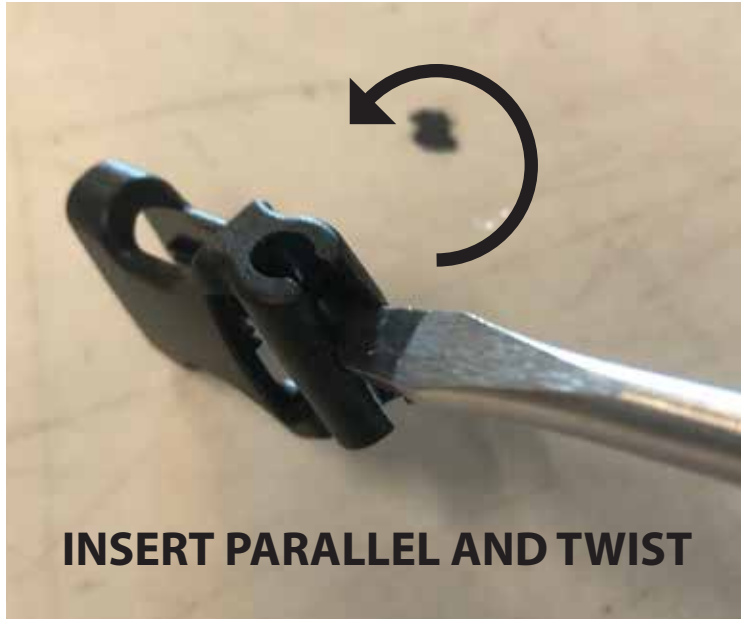

STEP 4

AFTER LETTING THE OPENING STRETCH FOR A MINUTE, REMOVE THE SCREWDRIVER AND WORK THE PIPING CLIP ONTO THE PIPING AND SLIDE UP TO THE SOLID PORTION OF THE PIPING

