

# Find a good flat surface to work on and lay a towel down for protection

1) **Open** your OBB. There are two parts. The sewn closed end (w/label) is the bottom.


2) **Lay** out the top and bottom parts so that the ends roughly line up with the ends of your board [Interior side up].

3) **Reverse** the ends of the top and bottom parts and engage the velcro that holds them together. You do not need to get this perfect right now, you'll tighten later.

4) **Slide** the tail of your board into the bottom pocket. **Tighten**.

*Your new OBB is machine washable (Medium heat dry)*

*A ScotchGuard® treatment after washing (and before first use) couldn't hurt either.*

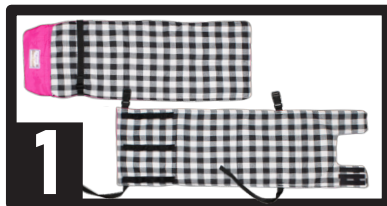

5) **Close** the open top end of the OBB over the nose of your board. Thread the free webbing through the open end of the male buckles. Close the *top* buckle and tighten.

6) **Flip** your board on its side and re-set the velcro as needed until your Original Board Blanket *stays closed but isn't straining the closures*. Close the center buckle.



*If you would like to watch a video of a known personality, demonstrating how to set up your OBB for the first time, scan and follow here .....*

