



MERA KI HAMMOCKS, LLC

JEEP JLU 4-Door Solo Hammock

Installation Guide

Designed and Manufactured in the Great State of TEXAS!

PARTS CHECKLIST

Before you begin, confirm that you received all parts listed below. If you are missing anything, contact Randall via email at hang@merakihammocks.com.

HAMMOCK COMPONENTS	QTY	NOTES
Hammock Body with Sleeve	1	The hammock will arrive fully assembled.
Delta Ring	2	Attached to hammock
ATTACHMENT POINTS & HARDWARE	QTY	NOTES
Front Bracket (Pat. 12696970)	1	Front Attachment Point
Rear Bracket (Pat. 12696970)	1	Rear Attachment Point
M8 Bolts; 65mm	2	For Front Bracket
M8 Bolts; 30mm	2	For Rear Bracket
M8 Nuts	2	For Front Bracket
SS Washers	6	For Front and Rear Brackets
Rubber Washers	6	For Front and Rear Brackets

INSTALLATION OVERVIEW

This guide covers three sequential installation steps. Complete these steps in order. Do not attempt the third step until the first two steps have been completed.

FRONT ATTACHMENT POINT (Est. Time ~ 6 min.)

Install the hammock bracket to the JEEP's A-pillar frame above the passenger window.

REAR ATTACHMENT POINT (Est. Time ~ 3 min.)

Install the hammock bracket to the inside of the JEEP's left C-pillar.

HANG YOUR MERAKI HAMMOCK (Est. Time ~ 1 min.)

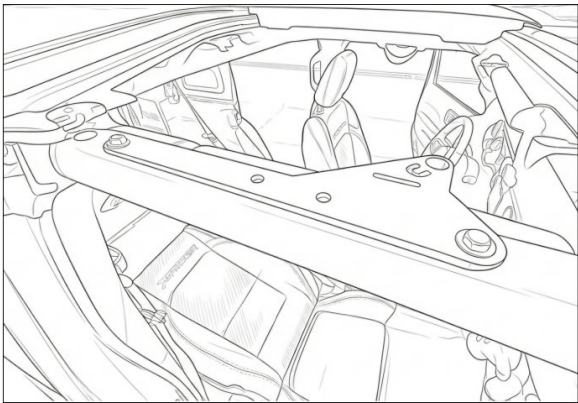
Connect the delta rings to the installed hardware.

Special Note: Before you begin, lay down the second row of seating. Then remove the headrest from the front passenger seat. The driver and front passenger seats should be moved all the way forward. The front passenger seat should then be fully reclined.

Tools Required: You will need two 13mm wrenches.

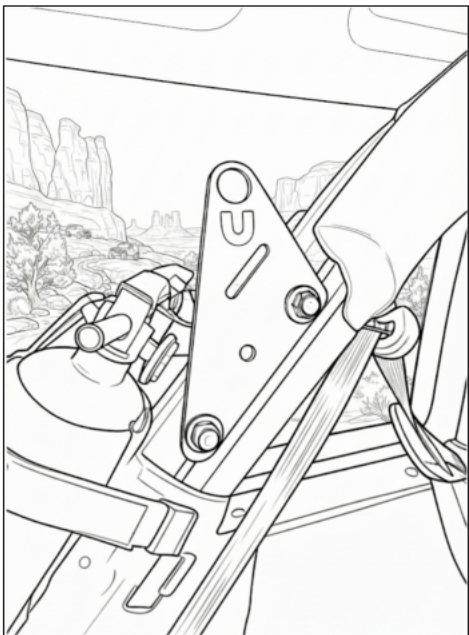
Designed and Manufactured in the Great State of TEXAS!

FRONT ATTACHMENT POINT

	1	REMOVE ROOF SECTION. Remove the modular roof panel above the front row of seating. Refer to the Jeep owner's manual for guidance.
	2	LOCATE MOUNTING HOLES. Identify the two pre-drilled holes in the frame above the front passenger-side window.
	3	ASSEMBLE HARDWARE ONTO BRACKET. Place a stainless steel washer onto both 70mm M8 bolts. You will then place this assembly through the appropriate holes in the bracket. From the other side of the bracket, you will place a rubber washer, securing the bolts to the bracket.
	4	ATTACH BRACKET. Place both bolts into the appropriate holes in the frame. From the bottom of the holes, you will place a rubber washer and then a stainless steel nut onto both 70mm M8 bolts. Hand tighten the nuts.
	5	FINAL TORQUE. You will use two 13mm wrenches to fasten each nut and bolt assembly. Torque both nut and bolt assemblies to 8-10 ft/lbs.

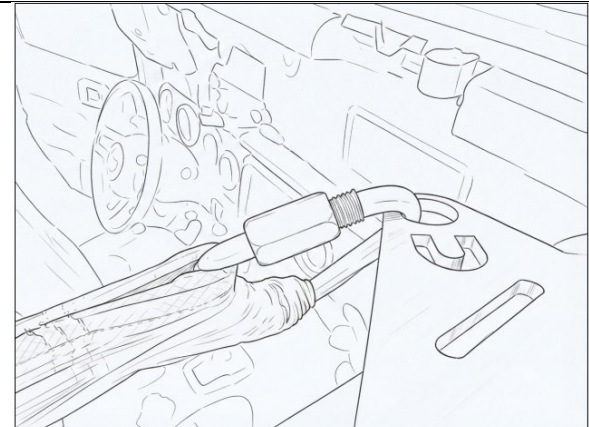
Warning: Under-torqued bolts may shift under load. Use a torque wrench if you have one.

REAR ATTACHMENT POINT

	1	DO NOT REMOVE ROOF. You will be able to install the rear attachment point without removing the roof.
	2	LOCATE THE NUT INSERTS. Identify the factory installed nut inserts on the inside of the left C-Pillar in the cargo area.
	3	ATTACH BRACKET. Thread the M-8 bolts into the nut inserts until hand tight.
	4	FINAL TORQUE. Using a 13mm socket wrench, torque both bolts to 8-10 ft/lbs.

Designed and Manufactured in the Great State of TEXAS!

HANG THE HAMMOCK – FRONT ATTACHMENT POINT

	1	OPEN THE GATE ON THE DELTA RING. Rotate the barrel nut counter-clockwise to open the gate on the delta ring.
	2	CONNECT TO BRACKET. Pass the open delta ring through the hole in the hammock bracket (i.e., front attachment point).
	3	CLOSE AND LOCK. Rotate the barrel nut clockwise until fully tight.

Warning: Failure to fully tighten the barrel nut may cause the Delta ring to fail.

HANG THE HAMMOCK – REAR ATTACHMENT POINT

	1	OPEN THE GATE ON THE DELTA RING. Rotate the barrel nut counter-clockwise to open the gate on the delta ring.
	2	CONNECT TO BRACKET. Pass the open delta ring through the hole in the hammock bracket (i.e., rear attachment point).
	3	CLOSE AND LOCK. Rotate the barrel nut clockwise until fully tight.

Warning: Failure to fully tighten the barrel nut may cause the Delta ring to fail.



Designed and Manufactured in the Great State of TEXAS!

FINAL SAFETY CHECK

Complete every step below prior to using your Meraki Hammock. This checklist should be re-verified each time your Meraki Hammock is set-up after being stored and after off-road use.

FRONT ATTACHMENT POINT

- Both M8 bolts are properly torqued to 8-10 ft/lbs; use a torque wrench if available.
- Hammock bracket sits flush against the frame; the rubber washer between the bracket and the frame.
- No visible cracks or deformation in the bracket.

REAR ATTACHMENT POINT

- Both M8 bolts are properly torqued to 8-10 ft/lbs; use a torque wrench if available.
- Hammock bracket sits flush against the frame; the rubber washer between the bracket and the frame.
- No visible cracks or deformation in the bracket.

DELTA RINGS

- Barrel nut is fully tightened clockwise.
- Gate does not open under downward force.
- Delta ring seats fully through the bracket hole of the front attachment point.
- Delta ring seats fully through the bracket hole of the rear attachment point.

Warning: If the barrel nut is not tightened the delta ring is subject to fail.

BEFORE EACH USE

- Inspect hammock for tears or fraying at attachment points.

Warning: If tears or fraying are present, discontinue use.

SPECIAL NOTE

- To prevent misplacing the sleeve, keep the sleeve on the hammock when fully deployed.



If you have questions, email Randall at hang@merakihammocks.com.

MERAKI HAMMOCKS, LLC

LORENA, TX

Not responsible for improper installation or use.

Designed and Manufactured in the Great State of TEXAS!