



ASSEMBLING THE GRAB BAR


www.manplow.com/assembly-instructions



Your handle leg should be predrilled to receive the Grab Bar. If you purchased your MANPLOW prior to 2018, you will have to drill a 9/32" hole. We place the predrilled holes 19" from the bottom end of the handle leg (leg, not the blade).



www.manplow.com/assembly-instructions

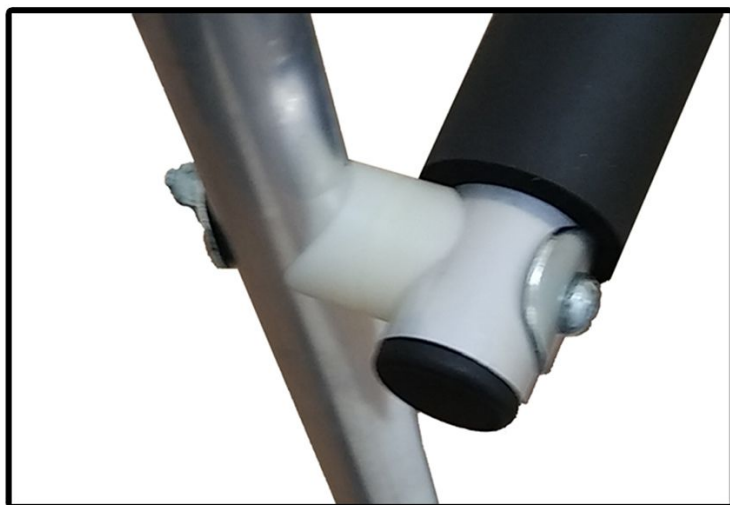

Curved Washer


**Saddle Spacer
(place flat sides together)**

Curved Washer

Bolt



Lock Nut

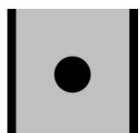

Handle Leg



Grab Bar



Tighten firmly