




ASSEMBLING THE THROW BAR

www.manplow.com/assembly-instructions

1. Attach one Cross Bar Connector to blade side (front) of U Handle. Use hardware sequence (below). Hand Tighten!

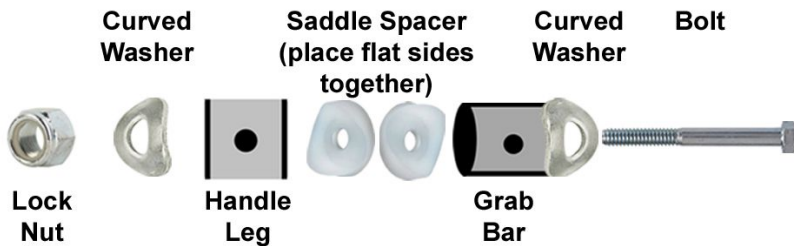

www.manplow.com/assembly-instructions

2. Slide Cross Bar over attached Connector and insert 2nd Connector into the other end of the Cross Bar.

Throw Handle

Cross Bar

3. Attach second Connector to U Handle. Tighten both connectors firmly with tools.

Cross Bar Connector (2)

4. Using Throw Handle Hardware Package, attach Handle to Cross Bar. Tighten firmly with tools.

DO NOT OVER TIGHTEN.

Connector to Handle

