

INSTALLATION INSTRUCTION mod. ST-006FE



STONE, Ivan Stojšić s.p.
Lojzeta Hrovata 5
SI - 4000 Kranj
VAT: SI 81933479



Step 1: Lubricate axle with oil or grease. Put the wheel on the axle. Insert washer M-50 and safeti pin .




Step 2: Lubricate axle with oil or grease. Put the washer M-12 . Push the axle through a plastic bearing. Put the washer M-12. Turn the nut M-12 to the end, then reverse by about half of a circle, so that the wheel spins normally.



Step 3: Mount the supplied pedal on the frame



Step 4: Mechanical fuse is used against self closing (mandatory use)

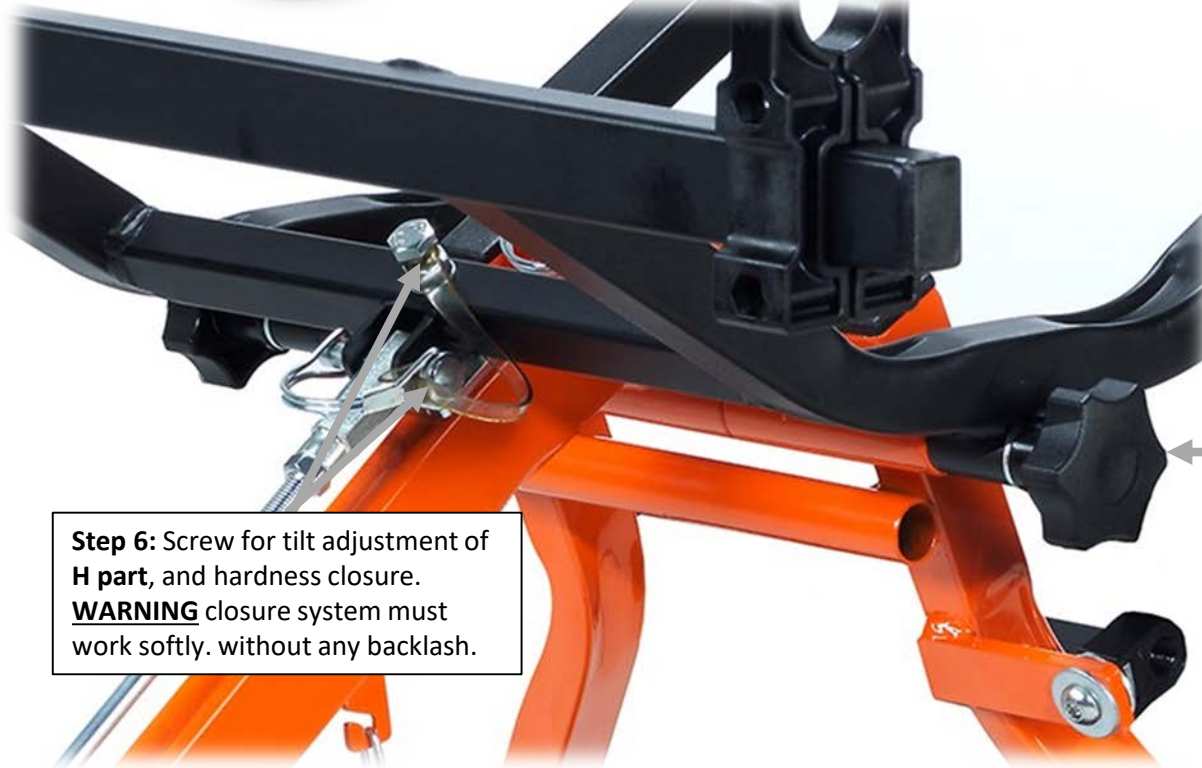

Step 6: Screw for tilt adjustment of H part, and hardness closure. **WARNING** closure system must work softly. without any backlash.

Step 5: Tighten the H part to the Trolley with star screw

Note: The trolley is designed for the transport of go karts up to 120 kg. FORRBIDEN TO LOAD HEAVIER OBJECTS. (Tents, equipment, etc.). SITTING IN KART WHEN ON TROLLEY IS PROHIBITED !!!



STONE, Ivan Stojšić s.p.
Lojzeta Hrovata 5
SI - 4000 Kranj
VAT: SI 81933479